



**BATTERY OPERATED RIDE ON CARS
MADE IN INDIA**



IS 15644:2006



CM/L-8800139014

Styles and colours may vary

PRODUCT MANUAL FOR
MKS-004 / MKS-004D
MKS-005 / MKS-005D
MKS-006 / MKS-006D

WWW.MEKASHI.TOYS

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and it's rider.

Specification

Suitable age:	2+ Years
Battery:	6V 4.5AH x2
Charge time:	8~12 hours
Charge:	Input: depend on local voltage Output: DC12V500mA or DC12V1000mA
Load capacity:	Under 35kg
Size of car:	93 x 58 x 45 cm
Speed:	3~5 km/h



BATTERY INFORMATION


- Non-rechargeable batteries are not to be recharged.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Remove rechargeable batteries from the product before charging.
- Do not mix old and new batteries. Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment, anode to anode, cathode to cathode.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage this product. Dispose of batteries safely.
- Never short circuit the battery terminals.

Parts List




Car Body, Windscreen, 2 front wheels, 2 rear wheels, steering wheel, seat, seat lock, 2 side view mirrors, charger, remote control, 4 wheel caps, screws, nuts and washers.

- Assembly tools required:

Pliers & Screwdriver
(Not included)



NOTE: Some parts shown are assembled on both sides of vehicle

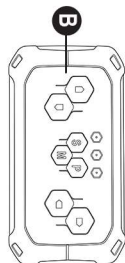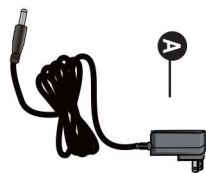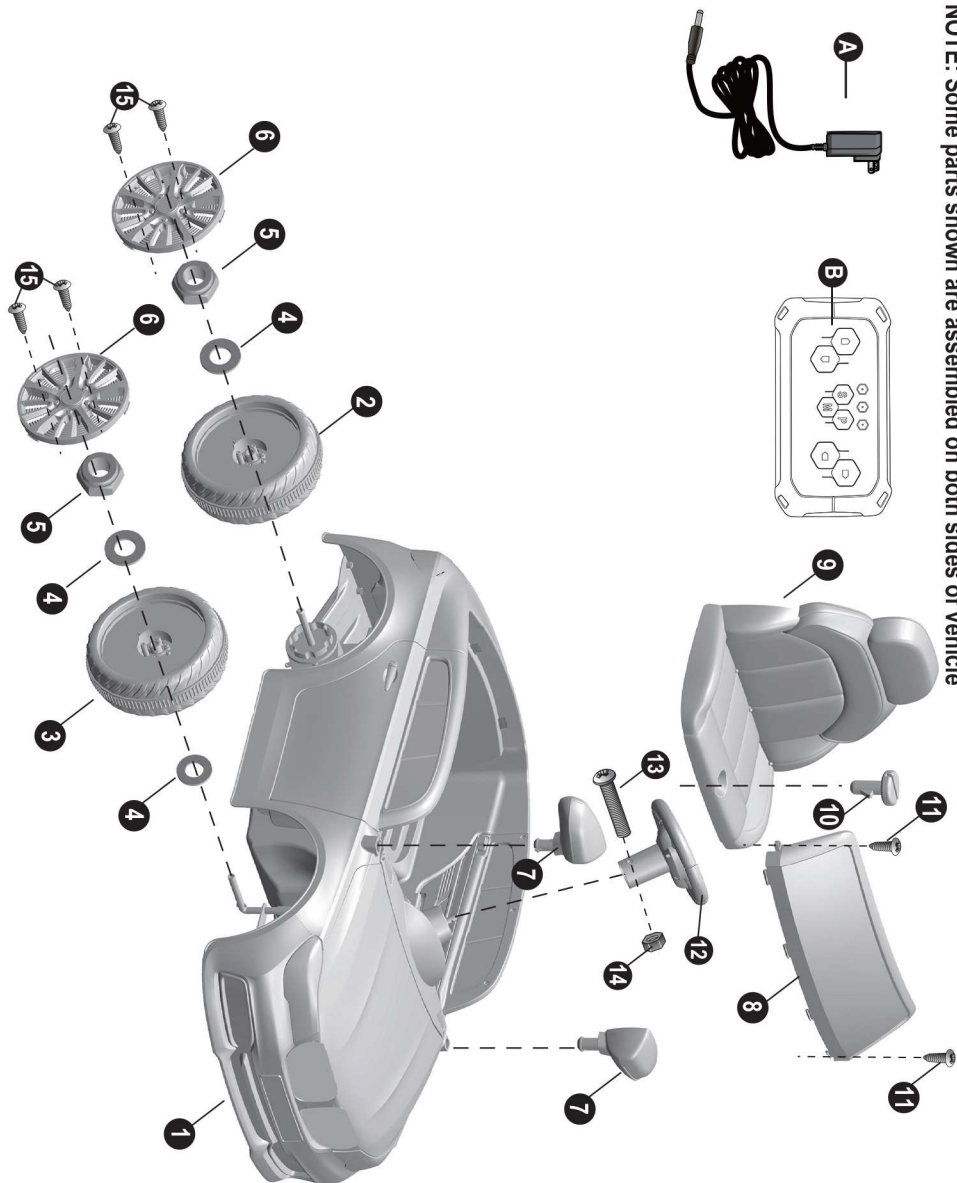



PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. ADULT DIRECT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes, always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 12 months due to its maximum speed; Maximum user weight is 35 kgs.
- This toy has no brake.




WARNING:

- **CHOKING HAZARD!**
- **ADULT ASSEMBLY REQUIRED.**


Rules for Safe Riding

- Keep Children within Safe Riding Areas:
 - Never use in roadway, near motor vehicles, on lawn space, on or near steep inclines or steps, swimming pools or other bodies of water;
- Use the toy only on flat surfaces. Such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- Do not let any child touch the wheels or be near them when the car is moving .
- This vehicle has seat belts. Please instruct children how to tie the safety belt before using, guarantee the security.

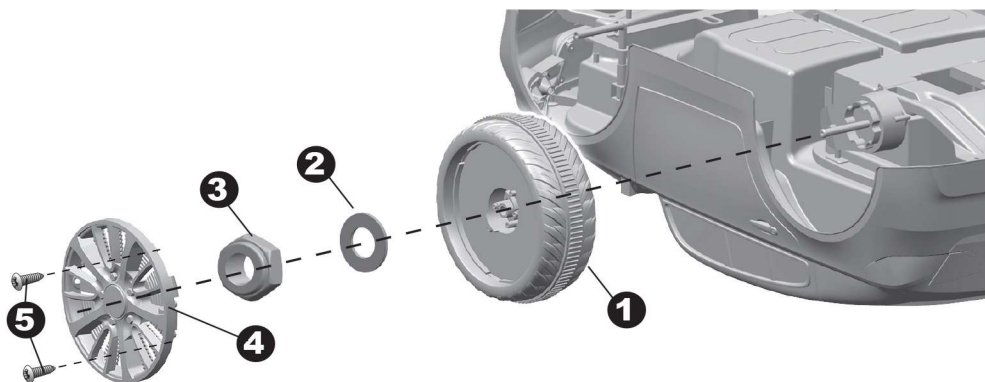


Turn over the vehicle body.

1. Slide the driving wheel onto the rear axle from Left Side. ("R" labeled gear box should be fit to the "R" side of vehicle body; "L" labeled gear box should be fit to "L" side of vehicle body)
And keep the driving wheel match with the gear box.
2. Slide the $\varnothing 10$ washer onto the rear axle.
3. Tighten a lock nut onto the rear axle with a spanner.
- 4-5, Fit the wheel cover to the wheel and tighten two $\varnothing 3 \times 10$ screws.

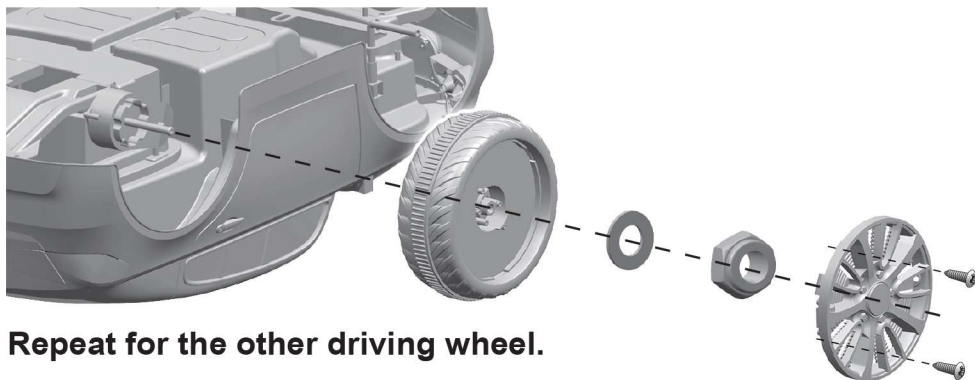


Repeat for the other driving wheel.

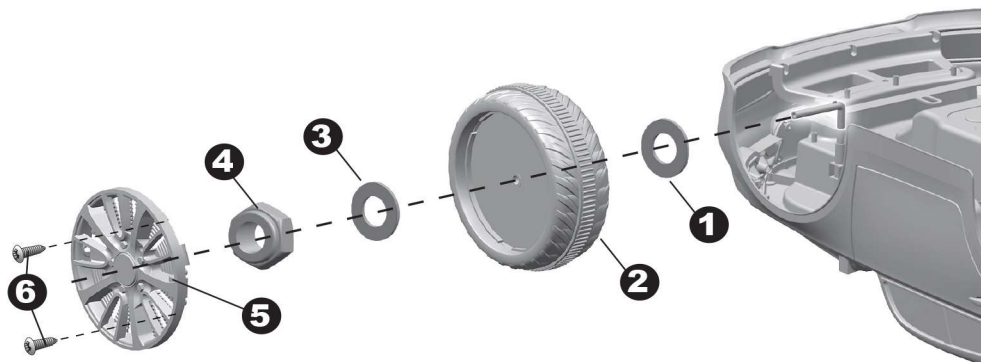


1. Slide a $\Phi 10$ washer onto the front axle.
 2. Slide a normal wheel onto the front axle.
 3. Slide the other $\Phi 10$ washer onto the front axle.
 4. Tighten a lock nut onto the rear axle with a spanner.
 - 5-6, Fit the wheel cover to the wheel and tighten two $\Phi 3 \times 10$ screws.
- Repeat for the other side.

7. Insert the tabs on the windshild into the slots on the front vehicle. And push until you hear it "snap" into place.

8. Tighten two $\Phi 4 \times 10$ flat head screws to secure it.

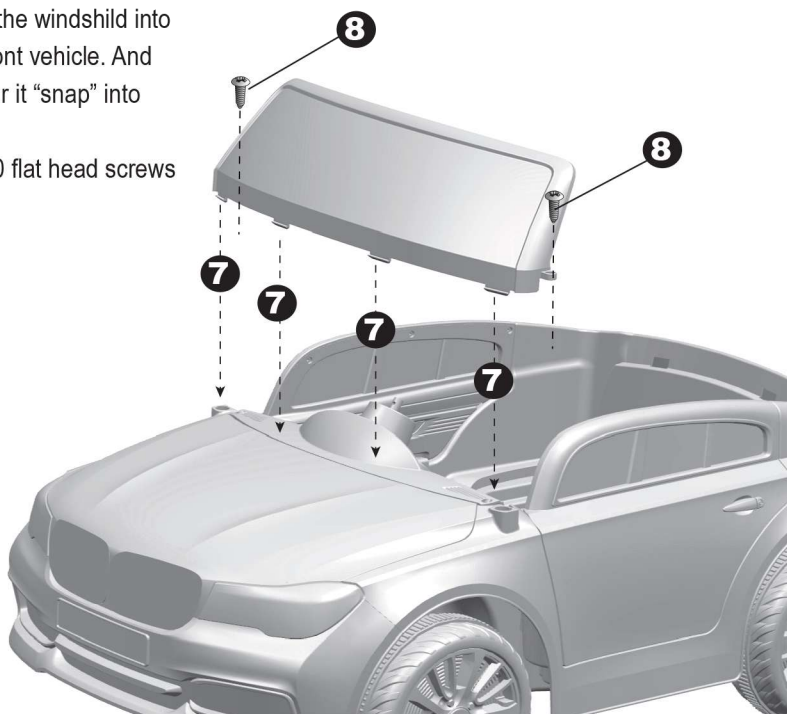


Attach the Steering wheel & View Mirrors **E**

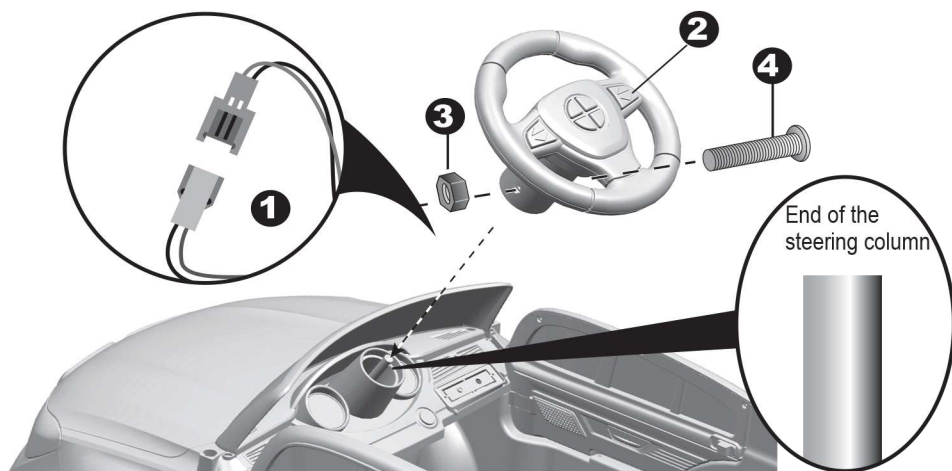


1. Plug the sound unit connector in the steering wheel into the connector in the vehicle body.
2. Fit the steering wheel to the end of the steering column.
3. Line up the holes in the steering wheel with the hole in the steering column, insert the M5x40 machine screw.
4. Fasten a nut on the opposite end of the screw with a screwdriver.
5. Insert the tabs of the mirror into the hole in the vehicle body. Push until you hear it “snap” into place.
6. Repeat for the other view mirror.



Connect the Power Supply

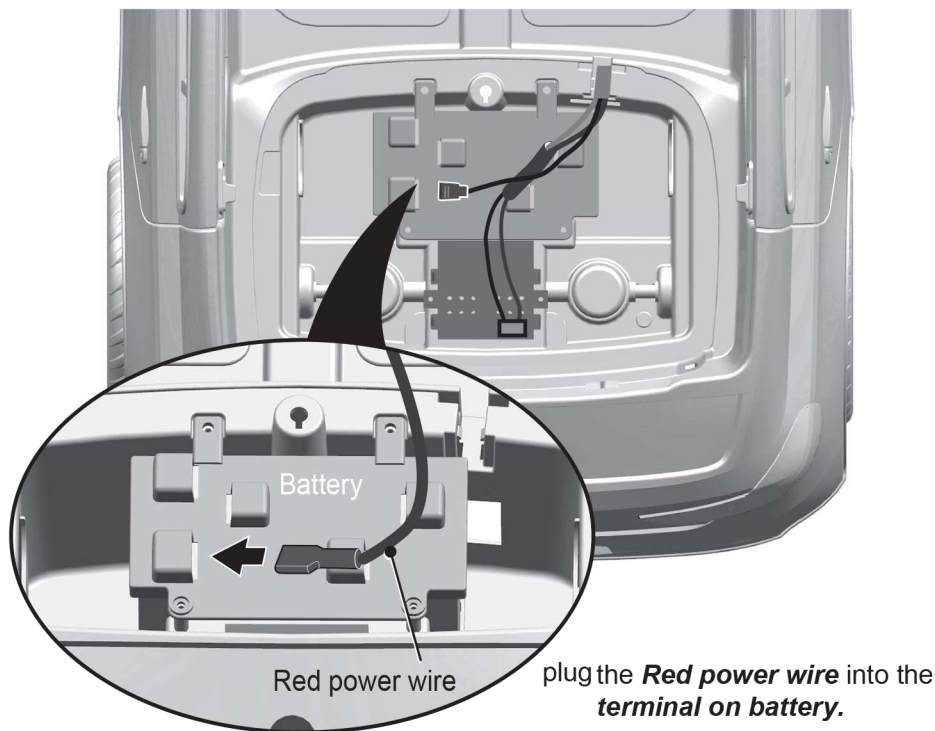


Using the door lock

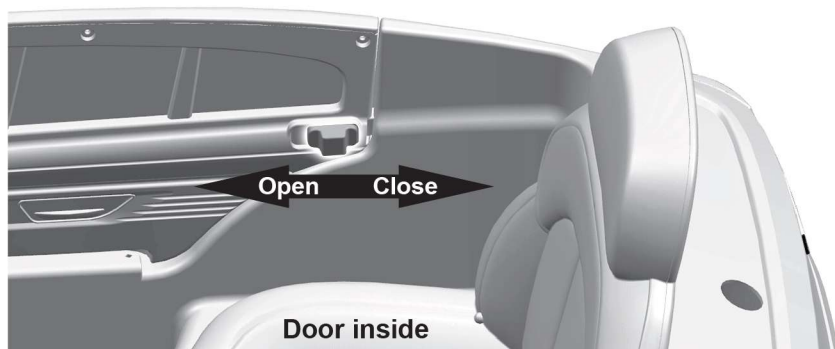

NOTE:

Please close the door and push it back to lock the door when riding for safety consideration.

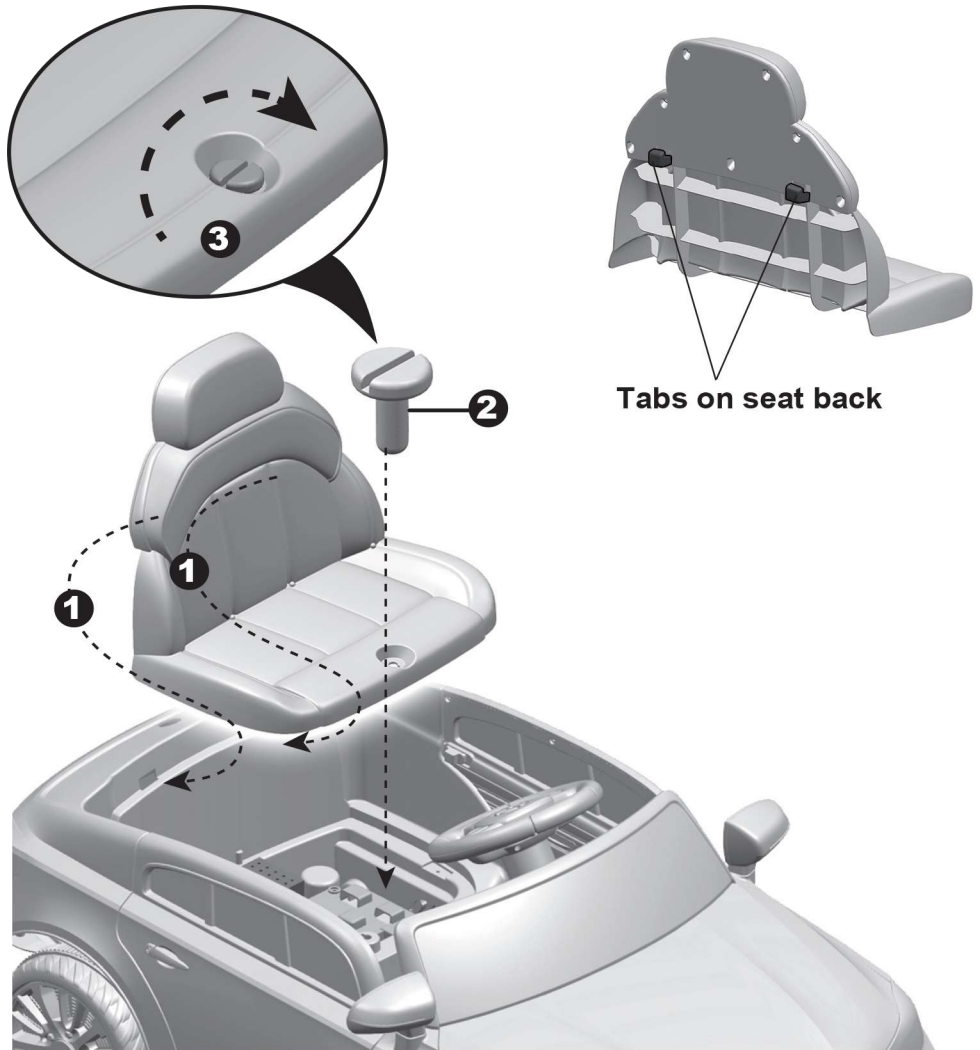


1. Fit the tabs on seat back into the slots on the vehicle body.
2. Fit the seat lock through the hole on the seat and into the hole on the vehicle.
3. Make the seat lock a quarter turn to lock it.


Lock or unlock using a coin to easily operate the lock

**IMPORTANT!**


Always stop vehicle when changing the speed or direction to avoid damage the gears and motor.

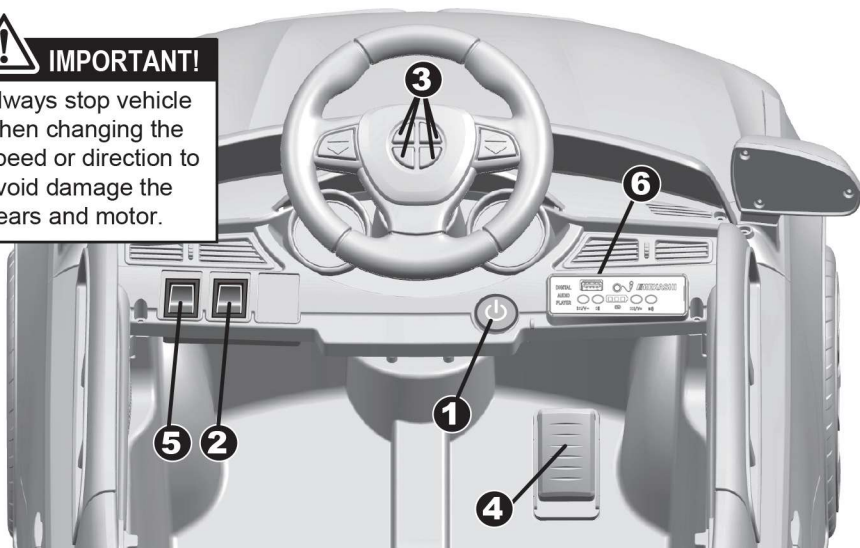

1. **Power Switch:** Turns the vehicle on and off.
2. **Forward/Reverse switch:** Changes the direction that vehicle moves from forward to reverse.
3. **Sounds buttons:** Press for sounds playing.
4. **Foot pedal:**
 - To move the car, press the pedal down.
 - To brake or slow down, release pressure from the pedal.
5. **Swing function(if equipped):** Operate the vehicle to kiddie car.
6. **Mp3 player:**

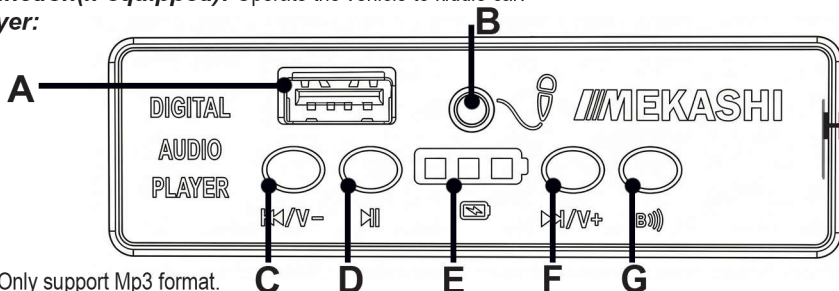

- A. **USB slot:** Only support Mp3 format.
- B. **Auxiliary input:** Allow the audio from your portable music player or phone to be played through the vehicle speakers.
- C. **Previous / Increase volume:** Long press for increasing the volume.
- D. **Play / Pause:** Playing and pausing the music.
- E. **Battery indicator:** All 3 lights glowing means battery full.
- F. **Next / decrease volume:** Long press for decreasing the volume.
- G. **Bluetooth mode:** short press to activate the bluetooth mode and you will hear a bell sound. Search for "HL01" on your phone, pair & play music. Press the button again to deactivate the bluetooth mode.

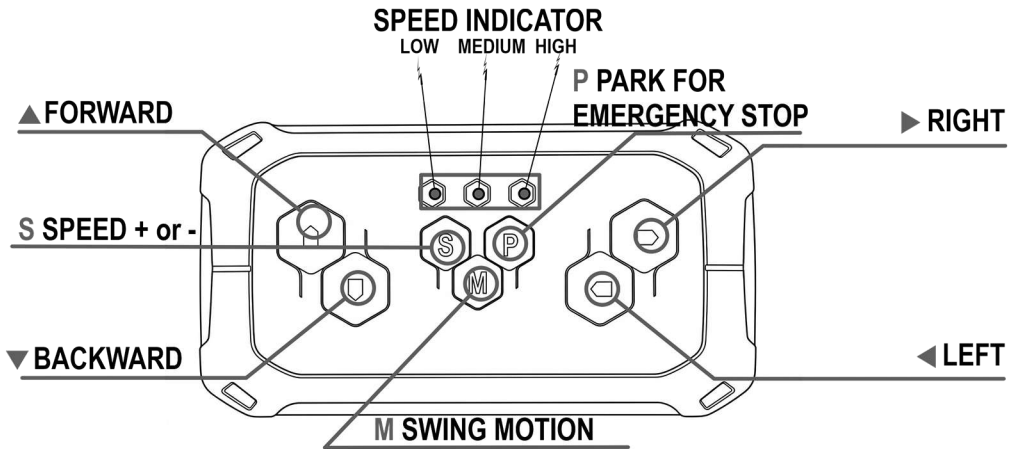

ASSEMBLY

Lift the battery compartment door on the back of the controller and insert two AAA(LR03) batteries.


NOTE: This product did not included the batteries.

Follow the battery information on page 1.

1. **M (SWING BUTTON):** Press the button to activate swing mode in the car. the car will move back and forth. Press it again to stop the swing motion.
This remote connects automatically to the car even when you replace the batteries, in rare case where the remote fails to connect automatically follow the steps below-
Keep the car turned off. Long press the 'M' button for 3 seconds, and the speed indicator flashes. Then power on the vehicle, the speed indicator light becomes static and means the connection is successful. If the speed indicator gives no response, means the connection has failed. Replace the battery and retry.
2. **P (BRAKE/PARK BUTTON):** Press the button to stop the vehicle, press it again to release the brake.
3. **S (SPEED SELECT BUTTON):** The switch operates the vehicle in low, medium or high speed as indicated by the speed indicator lights.
NOTE: The vehicle is designed to operate in low speed only while in reverse.

NOTE:

- Leave the remote controller idling for about 10 seconds, it will shut down automatically.
- Repeat step 1 when you replace the batteries of the remote controller.

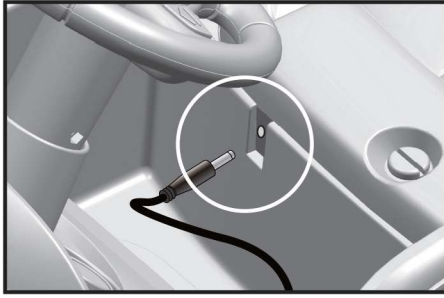

- The POWER SWITCH must be turned in **OFF** position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.

1. Plug the charger port into the input socket.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

- It is parents' responsibility to check main parts of the toy before using. Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- **Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.**
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact customer care.
	Battery is dead	Replace battery, contact customer care.
	Electrical system is damaged	Contact customer care.
	Motor is damaged	Contact customer care.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact customer care.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact customer care.
	Battery is old	Replace battery, contact customer care.
	Vehicle is overload	Reduce weight on vehicle. Maximum user weight is 35 kgs.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions ,see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact customer care.
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact customer care.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use Your New Vehicle>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact customer care.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact customer care.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact customer care info@mekashi.toys**

WARRANTY INFORMATION

This is a toy and warranty does not cover any breakage or wear and tear of any part. **Manufacturing defects** have to be reported within 10 days of purchase of the product for free part replacement.

Charger carries 6 months warranty but warranty void if charger is found to be damaged due to short circuit..

Battery carries 2 months warranty. Warranty void if battery is found to be short circuited.

Gear box carries 6 months warranty. Warranty void if damage is caused due to dirt and water entering the gear box.

Remote control does not come with any warranty as it will not work only if the user drops it on the floor.

Controller/receiver in the car comes with 6 months warranty. Warranty void if it is found to be short circuited.

All decisions are at the discretion of an authorised engineer from Mekashi directly. The engineer will examine the item through video call. If any part is found eligible for free replacement then the part will need to be returned by the customer at their own cost to MDK Enterprises, C-148 Hosiery Complex, Phase-2 Extn., NOIDA-201305, UP.

For online technical assistance please share the below information on the customer care numbers given below;

- 1) Short video of the issue you are facing,
- 2) A clear picture of all the wires under the seat,
- 3) Invoice copy

Customer care:

Email: info@mekashi.toys

Phone:

+91 9599718459

+91 8826995537

WhatsApp:

*(calls will not be entertained
on the numbers below)*

+91 9971974335

+91 9319744334

WWW.MEKASHI.TOYS/PRODUCT-TUTORIALS

Scan QR for
Assembly Video



Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.

Customer Care Contact:

MDK Enterprises

C-148 Hosiery Complex, Phase-2 Extn., NOIDA-201305, Uttar Pradesh, India

Email: info@mekashi.toys ; mail@masoomtoys.in

Phone: +91 9810344926

Website: www.mekashi.toys