

User guide - Njord Fish Feeding



Contents

General description	3
How to start feeding to a tank	4
Fish tanks	5
Overview	5
Detailed description	6
Adjusting the view	8
Feed table settings	8
Feeder popup	9
Custom time curve popup	10
Custom time curve	10
Feed profiles	12
Calibration admin	13
Feed tables	14

General description


Njord Fish Feeding is a feed system made to control dosing of feed to fish tanks. It utilizes data from a feed table combined with data from the fish tanks and calibration data for each feeder to calculate and control the amount of feed being dosed into each tank per day. The system can store calibration data for many different feed types, so it's easy to switch between them after having calibrated the feeders once. The system can dose the feed evenly over 24 hours or use custom feed distribution and feed profiles to customize the feeding throughout the day. Feed distribution, feed profiles and feed types can be adjusted individually for each tank.

The system depends on manual adjustments of feed factor and activity factor in each tank from users to achieve the best possible result and avoid inefficient feeding.

How to start feeding to a tank

1. Confirm that the following settings are correct:
 - Tank feeding is set to paused to avoid dosing feed before it's ready.
 - Verify that the correct feed tables have been selected for the department.
 - Verify that all feeders have the correct feed type calibration selected and have correct settings for minimum runtime & desired interval. Also verify that the feed delivery system can provide selected feed type to the tank. See separate document for assistance with calibrating feeders if required.
 - Verify that population and average weight of fish in the tank is correct. Also verify settings for feed factor, activity factor and recalculation time.
 - Verify that feed distribution and feed profile settings match the desired behavior, and that custom feed distribution is activated if it's going to be used.
2. Verify that equipment is ready to start. This means verifying that feeders are set to automatic control with any safety switches/emergency stops in operational positions, and that the feed delivery system to the tank is ready to provide the correct feed type.
3. Either set «base feed» manually for the first day or change the recalculation time to current time to trigger an automatic calculation based on biomass data (remember to set the recalculation time back to desired settings afterwards).
4. The fish tank is now ready to start feeding. Set the feeding control from paused to in operation when you're ready to start feeding to the tank.

Fish tanks Overview

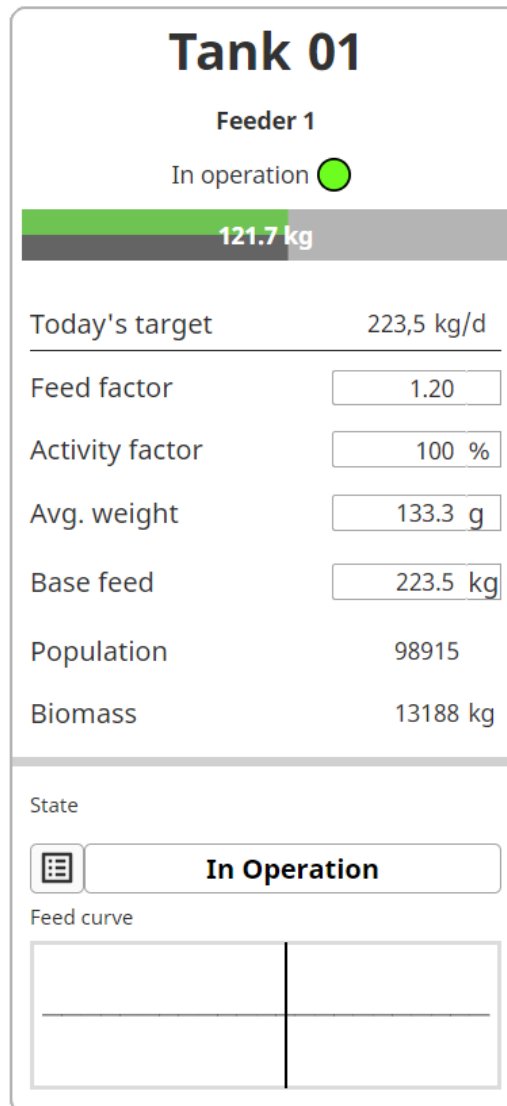

The overview card of a fish tank shows information and parameters related to the feed control. The data being displayed can be adjusted by each system user via the side menu. Values with black frames can be adjusted if the user has sufficient access rights. Clicking the feeder graphic at the top of the card opens separate popups with feeder specific data and parameters (described in later chapter).

Detailed description

Feeder object

The feeder object shows the status of a feeder (gray=stopped, green=in operation, yellow=paused, blue=calibration in progress, red=error) and has an indicator showing how much of the daily feed target has been dosed. The object can be clicked to open a popup with more details and settings for the feeder, described in a later chapter.

The indicator consists of 2 lines: a green line that indicates actual dosed feed and a gray line that indicates how much feed that should currently have been dosed if the feeder has been running in auto control without any manual intervention (e.g. hand feeding or pausing feeding) or errors. The indicator fills from left to right, and when it reaches the end, it indicates that the daily target has been reached and no more feed will be dosed until the start of the next feed cycle.

Discrepancies between the green and gray line indicate that the feeding has been unable to follow the planned feed schedule and shows potential effects this has had on the daily feeding. These are some events that can cause discrepancies:

- Feeding to the tank has been paused for some time
- Users have registered hand feeding or used the boost feeding function in the tank
- The feeder has been forced to run via local button or in manual mode
- The feeder has had an error that has prevented it from operating
- The feeder has been recalibrated during the day

Note that it's normal to have small discrepancies during normal operation, this is caused by minor delays from when the control system tells the feeder to start/stop until the feeder responds (hardware delay).

Today's target

Feed target for the current feed cycle, based on base feed and activity factor in tank.

Recalc. time

Time of day to start a new feed cycle. This resets feed counters and causes a recalculation of base feed and average weight of fish in the tank which updates the daily target of the tank.

Feed factor (FCR)

Expected growth efficiency of feed (ratio of kg feed required to grow 1 kg fish). Used to calculate change in average weight at the start of a new feed cycle.

Activity factor

Factor indicating how hungry the fish is/how much of the dosed feed that's being eaten. Adjusted throughout the day to adjust daily target and optimize the feeding.

Average weight

Average weight of the fish in the tank. Automatically adjusted at the start of a new feed cycle. Can be manually corrected by users after sampling fish in the tank.

Base feed

Calculation base value for today's target, used in combination with activity factor to calculate today's target. Automatically adjusted at the start of a new feed cycle based on feed table and biomass in tank.

Hand feed

Option for manual registration of hand feeding to tank. Any registered hand feed will trigger a recalculation of remaining feeding to the tank to compensate for the manual feed being added for the system to be able to keep feeding until the end of its feeding plan. In most cases this means that the setpoint of the feeders will be lowered to avoid the total feed to the tank hitting today's target before the planned time, which would lead to unintended gaps in the feeding.

Boost feed

Option to force all feeders in the tank to run at max speed for a set time. Afterwards, the feed being dosed this way will be registered as hand feeding and trigger a recalculation as described above. It will also add the same amount of feed to the base feed to increase today's target with the same amount, which converts it into extra feed for the current feed cycle instead of reducing the auto target of the feeders. This behavior can be disabled if it is desired to not adjust today's setpoint when using this function.

Population

Number of fish in the tank.

Biomass

Calculated biomass in the tank, used to calculate base feed.

Temperature

Water temperature in the tank, used to determine SGR from feed table.

Table SGR

SGR (specific growth rate) from a feed table based on average weight and water temperature.

Calculated SGR

Calculated SGR based on activity factor.

Feed percentage

Calculated feed percentage in the tank.

Feed/Hand feed current cycle

Accumulated feeding/hand feed for current feed cycle.

Feed/Hand feed current day

Accumulated feeding/hand feed for current day.

Feed/Hand feed yesterday

Accumulated feeding/hand feed for previous day.

Daily feed increase

Increase in feeding from previous feed cycle.

Estimated growth

Estimated increase in biomass in the tank for the current feed cycle.

State

Button to pause/resume feeding to tank, used to prevent feeding to tank over a period. The feed program will **NOT** attempt to compensate for lost feeding to the tank after a pause.

Feed curve

Basic trend displaying how the feeding is distributed throughout the day with a time indicator showing where it's currently at. Can be clicked to open a popup window with settings for adjusting custom feed distribution and feed profiles for the tank (described in later chapter).


Adjusting the view

Customize view	
Value	Display/Hide
Feed factor	☒
Activity factor	☒
Base feed	☒
Avg. weight	☒
Population	☒
Biomass	☒
Recalculation time	☒
Temperature	☒
Table SGR	☒
Calculated SGR	☒
Feed percentage	☒
Feed current day	☒
Feed yesterday	☒
Feed current cycle	☒
Hand feed	☒
Boost feed	☒
Daily feed increase	☒
Estimated growth	☒

The information being displayed on the fish tank cards can be adjusted to each users preference through the menu on the right side of the screen. This lets the user toggle on or off functions they want to see, so that they can tailor it to suit their needs. These settings are stored per user, so all the tank cards in the system will look identical for that user.

Feed table settings


Feed tables can be set individually for each department and can be viewed in a right-side dock. Only users with a high enough access level can adjust these settings.

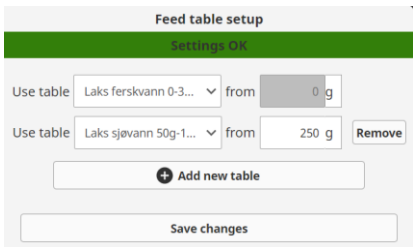

The image shows a 'Feed table setup' dialog box with a green header bar containing 'Settings OK'. Below the header, there are two rows of settings. Each row has a 'Use table' dropdown menu, a 'from' label, a weight input field, and a 'Remove' button. The first row shows 'Laks ferskvann 0-3...' selected, with '0 g' in the weight field. The second row shows 'Laks sjøvann 50g-1...' selected, with '250 g' in the weight field. Below these rows is a button with a plus icon and the text 'Add new table'. At the bottom of the dialog is a 'Save changes' button.

The menu allows users to select which feed tables to use for the fish in the department and set weight breakpoints to switch to different tables if desired (e.g. one table for fish up to 100g and another table for fish over 100g). Feed table management is described in a separate chapter.

Feeder popup

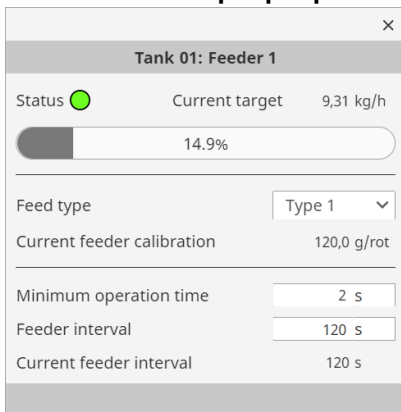

The popup window displays the following information for Tank 01: Feeder 1:

- Status:** Indicated by a green circle, meaning the feeder is in operation.
- Current target:** 9,31 kg/h
- Capacity:** A progress bar showing 14.9% usage.
- Feed type:** A dropdown menu currently set to 'Type 1'.
- Current feeder calibration:** 120,0 g/rot
- Minimum operation time:** 2 s (input field)
- Feeder interval:** 120 s (input field)
- Current feeder interval:** 120 s

This popup displays data and parameters relevant to a specific feeder. The popup appears when a feeder object is clicked. Values with a black frame can be adjusted if the user has sufficient access.

Status

Indicates state of the feeder, gray = stopped, green = in operation, yellow = paused, blue = calibration in progress, red = error

Current target

Shows current reference to the feeder as kilogram feed per hour.

Capacity

An indicator displaying how many percent of the feeder's maximum capacity that's currently in use. 100% indicates that the feeder will run continuously at maximum speed. Tooltip shows capacity in kg/h.

Feed type

Dropdown for selecting feed type dosed by the feeder, used to load correct calibration data to the feeder and allows for easy switching between different feed types.

Current feeder calibration

Calibration value used by the feeder, usually linked to a feed type. Displayed as how many grams of feed is being dosed per rotation of the feeder.

Minimum operation time

The minimum allowed operation time of the feeder per interval during on/off operation.

Feeder interval


Desired interval during on/off operation

Current feeder interval

Current feeder interval during on/off operation. Can increase from desired value to accommodate set minimum operation time. Tooltip displays actual pause and operation time.

IMPORTANT! Settings for interval will be overridden by any active feed profiles while they're in use.

Custom feed distribution popup

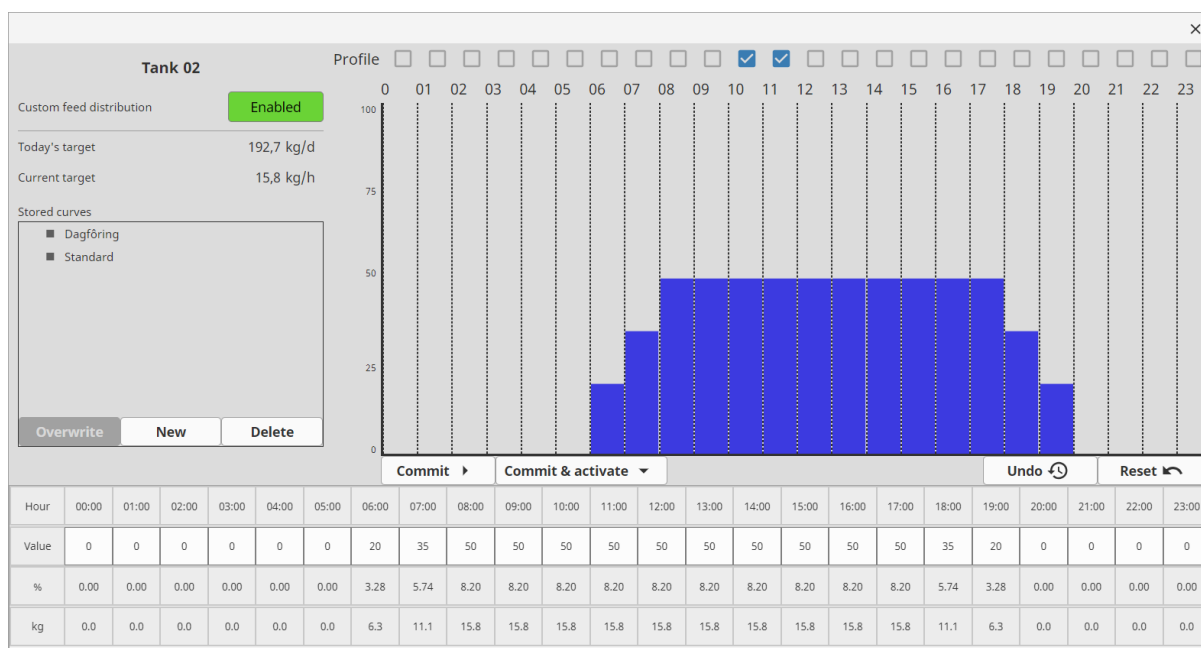

The custom feed distribution popup allows users to adjust the feed curve throughout the day using 2 functions: Custom feed distribution allows custom distribution of today's target over a 24-hour period, and feed profiles allows fine adjustments of feed distribution within each hour.

Custom feed distribution

The custom feed distribution can be used to adjust the distribution of the daily target throughout the day. Users can adjust a column for each hour, which represents how much of the total feed target should be distributed during that hour. A column represents the setpoint for 1 hour, and a high column will receive more feed than a lower column. The result can be seen as a percentage or as actual feed per hour based on the daily target in the 2 lowest rows of the table.

The curve is initially evenly distributed and can be adjusted in the following ways: Dragging the columns or modifying the value in the "value" row of the table. Any changes need to be uploaded to the PLC to be saved by using one of the commit buttons. Otherwise, any changes will be discarded when the popup is closed.

The difference between the buttons "Commit" and "Commit & activate" is that a committed curve won't be activated until the start of the next feed cycle, while a committed & activated curve will be activated immediately.

It's possible to store curve settings through the menu on the left side of the popup with custom names to allow for easy switching between frequently used setups, e.g. 16-hour feed cycle, 12-hour feed cycle, batch feeding etc. These are shared for the entire system, so it's easy to set up a new curve for one tank and then reuse it for any other tank later.

Custom feed distribution will only affect the setpoint if custom feed distribution is enabled, otherwise any settings will be ignored and the daily setpoint will be distributed evenly over each hour. The active time curve can be seen on the trend preview of the tank card.

Feed profiles

Feed profiles can be set for each hour of the day if users want to have a customized pattern of feeding rather than an even distribution based on feeder settings throughout the hour. Any hours with active feed profiles are marked above the columns in the custom time curve view. The setting menu for the feed profiles is accessed by clicking these indicators.

Feed Profiles							
Time	Tank 01	Tank 02	Tank 03	Tank 04	Tank 05	Tank 06	
00:00-01:00	None	None	None	None	None	None	
01:00-02:00	None	None	None	None	None	None	
02:00-03:00	None	None	None	None	None	None	
03:00-04:00	None	None	None	None	None	None	
04:00-05:00	None	None	None	None	None	None	
05:00-06:00	None	None	None	None	None	None	
06:00-07:00	None	None	None	None	None	None	
07:00-08:00	None	None	None	None	None	None	
08:00-09:00	Profile 1	None	Profile 2	None	None	None	
09:00-10:00	Profile 1	None	Profile 2	None	None	None	
10:00-11:00	Profile 1	Profile 1	Profile 2	None	None	None	
11:00-12:00	None	Profile 2	None	None	None	None	
12:00-13:00	None	None	None	None	None	None	
13:00-14:00	None	None	None	None	None	None	
14:00-15:00	None	None	None	None	None	None	
15:00-16:00	None	None	None	None	None	None	
Save changes				Cancel			

The feed profiles let users freely define how the feed setpoint for the hour is to be distributed through a setup wizard used to create and modify the profiles. They let users break down the hour into 5-minute intervals and distribute the feed setpoint however they see fit. Any leftover feed will be distributed evenly over any remaining unallocated time. Each profile also has its own interval time which overrides set feeder interval for the profile's duration if on/off operation is active.

IMPORTANT! When using the max speed option, duration is not defined as it is calculated based on the feeder's active capacity. It's therefore important to have some buffer time so the profile doesn't exceed 60 min after having calculated required runtime which will cause it to be unable to hit its target for the hour. If this situation occurs, an alarm will be generated.

Users can for example create a feed profile which doses most of the feed at the start of the hour and then evenly distributes the rest over the hour. Alternatively, a batch-based profile can be created where large amounts of feed are dumped a few times during the hour, and no feed is dosed outside of those large doses.

Feed Profiles

Remaining values

Duration: 35 Min Percent: 30 %

Steps


Step 1	Duration	Percent
↓	5 min	0
↑	Duration	Percent
↓	10 min	20
↑	Duration	Percent
↓	5 min	0
↑	Duration	Percent
↓	Max speed	50

⊕

Next Previous

Example of a profile with the following settings: 5 min pause – dose 20% of target over 10 min – 5 min pause – dump 50% of target at max speed – dose remaining 30% over remaining time (time is unknown since the duration of the max speed command depends on the feeder capacity)

Calibration admin

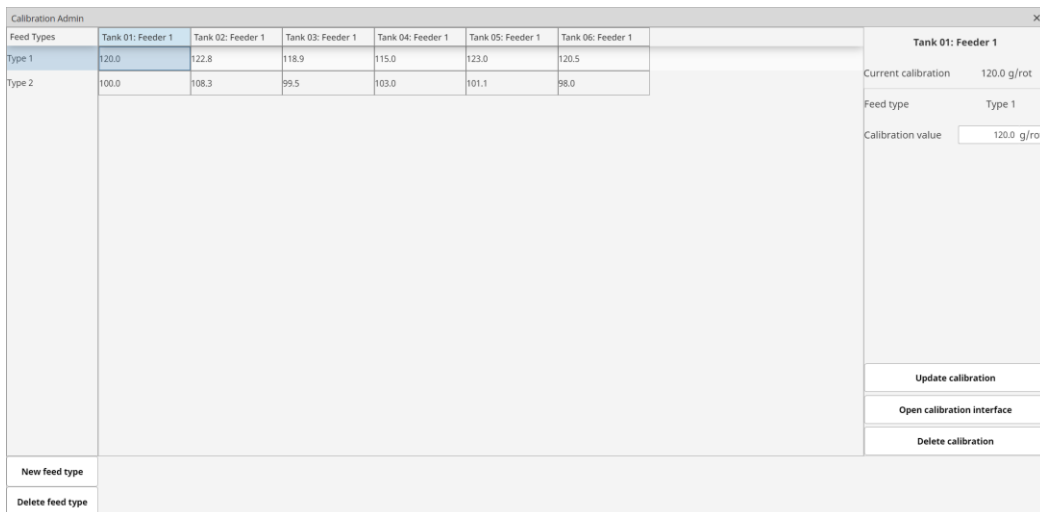

Feed Types	Tank 01: Feeder 1	Tank 02: Feeder 1	Tank 03: Feeder 1	Tank 04: Feeder 1	Tank 05: Feeder 1	Tank 06: Feeder 1
Type 1	120.0	122.8	118.9	115.0	123.0	120.5
Type 2	100.0	108.3	99.5	103.0	101.1	98.0

Tank 01: Feeder 1

Current calibration: 120.0 g/rot

Feed type: Type 1

Calibration value:

Update calibration

Open calibration interface

Delete calibration

New feed type

Delete feed type

Calibration admin is a tool used to manage feed types and calibration data for feeders in the plant. It can be accessed from the main menu's Fish Feeding section.

The majority of the popup displays a matrix of feed types and feeders in the plant containing feed calibration data. These can be modified by clicking a cell and using the menu that appears on the right side of the popup. Once a feeder has received a calibration for a feed type, it becomes available as a choice in the feed type dropdown on the feeder popup, allowing for easy toggling between different feed types.

Object description:

Feed types & feeders	Matrix of all feed types and feeders of the plant, displays calibration data for the feeders
New feed type	Open a dialog to add a new feed type
Delete feed type	Open a dialog to delete selected feed type
Current calibration	Displays currently used calibration data of the selected feeder
Feed type	Displays which feed type that's currently being modified in the right-side dock
Calibration value	Displays current value of selected feed type for selected feed type. Can be modified to directly change the calibration value
Update calibration	Write "Calibration value" to the database, updating the value of the feed type for the selected feeder
Open calibration interface	Open a menu for starting a calibration sequence for the selected feeder. Reopens the popup at the current step if a calibration is already in progress
Delete calibration	Delete calibration value for selected feed type and feeder combo. This disallows selecting the feed type for the feeder in the dropdown menu in the feeder popup

Feed tables

Feed table management

Table selection: Laks ferskvarm 0-300g

Weight(g)	0°C	1°C	2°C	3°C	4°C	5°C	6°C	7°C	8°C	9°C	10°C	11°C	12°C	13°C	14°C	15°C	16°C	17°C	18°C
0.2	0	0	1.83	2.34	2.85	3.36	3.86	4.37	4.88	5.39	5.9	6.41	6.91	7.42	7.93	8.44	7.94	7.43	6.93
0.4	0	0	1.5	1.93	2.36	2.8	3.23	3.66	4.09	4.52	4.95	5.39	5.82	6.25	6.68	7.11	6.65	6.2	5.74
0.6	0	0	1.34	1.73	2.12	2.51	2.91	3.3	3.69	4.08	4.47	4.87	5.26	5.65	6.04	6.43	6	5.57	5.14
0.8	0	0	1.23	1.6	1.96	2.33	2.7	3.06	3.43	3.8	4.16	4.53	4.89	5.26	5.63	5.99	5.58	5.17	4.76
1	0	0	1.16	1.5	1.85	2.2	2.55	2.89	3.24	3.59	3.94	4.28	4.63	4.98	5.33	5.67	5.27	4.88	4.48
2	0	0	0.95	1.24	1.54	1.83	2.13	2.42	2.72	3.01	3.31	3.6	3.9	4.19	4.49	4.78	4.43	4.07	3.71
3	0	0	0.85	1.11	1.38	1.65	1.92	2.19	2.45	2.72	2.99	3.26	3.53	3.79	4.06	4.33	3.99	3.66	3.32
4	0	0	0.78	1.03	1.28	1.53	1.78	2.03	2.28	2.53	2.78	3.03	3.28	3.53	3.78	4.03	3.72	3.4	3.08
5	0	0	0.73	0.97	1.21	1.44	1.68	1.92	2.16	2.39	2.63	2.87	3.11	3.35	3.58	3.82	3.51	3.2	2.9
6	0	0	0.7	0.92	1.15	1.38	1.61	1.83	2.06	2.29	2.52	2.74	2.97	3.2	3.43	3.65	3.36	3.06	2.76
7	0	0	0.67	0.89	1.1	1.32	1.54	1.76	1.98	2.2	2.42	2.64	2.86	3.08	3.3	3.52	3.23	2.94	2.65
8	0	0	0.64	0.85	1.07	1.28	1.49	1.71	1.92	2.13	2.34	2.56	2.77	2.98	3.19	3.41	3.12	2.84	2.55
9	0	0	0.62	0.83	1.03	1.24	1.45	1.66	1.86	2.07	2.28	2.48	2.69	2.9	3.1	3.31	3.03	2.75	2.47
10	0	0	0.6	0.8	1.01	1.21	1.41	1.61	1.81	2.02	2.22	2.42	2.62	2.82	3.03	3.23	2.95	2.68	2.41
20	0	0	0.5	0.67	0.84	1.01	1.19	1.36	1.53	1.7	1.87	2.05	2.22	2.39	2.56	2.74	2.49	2.25	2
30	0	0	0.45	0.6	0.76	0.92	1.07	1.23	1.39	1.55	1.7	1.86	2.02	2.17	2.33	2.49	2.26	2.03	1.8
40	0	0	0.41	0.56	0.71	0.86	1	1.15	1.3	1.45	1.59	1.74	1.89	2.04	2.18	2.33	2.11	1.9	1.68
50	0	0	0.39	0.53	0.67	0.81	0.95	1.09	1.23	1.37	1.52	1.66	1.8	1.94	2.08	2.22	2.01	1.8	1.59
60	0	0	0.37	0.51	0.64	0.78	0.91	1.05	1.18	1.32	1.46	1.59	1.73	1.86	2	2.13	1.93	1.72	1.52
70	0	0	0.36	0.49	0.62	0.75	0.88	1.01	1.15	1.28	1.41	1.54	1.67	1.8	1.93	2.06	1.86	1.66	1.46
80	0	0	0.35	0.48	0.6	0.73	0.86	0.99	1.11	1.24	1.37	1.5	1.62	1.75	1.88	2.01	1.81	1.62	1.42
90	0	0	0.34	0.46	0.59	0.71	0.84	0.96	1.09	1.21	1.34	1.46	1.59	1.71	1.84	1.96	1.77	1.57	1.38
100	0	0	0.34	0.46	0.59	0.71	0.84	0.96	1.09	1.21	1.34	1.46	1.59	1.71	1.84	1.96	1.77	1.57	1.38

Check calculation

Import new table Update current table Delete current table

Users with sufficient access level can upload, view, modify and delete feed tables from the system. It can be accessed from the main menu's Fish Feeding section.

The main screen lets users view tables uploaded to the system and modify them. There's also a tool where users can input a temperature and average weight to control what the table will calculate the SGR to be based on current settings.

Feed table management

Table name: my new table Source file: GrowthTable Atlantic Salmon Fresh Water up to 300g BAS.csv

Table preview:

Weight	0°C	1°C	2°C	3°C	4°C	5°C	6°C	7°C	8°C	9°C	10°C	11°C	12°C	13°C	14°C	15°C	16°C	17°C	18°C	19°C
0.2	0	0	1.83	2.34	2.85	3.36	3.86	4.37	4.88	5.39	5.9	6.41	6.91	7.42	7.93	8.44	7.94	7.43	6.93	6.44
0.4	0	0	1.5	1.93	2.36	2.8	3.23	3.66	4.09	4.52	4.95	5.39	5.82	6.25	6.68	7.11	6.65	6.2	5.74	5.25
0.6	0	0	1.34	1.73	2.12	2.51	2.91	3.3	3.69	4.08	4.47	4.87	5.26	5.65	6.04	6.43	6	5.57	5.14	4.7
0.8	0	0	1.23	1.6	1.96	2.33	2.7	3.06	3.43	3.8	4.16	4.53	4.89	5.26	5.63	5.99	5.58	5.17	4.76	4.34
1	0	0	1.16	1.5	1.85	2.2	2.55	2.89	3.24	3.59	3.94	4.28	4.63	4.98	5.33	5.67	5.27	4.88	4.48	4.08
2	0	0	0.95	1.24	1.54	1.83	2.13	2.42	2.72	3.01	3.31	3.6	3.9	4.19	4.49	4.78	4.43	4.07	3.71	3.31
3	0	0	0.85	1.11	1.38	1.65	1.92	2.19	2.45	2.72	2.99	3.26	3.53	3.79	4.06	4.33	3.99	3.66	3.32	2.96
4	0	0	0.78	1.03	1.28	1.53	1.78	2.03	2.28	2.53	2.78	3.03	3.28	3.53	3.78	4.03	3.72	3.4	3.08	2.71
5	0	0	0.73	0.97	1.21	1.44	1.68	1.92	2.16	2.39	2.63	2.87	3.11	3.35	3.58	3.82	3.51	3.2	2.9	2.59
6	0	0	0.7	0.92	1.15	1.38	1.61	1.83	2.06	2.29	2.52	2.74	2.97	3.2	3.43	3.65	3.36	3.06	2.76	2.44
7	0	0	0.67	0.89	1.1	1.32	1.54	1.76	1.98	2.2	2.42	2.64	2.86	3.08	3.3	3.52	3.23	2.94	2.65	2.33
8	0	0	0.64	0.85	1.07	1.28	1.49	1.71	1.92	2.13	2.34	2.56	2.77	2.98	3.19	3.41	3.12	2.84	2.55	2.23
9	0	0	0.62	0.83	1.03	1.24	1.45	1.66	1.86	2.07	2.28	2.48	2.69	2.9	3.1	3.31	3.03	2.75	2.47	2.15
10	0	0	0.6	0.8	1.01	1.21	1.41	1.61	1.81	2.02	2.22	2.42	2.62	2.82	3.03	3.23	2.95	2.68	2.41	2.13
20	0	0	0.5	0.67	0.84	1.01	1.19	1.36	1.53	1.7	1.87	2.05	2.22	2.39	2.56	2.74	2.49	2.25	2	1.71
30	0	0	0.45	0.6	0.76	0.92	1.07	1.23	1.39	1.55	1.7	1.86	2.02	2.17	2.33	2.49	2.26	2.03	1.8	1.59
40	0	0	0.41	0.56	0.71	0.86	1	1.15	1.3	1.45	1.59	1.74	1.89	2.04	2.18	2.33	2.11	1.9	1.68	1.46
50	0	0	0.39	0.53	0.67	0.81	0.95	1.09	1.23	1.37	1.52	1.66	1.8	1.94	2.08	2.22	2.01	1.8	1.59	1.38
60	0	0	0.37	0.51	0.64	0.78	0.91	1.05	1.18	1.32	1.46	1.59	1.73	1.86	2	2.13	1.93	1.72	1.52	1.31
70	0	0	0.36	0.49	0.62	0.75	0.88	1.01	1.15	1.28	1.41	1.54	1.67	1.8	1.93	2.06	1.86	1.66	1.46	1.21
80	0	0	0.35	0.48	0.6	0.73	0.86	0.99	1.11	1.24	1.37	1.5	1.62	1.75	1.88	2.01	1.81	1.62	1.42	1.22
90	0	0	0.34	0.46	0.59	0.71	0.84	0.96	1.09	1.21	1.34	1.46	1.59	1.71	1.84	1.96	1.77	1.57	1.38	1.11
100	0	0	0.33	0.45	0.57	0.7	0.82	0.94	1.06	1.19	1.31	1.43	1.55	1.68	1.8	1.92	1.73	1.54	1.35	1.11

Import table Cancel

When importing a new table, users select a unique name and upload the data from a csv file format.

IMPORTANT! The csv file needs a specific setup to be compatible for import. Contact your system provider for assistance if it's your first time importing a table to get help with formatting the csv file.