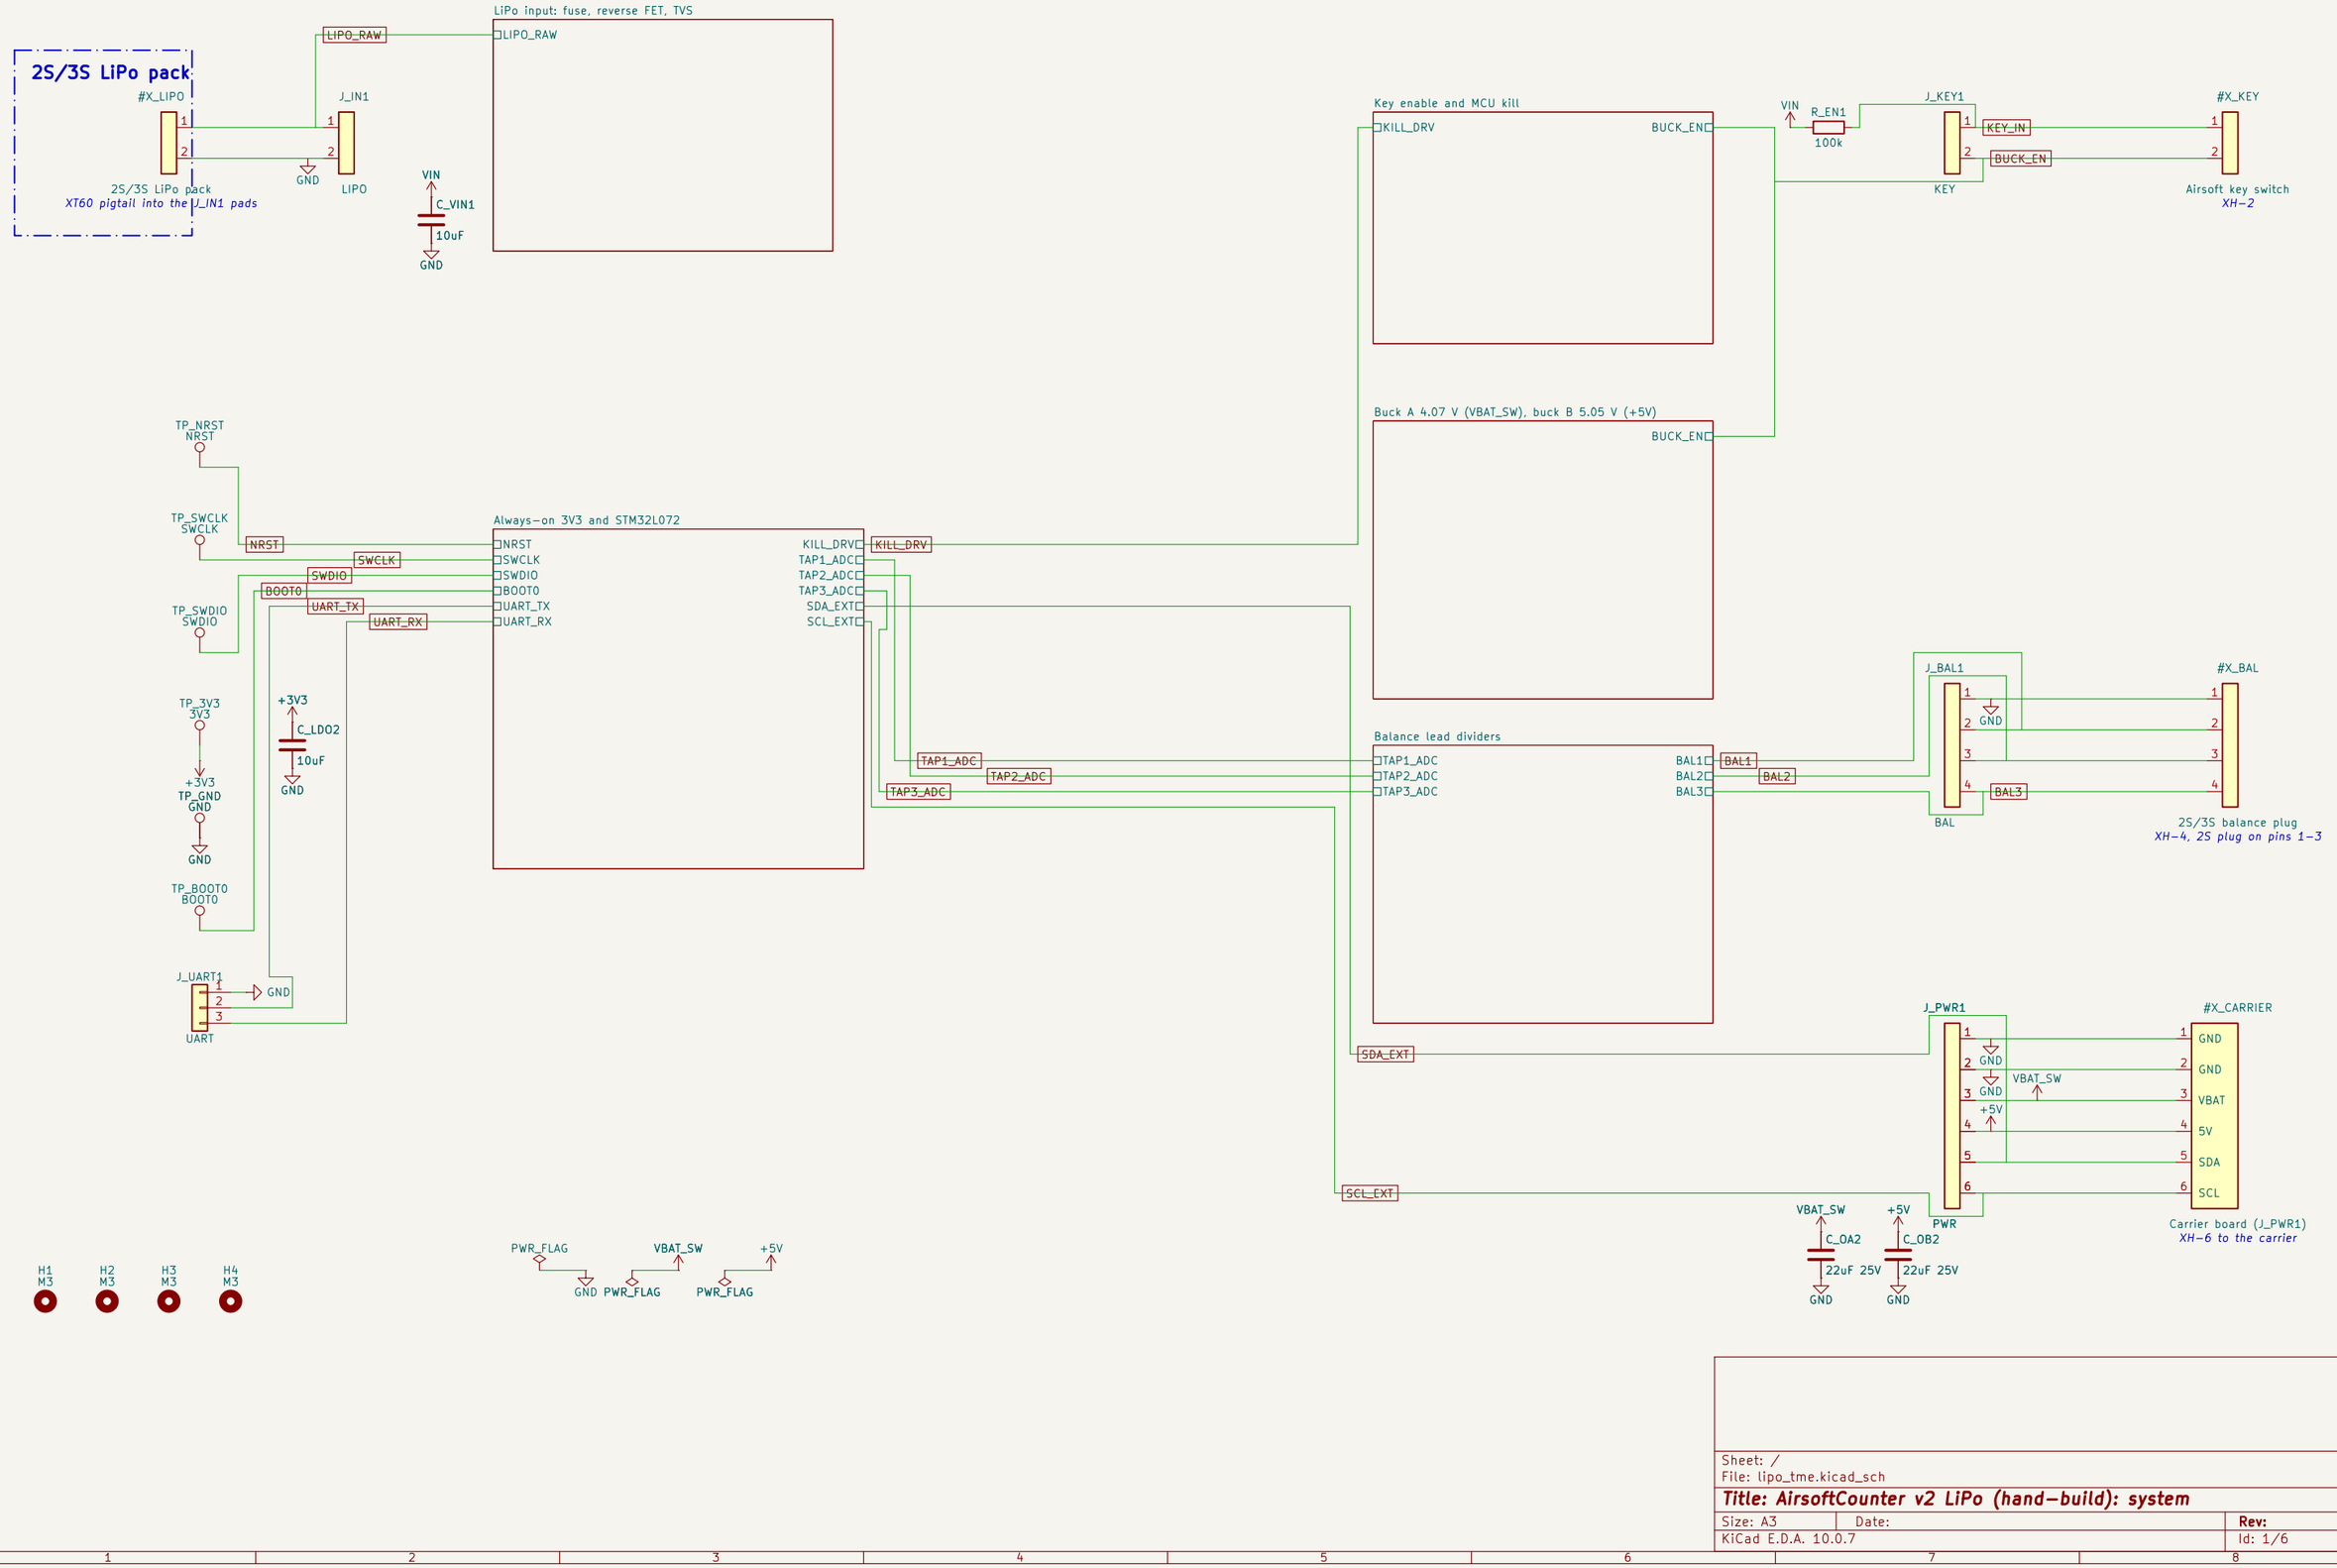
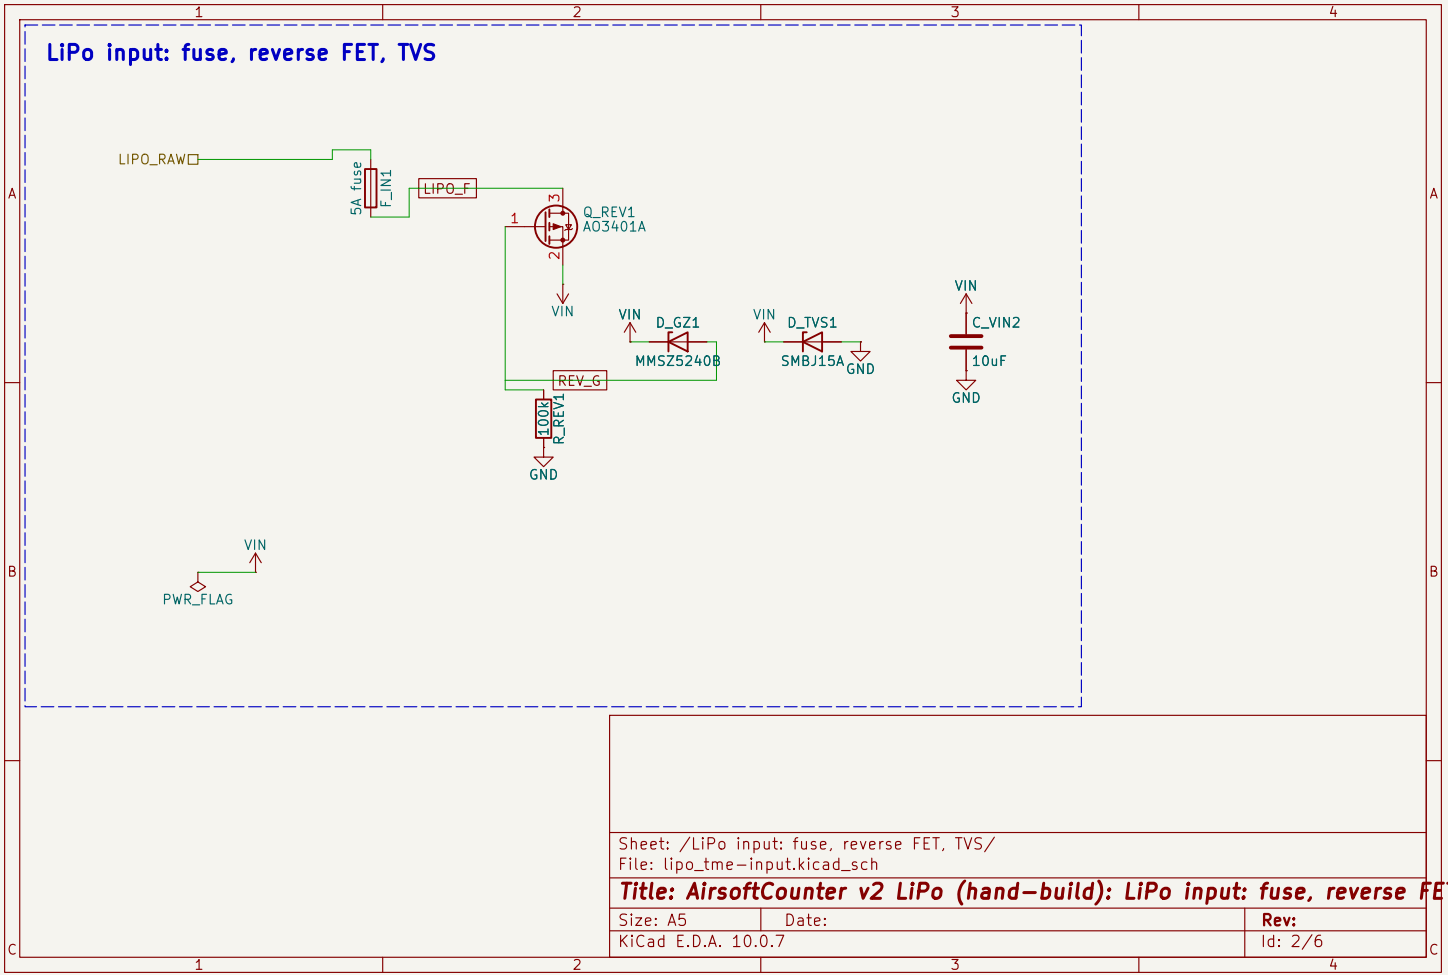



Sheet: /
File: lipo_tme.kicad_sch

Title: AirsoftCounter v2 LiPo (hand-build): system

Size: A3	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 1/6


LiPo input: fuse, reverse FET, TVS
LIPO_RAW
5A fuse
F_IN1
LIPO_F
Q_REV1
AO3401A
1
2
3
VIN
D_GZ1
MMSZ5240B
D_TVS1
SMBJ15A
GND
C_VIN2
10uF
REV_G
100k
R_REV1
PWR_FLAG
Sheet: /LiPo input: fuse, reverse FET, TVS/
File: lipo_tme-input.kicad_sch
Title: AirsoftCounter v2 LiPo (hand-build): LiPo input: fuse, reverse FET, TVS
Size: A5
Date:
Rev:
KiCad E.D.A. 10.0.7
Id: 2/6

Key enable and MCU kill

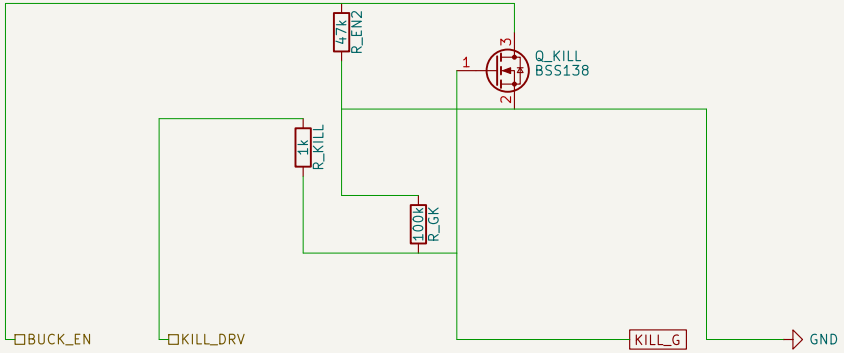


Sheet: /Key enable and MCU kill/
File: lipo_tme-enable.kicad_sch

Title: AirsoftCounter v2 LiPo (hand-build): Key enable and MCU kill

Size: A5	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 3/6

Buck A 4.07 V (VBAT_SW), buck B 5.05 V (+5V)

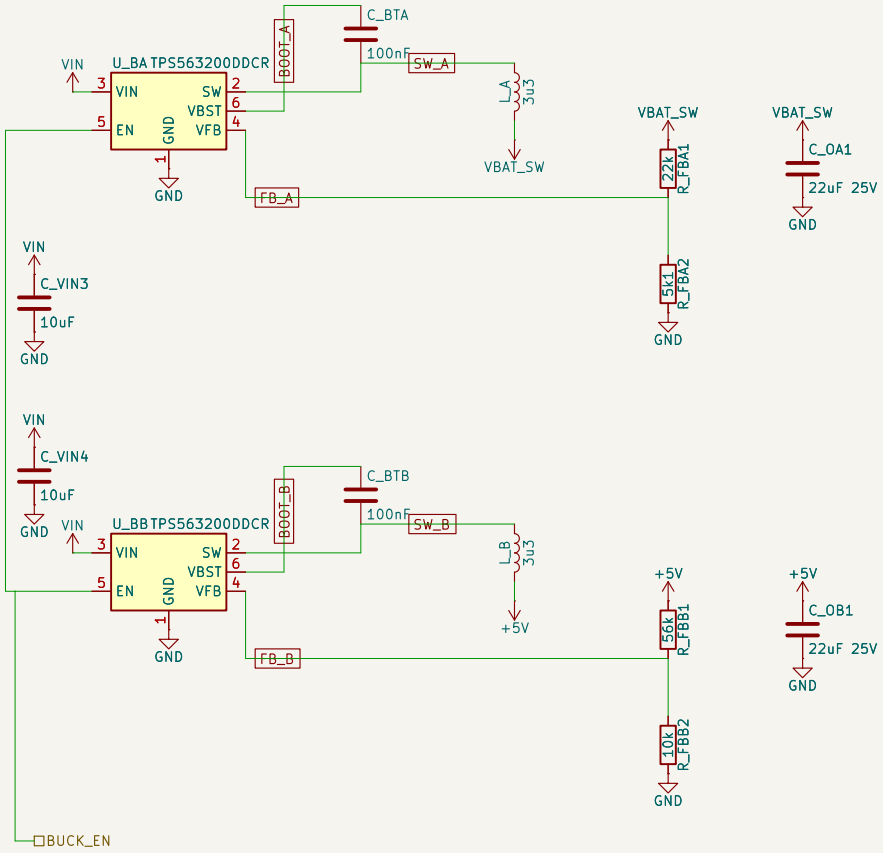


Sheet: /Buck A 4.07 V (VBAT_SW), buck B 5.05 V (+5V)/
File: lipo_tme-bucks.kicad_sch


Title: AirsoftCounter v2 LiPo (hand-build): Buck A 4.07 V (VBAT_SW), buck B

Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 4/6

Always-on 3V3 and STM32L072

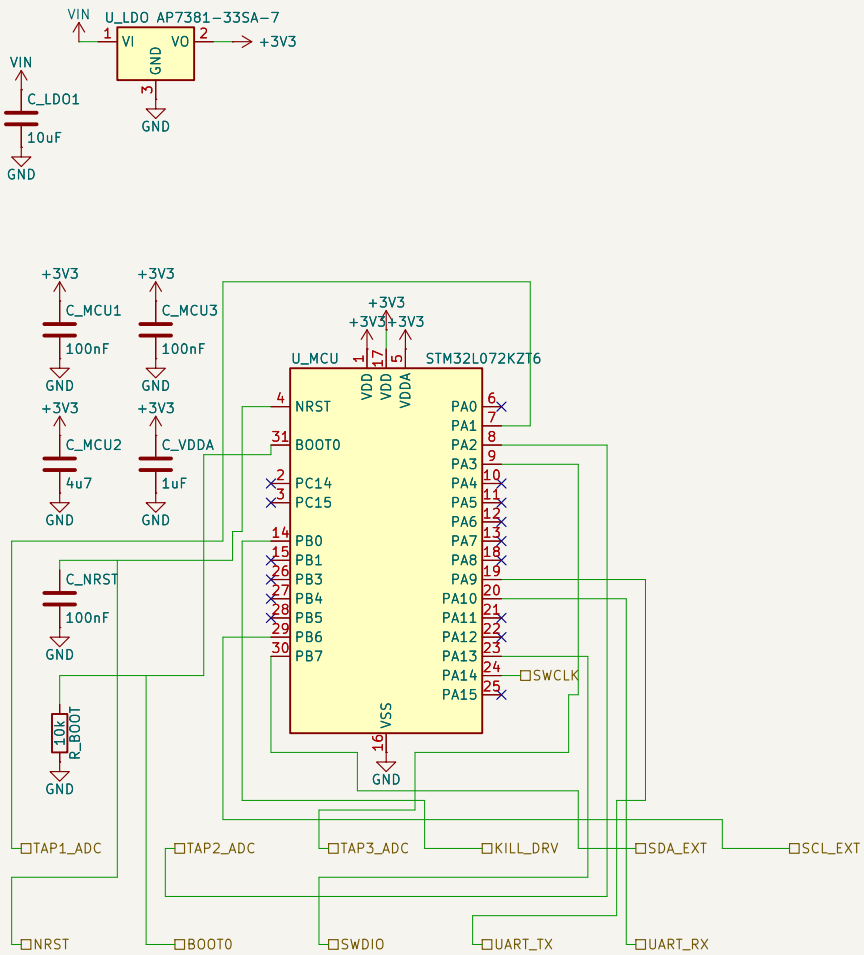

Sheet: /Always-on 3V3 and STM32L072/		
File: lipo_tme-mcu.kicad_sch		
Title: AirsoftCounter v2 LiPo (hand-build): Always-on 3V3 and STM32L072		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 5/6

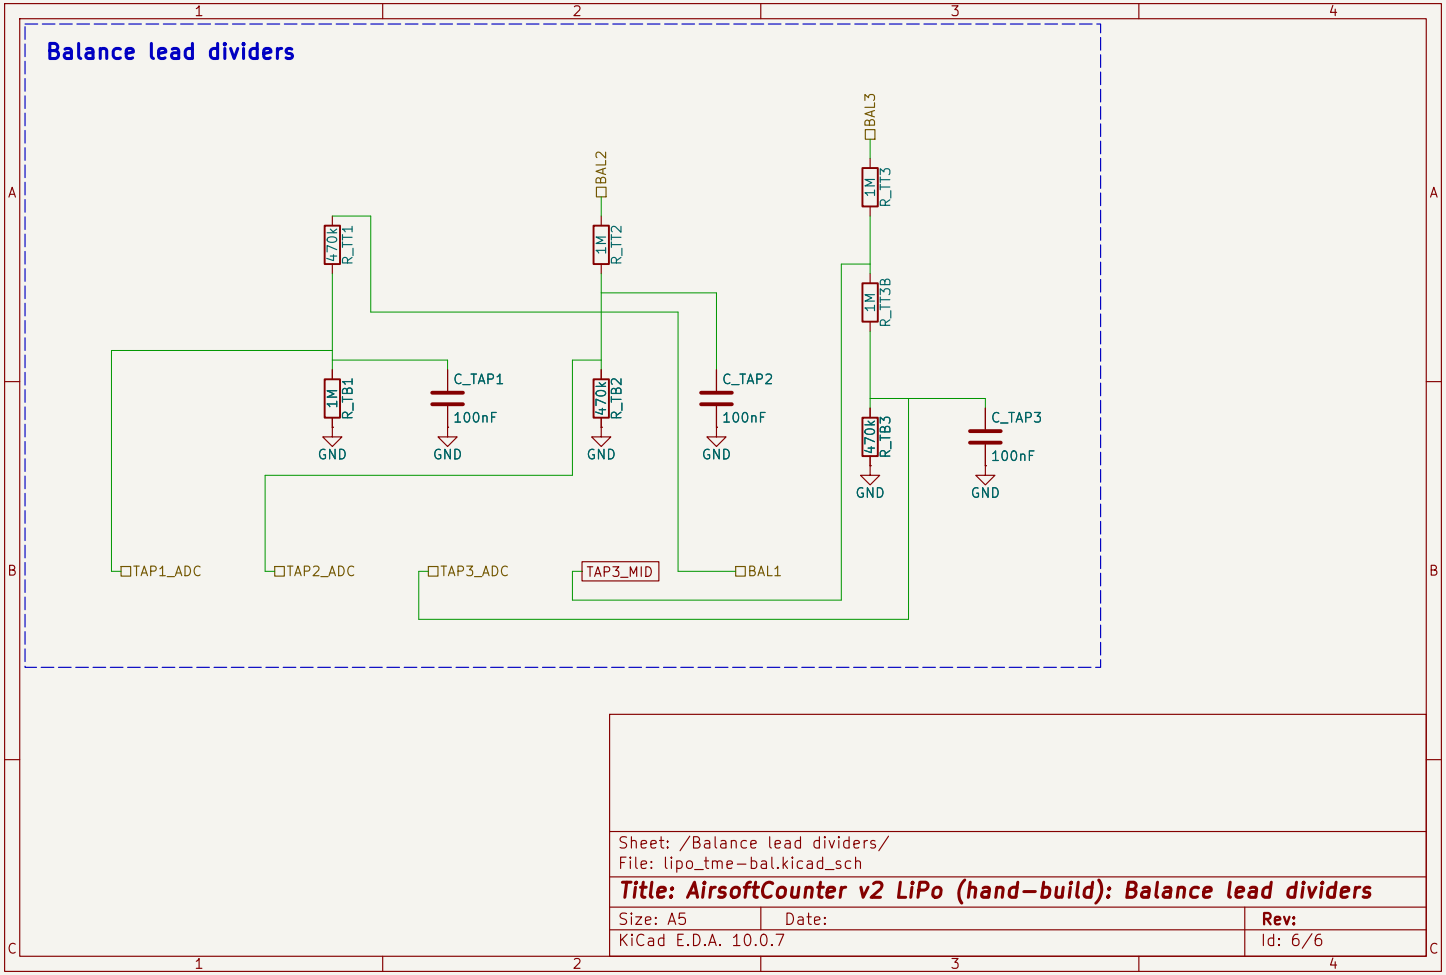

Sheet: /Balance lead dividers/
File: lipo_tme-bal.kicad_sch

Title: AirsoftCounter v2 LiPo (hand-build): Balance lead dividers

Size: A5	Date:	**Rev:**
KiCad E.D.A. 10.0.7		Id: 6/6