
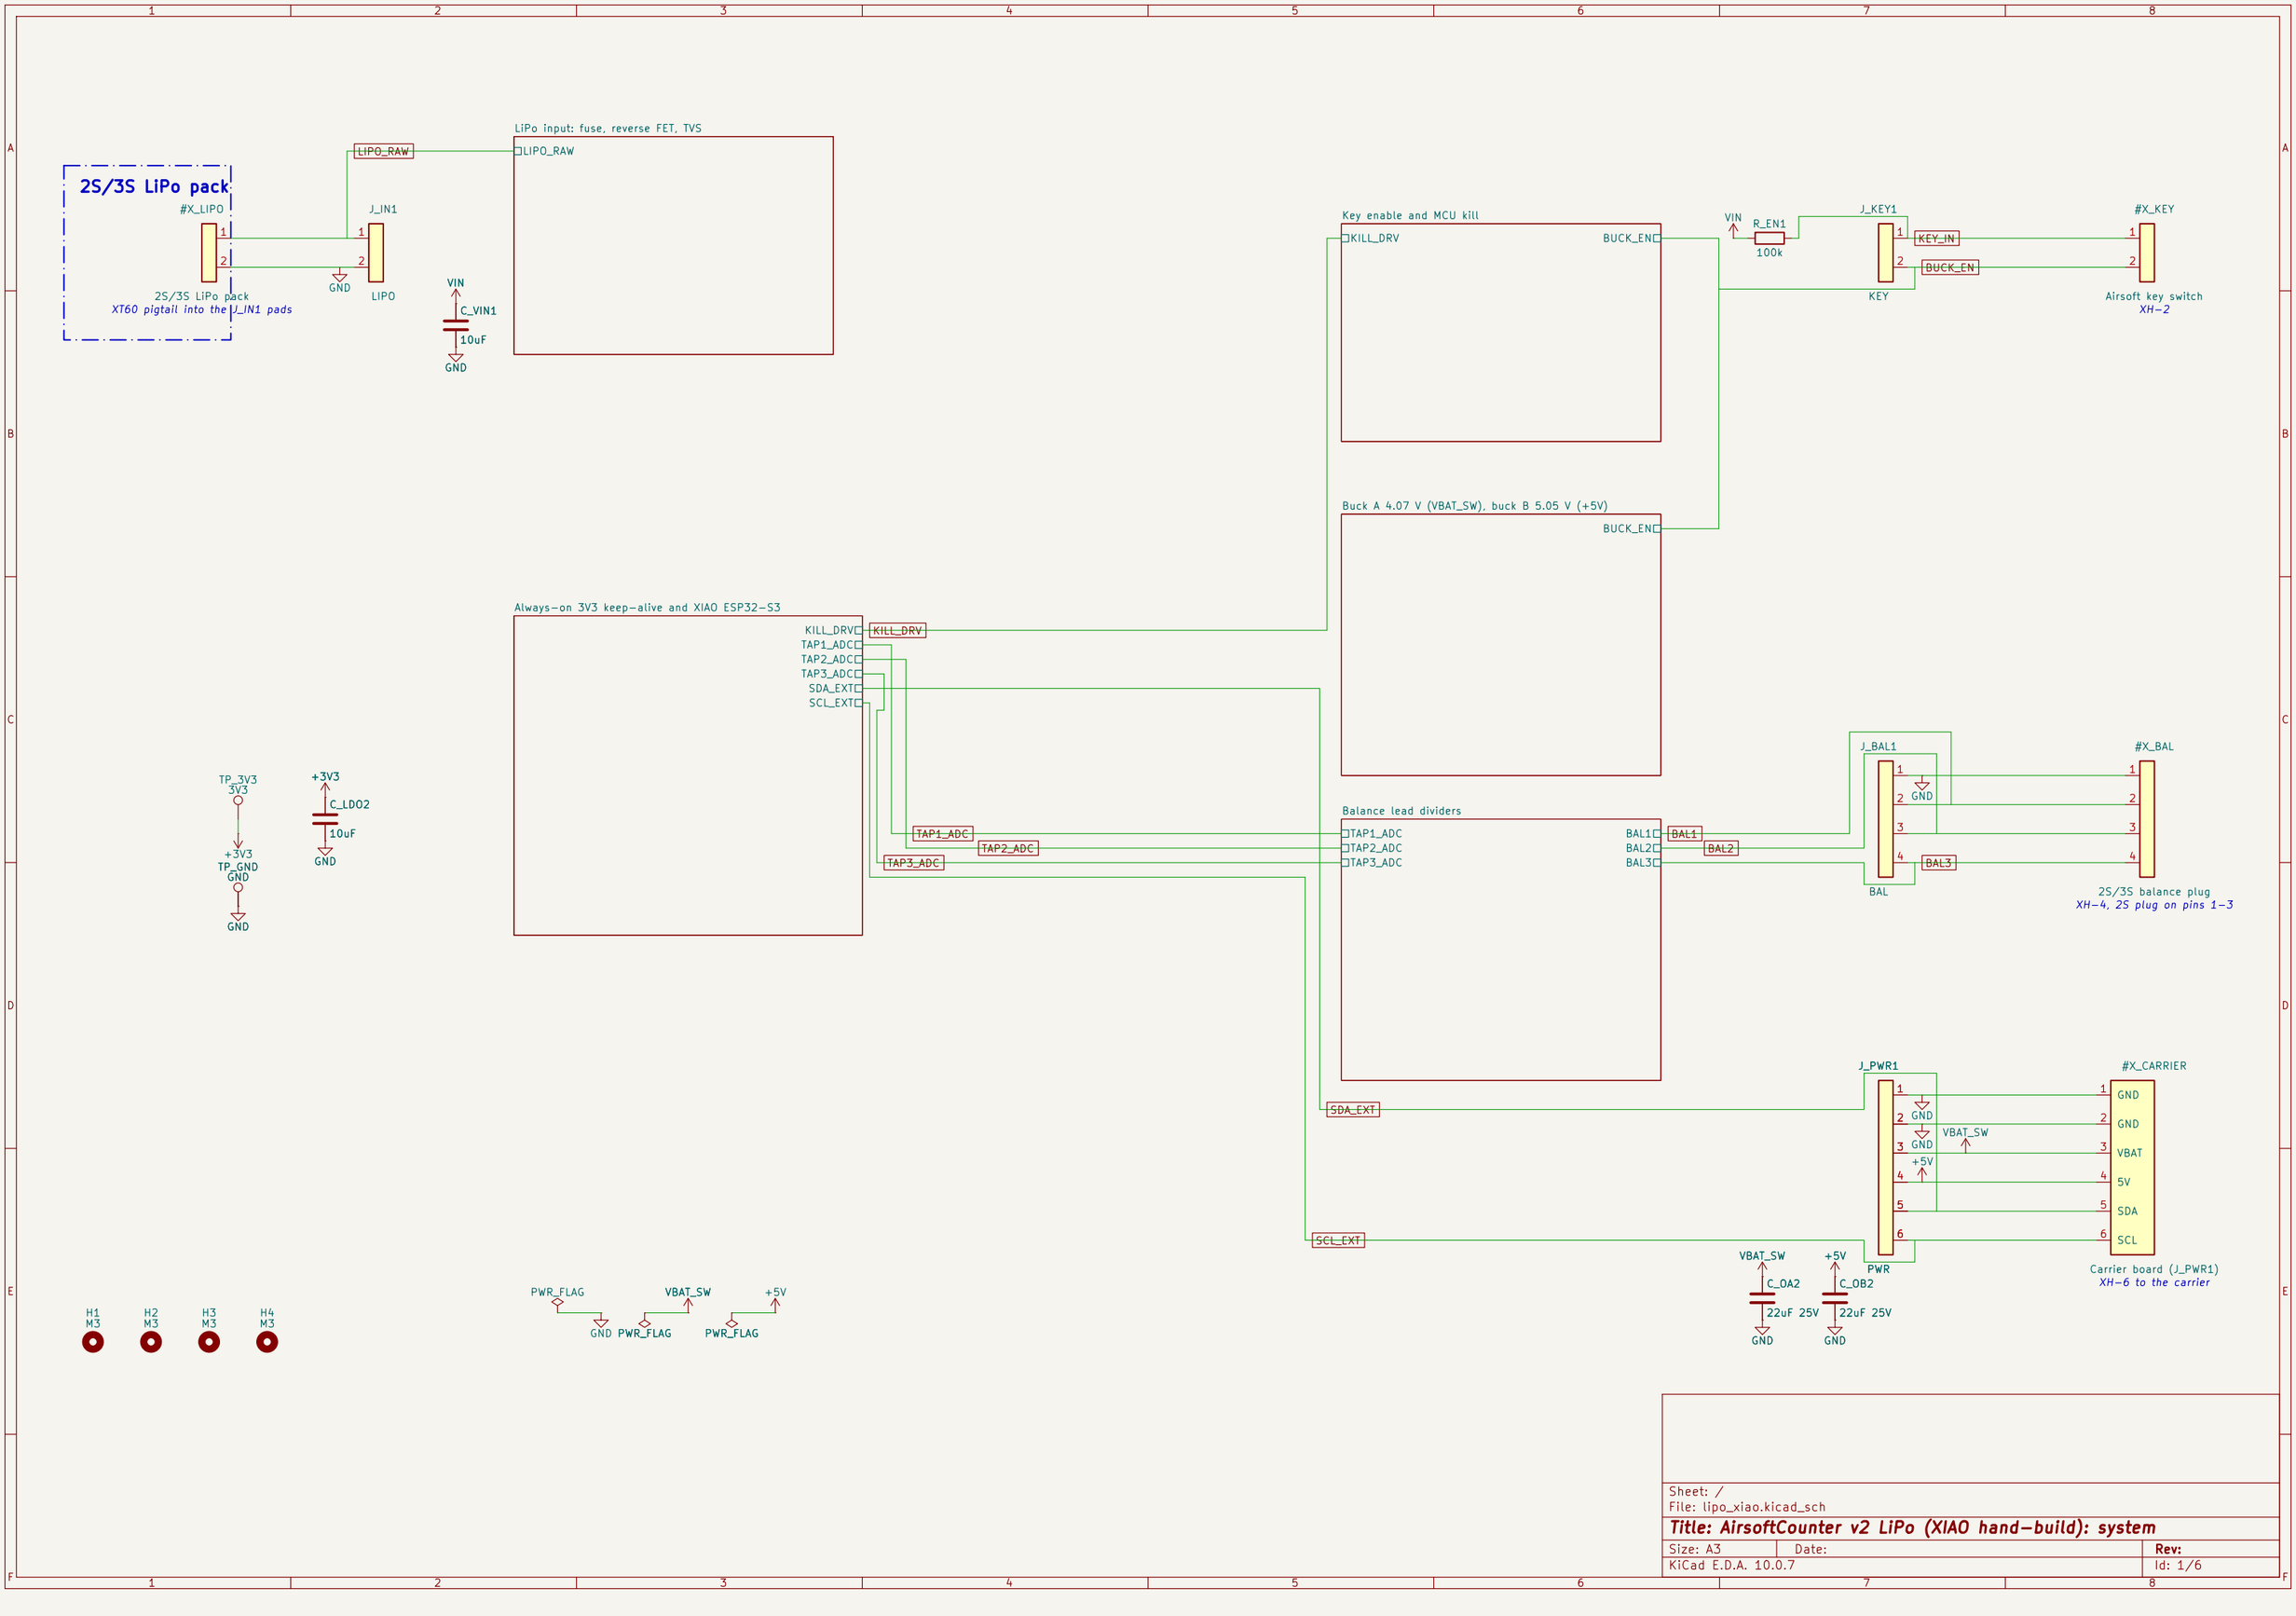


Sheet: /		
File: lipo_xiao.kicad_sch		
Title: AirsoftCounter v2 LiPo (XIAO hand-build): system		
Size: A3	Date:	**Rev:**
KiCad E.D.A. 10.0.7		Id: 1/6

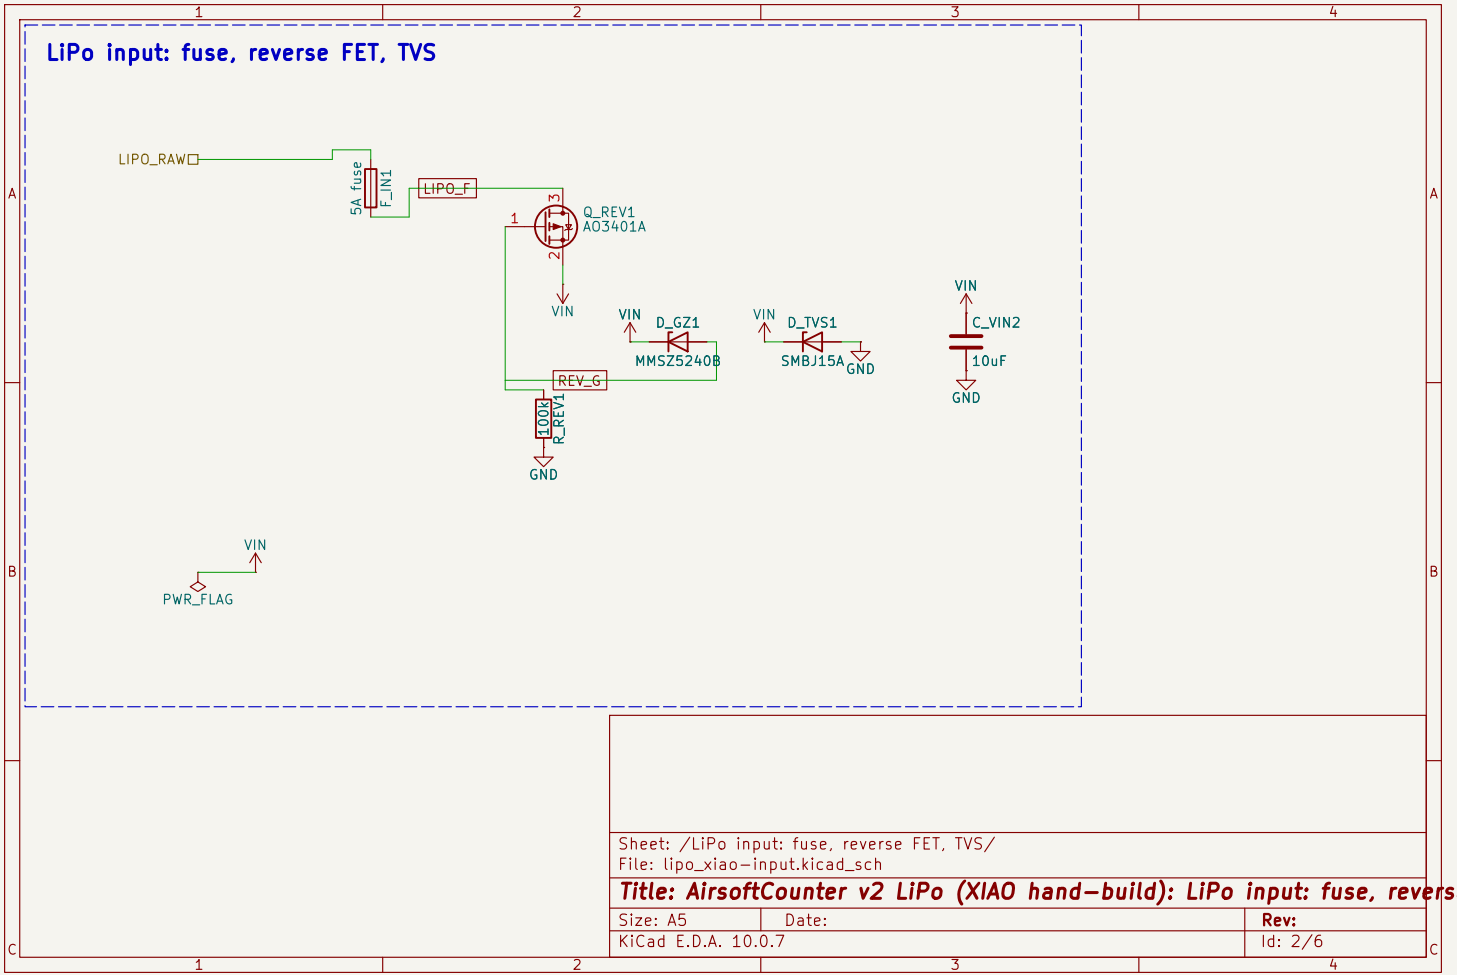


Sheet: /LiPo input: fuse, reverse FET, TVS/
File: lipo_xiao-input.kicad_sch

Title: AirsoftCounter v2 LiPo (XIAO hand-build): LiPo input: fuse, reverse FET

Size: A5	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 2/6

Key enable and MCU kill

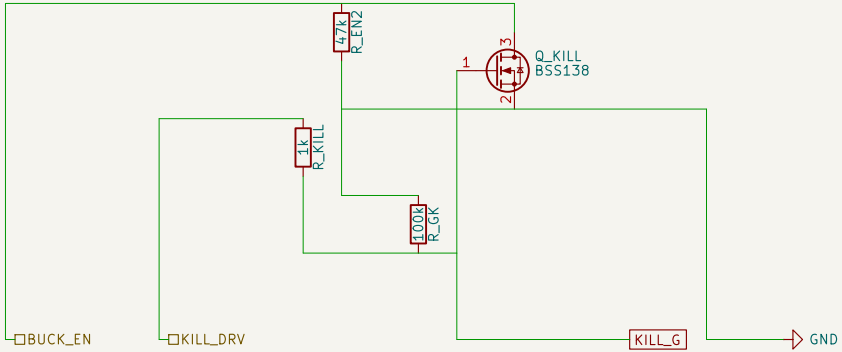


Sheet: /Key enable and MCU kill/
File: lipo_xiao-enable.kicad_sch

Title: AirsoftCounter v2 LiPo (XIAO hand-build): Key enable and MCU kill

Size: A5	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 3/6

Buck A 4.07 V (VBAT_SW), buck B 5.05 V (+5V)

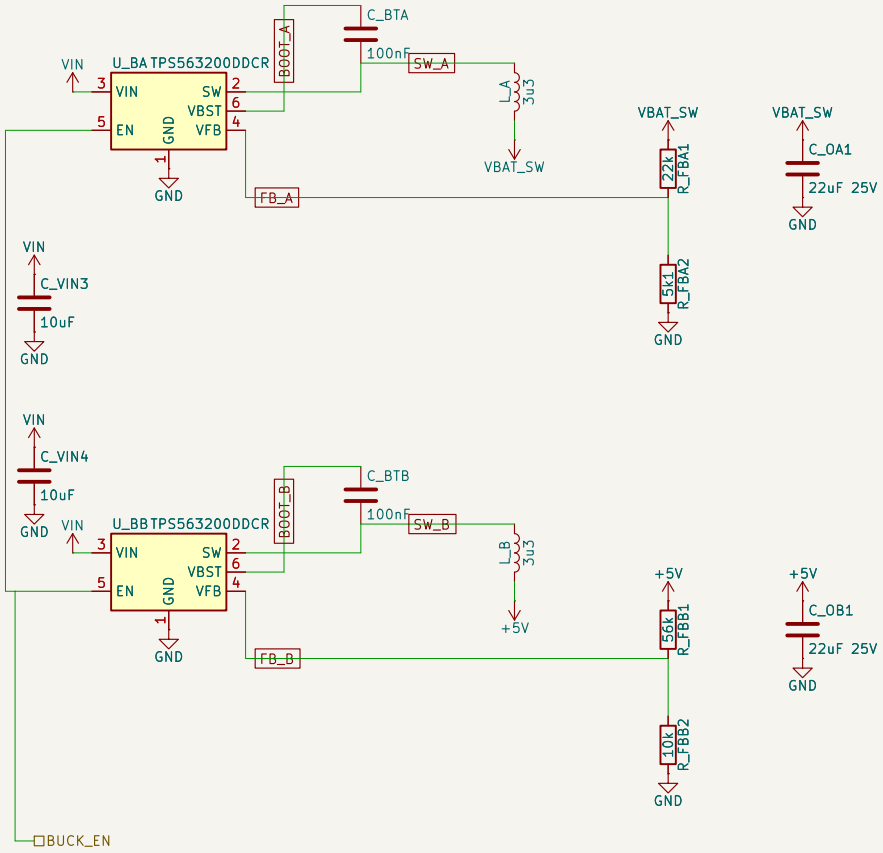


Sheet: /Buck A 4.07 V (VBAT_SW), buck B 5.05 V (+5V)/
File: lipo_xiao-bucks.kicad_sch

Title: AirsoftCounter v2 LiPo (XIAO hand-build): Buck A 4.07 V (VBAT_SW), bu

Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 4/6


Always-on 3V3 keep-alive and XIAO ESP32-S3

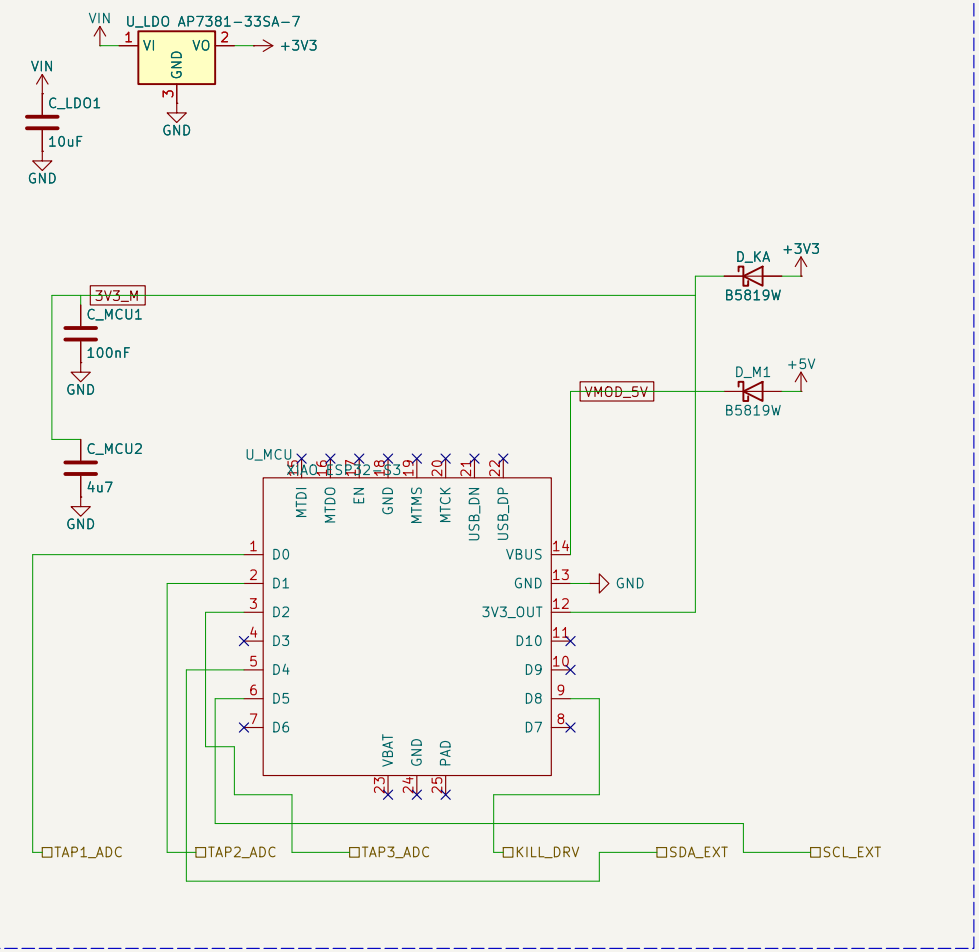

Sheet: /Always-on 3V3 keep-alive and XIAO ESP32-S3/
File: lipo_xiao-mcu.kicad_sch

Title: AirsoftCounter v2 LiPo (XIAO hand-build): Always-on 3V3 keep-alive a

Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 5/6

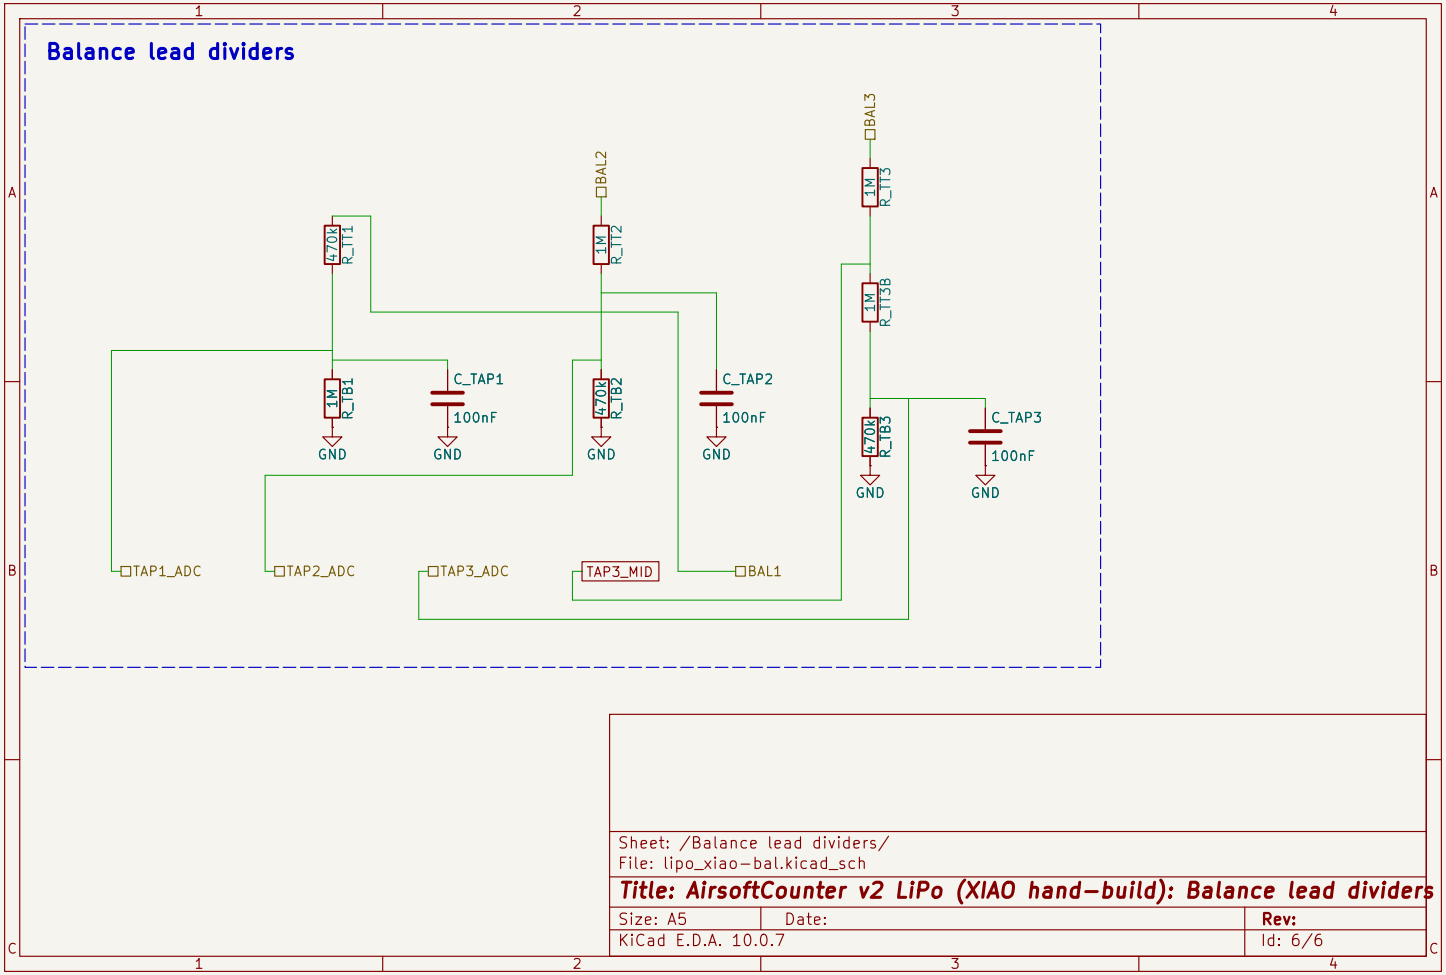

Sheet: /Balance lead dividers/
File: lipo_xiao-bal.kicad_sch

Title: AirsoftCounter v2 LiPo (XIAO hand-build): Balance lead dividers

Size: A5	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 6/6