



IO-08-09 module  
Ventilation control  
Groups

## ORION-MC

**Manual; 24Vac, Ventilation, Groups**  
04/ENG/March 2014

Manual no. HH90042902



Stationsstraat 142  
5963 AC Hegelsom

T +31 (0)77 327 5050  
F +31 (0)77 327 5051  
E [info@hotraco-horti.com](mailto:info@hotraco-horti.com)  
W [www.hotraco-horti.com](http://www.hotraco-horti.com)



Dear customer,


Thank you very much for your confidence and for choosing this Hotraco Horti product!

Hotraco Horti BV and our dealer guarantee you will receive the optimal efficiency from your investment.

If you have any questions or if you are in need of support, you can always depend on your Hotraco Horti dealer. Hotraco Horti BV has the disposal of a 24-hour service organisation, which is ready to help you during emergency situations. The phone number is +31 77 327 5050 (24 hours a day, 365 days per year).

We thank you once again for your choice and look forward with interest to any suggestions regarding our products.

With kind regards,

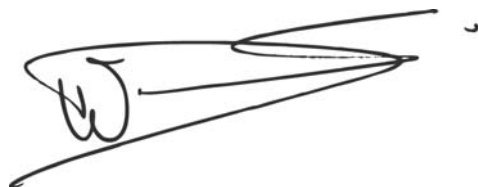

D.W. Fetter  
Director

## About this manual

Read this manual carefully before installing and operating the system. Please be aware of the safety instructions for which you are warned when starting up the computer.

All rights reserved. Reproduction of any part of this manual in any form without express written permission from Hotraco Horti BV, is forbidden. The contents of this manual are subject to change without notice. However, Hotraco Horti BV cannot give any guarantee for this manual.

This edition and the information within, has been put together with the best possible care. However, should any errors be detected, Hotraco Horti BV would greatly appreciate being informed of them.

Copyright © 2014 Hotraco Horti BV

## Safety instructions and warnings

This product should be installed by an approved, certified installer in accordance with the relevant standards (BS, ANSI, ISO, for example).

The warranty is void if this product is installed in a switchbox other than by Hotraco Horti BV. The installation incorporating this product should be equipped with an appropriate safety system that is inspected at periodic intervals (at least once a day) to verify that it is working correctly.

Please note that when the product is included in a climate control system, the oxygen content in the climate controlled area must be guaranteed at all times, including during an emergency. To guarantee the oxygen content we recommend an emergency system, which must be periodically inspected for proper operation.

An emergency system can consist of:

- an emergency power generator;
- emergency opening systems;
- provision for manual operation.

We wish to draw your attention to the following:

- The Orion-MC computer is an electronic product. Consequently, you always need to take into consideration a possible malfunction.

The alarm contacts of the various computers should be connected to a central alarm system.

Furthermore, Hotraco Horti BV recommends the installation of an additional independent alarm system (such as a min./max. thermostat).

Although Hotraco Horti BV has made every effort to ensure that adequate alarms are generated in the event of emergencies, Hotraco Horti BV cannot guarantee that all possible situations have been covered.

- We recommend that the computer remains powered up whenever possible. It is preferable to keep the computer powered up when not in use, since this will prevent condensation.
- Do not clean the computer with running water: the computer is splashproof, but not waterproof!
- This appliance is covered by the warranty and liability regulations laid down in documents including the Hotraco Horti general terms of sale governing the contract concluded for the delivery of this appliance.
- Use other than described in this manual is not permitted without express consent from Hotraco Horti BV.
- The Orion-MC is under no circumstances a safety component.
- The Orion-MC may only be operated and adjusted by persons who are familiar with the operating instructions provided in this manual.
- The person who operates or adjusts the Orion-MC must be aware of all potential dangers of the systems that the Orion-MC controls.
- A defective Orion-MC is hazardous! In the event of a fault, the systems in which the Orion-MC is used are to be taken out of service until the Orion-MC has been repaired.

- It is not permitted to connect external devices that do not have a SELV or Class II power supply (double insulated).
- Hotraco Horti wishes to point out that Machinery Directive 2006/42/EC is applicable when the Orion-MC is used to control moving systems.
- Due to the nature of the Orion-MC controllers, a controlled system can start at any time. Hotraco Horti would like to point out that this may result in hazardous situations and danger from moving parts when such a system is in operation. Therefore, people are not permitted to be in the immediate vicinity of moving parts. The moving parts must be fitted with guards and/or safety devices.
- Motors and actuators that are directly controlled via the Orion-MC may never be connected without a suitable motor protector and a lockable isolating switch.

**End of the life cycle**

The device must not be disposed of as normal waste at the end of its life cycle (European Directive 2002/96/EG). By correctly disposing of this product, you help to save valuable raw materials and prevent harmful damage to human health and the environment; damage which would be caused if this product was disposed of incorrectly.



The European Union has separate collection systems for used electronic/electrical products and batteries. Therefore, dispose of this product, batteries and accumulators at the relevant local authority or the local collection/recycling centre.

**Note** You may receive a fine if this product is disposed of incorrectly.

# Contents

|          |                                            |           |
|----------|--------------------------------------------|-----------|
| <b>1</b> | <b>Introduction</b>                        | <b>8</b>  |
| <b>2</b> | <b>Operation</b>                           | <b>9</b>  |
| 2.1      | Operating keys                             | 9         |
| 2.2      | The screens                                | 9         |
| 2.3      | Entering and adjusting settings            | 10        |
| 2.4      | System settings                            | 11        |
| <b>3</b> | <b>The Orion-MC's function</b>             | <b>12</b> |
| 3.1      | Control of the ventilation systems         | 12        |
| 3.2      | Virtual control                            | 12        |
| <b>4</b> | <b>Ventilation settings</b>                | <b>13</b> |
| 4.1      | Ventilation groups                         | 13        |
| 4.2      | Fan group settings                         | 13        |
| 4.3      | Fan settings                               | 14        |
| 4.4      | Ventilation group system settings          | 15        |
| <b>5</b> | <b>Alarms</b>                              | <b>17</b> |
| 5.1      | Alarm messages                             | 17        |
| 5.1.1    | Alarm types                                | 17        |
| 5.1.2    | Alarm display                              | 17        |
| 5.1.3    | Resolution of alarms                       | 17        |
| 5.1.4    | Alarm log                                  | 18        |
| 5.1.5    | Deleting alarms                            | 18        |
| 5.2      | Alarm messages from the IO modules         | 19        |
| 5.2.1    | Messages via RS485 (ebmBus or Modbus)      | 19        |
| 5.3      | Orion-MC Alarms                            | 19        |
| 5.4      | System alarms                              | 19        |
| 5.4.1    | General alarms                             | 19        |
| 5.4.2    | Communication alarms                       | 20        |
| 5.4.3    | System alarms (internal)                   | 20        |
| <b>6</b> | <b>Diagnostics</b>                         | <b>22</b> |
| 6.1      | Software version, serial number and module | 22        |
| 6.2      | Ventilation control                        | 22        |
| 6.3      | Communication                              | 23        |
| 6.3.1    | COM1/USB and COM2                          | 23        |
| 6.3.2    | CAN Local (IO boards)                      | 24        |
| 6.4      | SD card                                    | 24        |
| 6.4.1    | SD card settings                           | 24        |
| 6.4.2    | SD card location                           | 25        |
| <b>7</b> | <b>Installation procedure</b>              | <b>26</b> |
| 7.1      | General options                            | 26        |
| 7.2      | IO module settings                         | 28        |

|                   |                                                   |           |
|-------------------|---------------------------------------------------|-----------|
| 7.3               | Motor groups .....                                | 30        |
| 7.4               | Group settings .....                              | 30        |
| 7.5               | Release fans .....                                | 32        |
| 7.6               | Alarms .....                                      | 32        |
| <b>8</b>          | <b>Technical specifications .....</b>             | <b>33</b> |
| <b>9</b>          | <b>Connection diagrams .....</b>                  | <b>34</b> |
| 9.1               | Connection sequence .....                         | 34        |
| 9.2               | CAN-IO-08-09 .....                                | 35        |
| 9.2.1             | Digital inputs .....                              | 36        |
| 9.2.2             | Analogue outputs .....                            | 37        |
| 9.2.3             | Digital outputs .....                             | 38        |
| 9.2.4             | Alarm contact .....                               | 38        |
| 9.3               | Communication .....                               | 39        |
| 9.3.1             | CAN Local (IO modules) .....                      | 39        |
| 9.3.2             | Communication with PC or Modem via USB .....      | 41        |
| 9.3.3             | Communication with PC or Modem via RS232 .....    | 42        |
| 9.3.4             | Communication with PC or Modem via Ethernet ..... | 43        |
| <b>Appendix 1</b> | <b>Settings list .....</b>                        | <b>44</b> |
| Appendix 1.1      | Ventilation .....                                 | 44        |
| <b>Appendix 2</b> | <b>System examples .....</b>                      | <b>45</b> |
| Appendix 2.1      | Connection to the main controller .....           | 45        |
| Appendix 2.2      | Ventilation .....                                 | 46        |
| <b>Appendix 3</b> | <b>Group table .....</b>                          | <b>49</b> |

# 1 Introduction

The Orion-MC is the communication interface between a horticulture computer (the main controller) and a variety of systems in the horticultural greenhouse (ventilation).

The horticulture computer communicates with the Orion-MC using separate control signals.

The Orion-MC communicates with the IO modules via a CAN Local data bus. The Orion-MC receives control commands from the main controller. The Orion-MC interprets these control commands in terms of commands for the relevant IO module. The Orion-MC also sends the main controller feedback on the position adopted by the controlled element.

The Orion-MC also offers a number of additional functions. You can view the information transmitted by EC fans on the Orion-MC.





## 2 Operation

### 2.1 Operating keys

The Orion-MC is equipped with a number of operating keys. These keys can be classified into the following groups:

Function keys: **F1** Time and date, groups, fans

**F2**

**F3** No function

**F4** Alarms

**F5** Diagnostics

**F6** Installation procedure

Navigation keys: ➡ Move cursor



Increase value / Previous line



Decrease value / Next line



Move cursor / Correction of numeric entry

**OK** Confirm value




Next motor or motor group



Previous motor or motor group

### 2.2 The screens

The information can be shown on the display in several types of screens. The most important types of screen are explained in this Section.

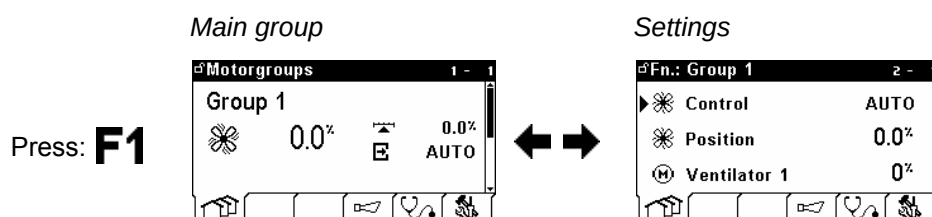

The *main group* screen displays the current data and/or the status of the controlled element. These data relate to the measured and calculated positions and can be fetched by pressing the **F1** key.

The data in the *main group screen* cannot be changed. You can change settings relating to the data displayed in the main group by pressing the ➡ key, which opens the settings screen. Press the ⬅ key to return to the *main group screen*.





A list of the possible main groups and settings is enclosed in Appendix 1. Data relating to controlled elements that have not been activated are skipped automatically and, consequently, cannot be fetched.

## 2.3 Entering and adjusting settings

Press the (**F1** or **F2**) function key to display the *main group screen*. Pressing the ➡ key opens the *settings screen*. You can then fetch the required setting using the ↑ and ↓ keys.

### Example Changing a group to manual operation mode:

1. Press **F1** or **F2**: the main group is displayed:
2. Press ➡: the settings screen is displayed.
3. Press ➡: the cursor is moved to the setting.
4. Press ↑: the setting is changed.
5. Press **OK**: the changed setting has been confirmed.

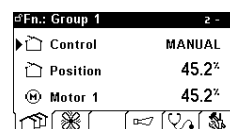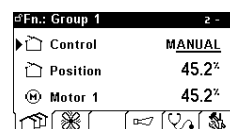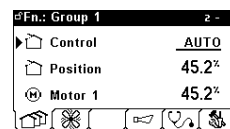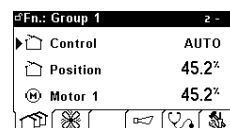

## 2.4 System settings




System settings refer to settings relating to the minor changes that can be made to the system. The basic settings have already been configured: the Orion-MC will carry out its control functions satisfactorily without any changes to the system settings.

However, you can change the system settings to tailor the Orion-MC precisely to the equipment that is to be controlled. We recommend that you make any changes in consultation with your installer.

The system settings are grouped by controlled element. The system settings for the relevant controlled element can be fetched and adjusted by opening the *settings* screen and pressing the **F6** key. The system settings that are not of relevance are not displayed.

### Example System settings of a group:

1. Press **F1** or **F2**: the main group is displayed:
2. Press **➡**: the settings screen is displayed.
3. Press **F6**: the system settings are displayed. System settings are adjusted using the procedure used for the adjustment of settings, see hoofdstuk 2.3.

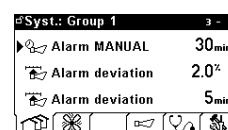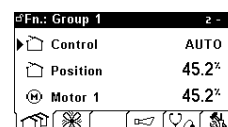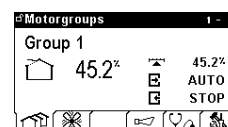


## 3 The Orion-MC's function

### 3.1 Control of the ventilation systems

The building is equipped with a number of fans (V1, V2, etc., in the following diagram). These fans are connected to Hotraco Horti IO modules via RS-485 communication. The IO modules are in turn connected to the Orion-MC. More information is enclosed in Appendix 2.2.

The fans are clustered into fan groups in the Orion-MC. Each fan group consists of one or more fans that are, in principle, controlled simultaneously and all adopt the same position. The main controller controls the fan groups and the Orion-MC ensures that the fans adopt the correct position.

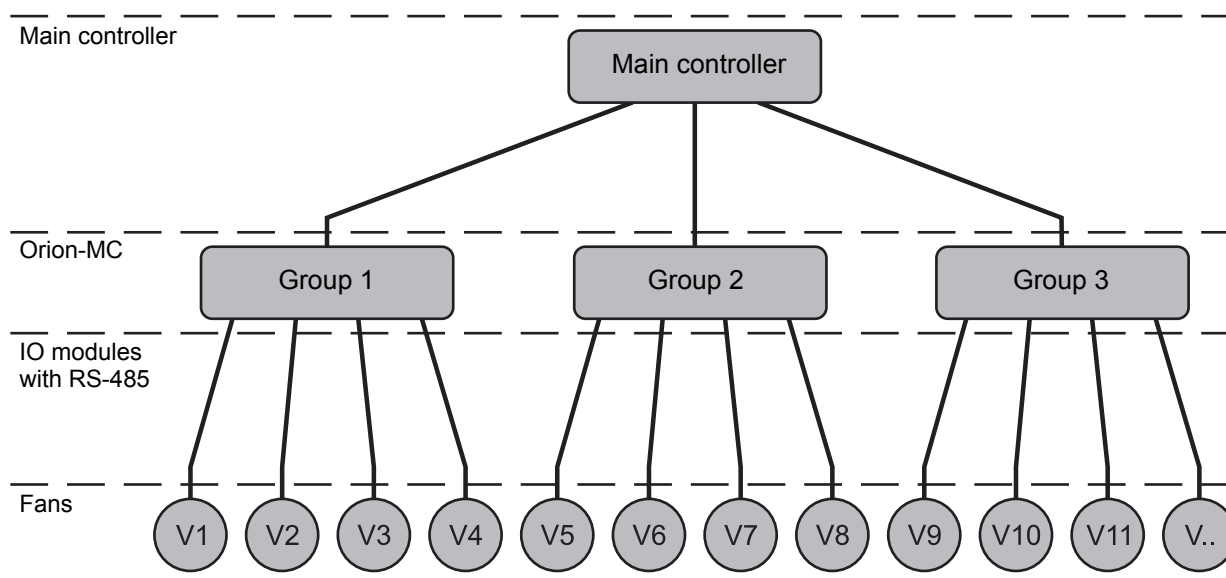

You can use the Orion-MC to control all the fans in a group or, if you so wish, to control a single fan.

### 3.2 Virtual control


It is possible independent of the setpoint of the motorgroup, to shut of or switch on fans in this group. Up to maximal 12 digital inputs are available. All available fans can be assigned to one or more digital inputs.

The horticulture computer serves as the controller and determines the required action for each group. The horticulture computer sends the relevant action to the Orion-MC. The Orion-MC simulates this action and sends the horticulture computer feedback on the simulated action (= virtual control). The horticulture computer interprets this feedback as confirmation that the required action has been carried out. At the same time the Orion-MC controls the IO modules by sending commands to ensure that the group carries out the required action. The relevant units send feedback on the positions to the Orion-MC. The action is stopped once the required position has been reached or an alarm is generated if the required position is not reached.

## 4 Ventilation settings

### 4.1 Ventilation groups

Press **F1** to display the main **group** screen. You can use the **↑↓** keys to browse through the groups.

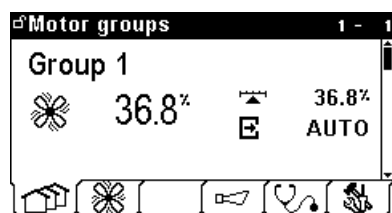

This screen displays the status of a **group** with fans.

**36.8%** = The average ventilation position of all fans in the group. This can differ from the required position (setpoint).


 = The required ventilation position for the group, calculated by the main controller.

**E** = The status of the group in the Orion-MC:

- AUTO** The group is set to automatic operation mode. The main controller determines the required position and the Orion-MC ensures that the fans in the group adopt the required ventilation position.
- MANUAL** The group is set to manual operation mode. The group can be controlled via the settings in the Orion-MC.
- OFF** The group is switched off: the ventilation position is 0%.

### 4.2 Fan group settings

Press **➡** in the main group to display the settings screen. You can use the **◀▶** keys to browse through the groups.

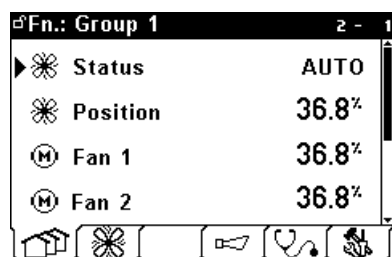


This screen displays the settings of the **fan group**.

- ✱ = *Operation*: Change the status of the group:
  - AUTO* The group is controlled automatically; the main controller determines the required ventilation position and the Orion-MC ensures that the fans rotate at the correct speed.
  - MANUAL* The group is controlled manually; the group can be controlled (using the *position* setting) from the Orion-MC.
  - OFF* The group is switched off: the ventilation position is 0%.
- ✱ = *Position*: The required ventilation position for the group, calculated by the main controller. When the *Operation* of the group is set to *MANUAL* then you can set the ventilation position here.
- Ⓜ = *Fan ...* : The current ventilation position of each fan. This example is of a group with two fans. Press ➡ to view the **fan** settings (see chapter 4.3).

## 4.3 Fan settings

The settings of a single **fan** are fetched as follows.

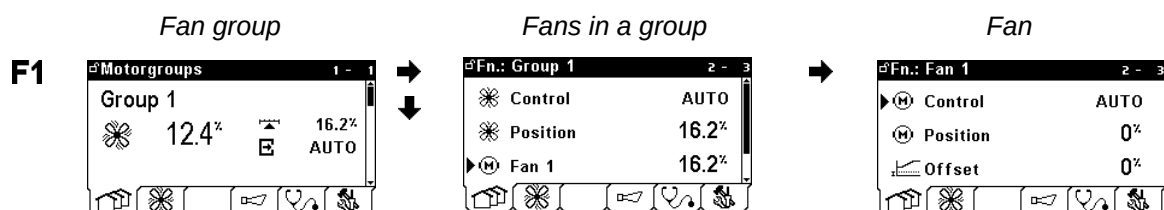

You can use the ◀ ▶ keys to browse through the fans. The screen displays the status of a single fan.

- Ⓜ = *Operation*: The operation mode of the fan can be set as follows:
  - AUTO* The fan is set to automatic operation mode. The Orion-MC makes sure that the fan rotates at the correct speed.
  - MANUAL* The fan is set to manual operation mode. The required ventilation position can be set under *Position*.
  - OFF* The fan is switched off: the ventilation position is 0%.
- Ⓜ = *Position*: The fan's ventilation position. When the *Operation* of the fan is set to *MANUAL* then you can set the ventilation position here.

 = **Offset**: It is possible that a fan in a group needs to be set to a higher or lower ventilation position than the other fans. If necessary, you can set an incremental increase or decrease in the ventilation position of each fan (the *offset*). The *offset* is enabled solely in the automatic operation mode. **Example**

| Fan   | Offset | Required position | Actual position |
|-------|--------|-------------------|-----------------|
| No. 1 | 10%    | 70%               | 80%             |
| No. 2 | 0%     | 70%               | 70%             |
| No. 3 | -8%    | 70%               | 62%             |
| No. 4 | 0%     | 70%               | 70%             |
| No. 5 | 8%     | 70%               | 78%             |

## 4.4 Ventilation group system settings

In the **ventilation group** settings screen, press **F6** to fetch the system settings. You can use the   keys to browse through the ventilation groups.

### SYS Description

|                                                                                     |                                                           |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------|
|  | Alarm, manual                                             |
|  | Alarm variance (min. variance before alarm is generated)  |
|  | Alarm variance (min. wait time before alarm is generated) |
|  | Alarm, urgent                                             |
|  | Minimum                                                   |
|  | Maximum                                                   |

| Default | User |
|---------|------|
| 30 min  | min  |
| 2%      | %    |
| 5 min   | min  |
| 1x      | x    |
| 0%      | %    |
| 100%    | %    |

### Alarm, manual

When the **ventilation group** is still set to manual operation mode on the Orion-MC after the set time then the group's alarm contact is de-energised. This function can be disabled by setting *alarm, manual* at 0 minutes.

### Alarm variance

You can configure the Orion-MC to generate an alarm in the event that a fan is not at the required ventilation position after the set *wait time*.

### Alarm, urgent

You can make a distinction between the alarms generated for a group of fans, namely between an alarm generated by one fan (less urgent) and an alarm generated by a number of fans (more urgent). Two alarm contacts are then assigned (see chapter 7.4). The urgent alarm contact is de-energised only when the number of fans generating an alarm is greater than the number set under *alarm, urgent*.

### Example

A system is equipped with 140 fans: 10% of these fans can fail without causing disruption to the process. *alarm, urgent* should then be set to 14x: the urgent alarm contact is de-energised only once more than 14 fans generate an alarm.

### Minimum and maximum

The *minimum* and *maximum* settings can be used to limit the fans' ventilation position range. When the required ventilation position is below the *minimum* then the ventilation position is equal to the *minimum* setting. When the required ventilation position is above the *maximum* then the ventilation position is equal to the *maximum* setting. These limits are also applicable to fans that fall outside these limits as a result of the *offset* settings for the fans (see chapter 4.3).



## 5 Alarms

### 5.1 Alarm messages

#### 5.1.1 Alarm types


The Orion-MC uses the following types of alarms (**F4**).

-  = Soft alarm. The alarm contacts on the IO boards remain energised.
-  = Several soft alarms.
-  = Hard alarm. The alarm contacts on the IO boards are de-energised.
-  = Several alarms, including at least one hard alarm.

Each IO board has a separate alarm contact that is de-energised in the event of a communication failure, power failure and a **hard alarm**. The alarm contact activates, for example, a claxon, revolving lamp and/or telephone dialler. Your installer will configure the necessary settings for additional alarm contacts during the installation procedure. The following options are available:

- Each group has a separate alarm contact that is de-energised in the event of a **hard alarm** relating to the relevant group.
- A separate alarm contact that is de-energised on each **soft alarm**.

#### 5.1.2 Alarm display

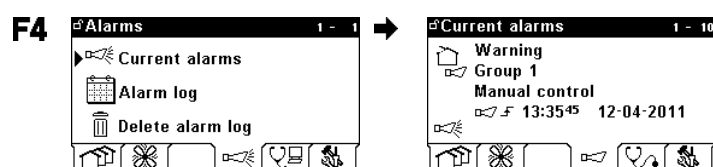

#### 5.1.3 Resolution of alarms


Use the following procedure in the event of an alarm:

1. Press **F4** to view which alarm has been generated. When there are several alarms then you can use the **↓↑** keys to browse through the alarms.

2. Most alarms can be converted into another type of alarm. You do so by pressing **OK** for the alarm you wish to convert and then using the **↓↑** keys to change the type of alarm.
  -  = **Soft alarm**: The alarm has yet to be resolved, but the alarm contacts on the IO boards are re-energised. The alarm contact of the group remains de-energised. The separate alarm contact for soft alarm is de-energised.
  -  = **Suppressed soft alarm**: The alarm has not yet been resolved but will no longer be generated. The alarm contact of the group remains de-energised. When the alarm contact for soft alarm is de-energised then this contact is re-energised.
  -  = **Hard alarm**: When the alarm contact for the group has been de-energised then this remains de-energised. When the alarm contact for soft alarm is de-energised then this contact is re-energised. The alarm contacts on the IO boards are de-energised.
  -  = **Deleting an alarm because it has been resolved**: If the alarm has been resolved then you can delete the alarm to restore the control.
3. Investigate the cause of the alarm.
4. Solve the problem in a **safe manner**.
5. Many alarm messages will be cancelled automatically once the problem has been resolved. When necessary, alarms will be cancelled only once you have deleted the message with the  command. When an alarm cannot be cancelled then there is still a problem.
6. Once all alarms have been cancelled *No current Alarms* is displayed in the screen.


### 5.1.4 Alarm log

Once an alarm has been resolved then the alarm message is saved in *Alarm log*. The time at which the alarm was resolved is added to the last line. You can use the keys to browse through the alarm messages.

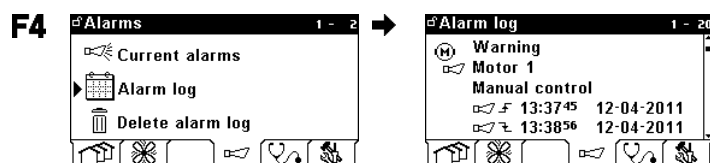

### 5.1.5 Deleting alarms

You can use *Delete alarm log* to delete the alarms.

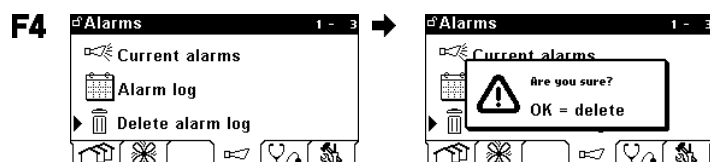

## 5.2 Alarm messages from the IO modules

### 5.2.1 Messages via RS485 (ebmBus or Modbus)

The control board of a single fan can send the following alarm messages. Consult the fan documentation to resolve the problem. Once the problem has been resolved then the alarm can be deleted in the Orion-MC:

1. Call the alarm in *current alarms* (see also chapter 5.1.3).
2. Press **OK** once you see the alarm displayed on the screen.
3. Delete the alarm with **OK** .

When there is more than one alarm message then you can delete all the alarm messages using the *Reset all* diagnostics function, see hoofdstuk 6.2.

## 5.3 Orion-MC Alarms

| Description                                                                                                        | Type          | Cause                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
|  Fan 'xx' Manual mode.          | Alarm/Warning | Fan number 'xx' is set to manual operation mode (in the Orion-MC). The alarm contact will be de-energised after a while (see system settings).     |
|  Group 'xx' Manual mode.        | Alarm/Warning | The group number 'xx' is set to manual-operation mode in the Orion-MC. The alarm contact will be de-energised after a while (see system settings). |
|  Fan 'xx' Position not reached. | Alarm         | Fan number 'xx' has a different speed (see system settings).                                                                                       |

## 5.4 System alarms

### 5.4.1 General alarms

| Description                                                                                            | Type    | Cause                                                             |
|--------------------------------------------------------------------------------------------------------|---------|-------------------------------------------------------------------|
|  Orion switched off | Warning | The software has switched the computer off at the specified time. |

The computer has been switched off and generates an alarm. Press any key to suppress the alarm and to convert the alarm into a warning. No alarms from the controllers are shown while the computer is switched off.

| Description                                                                                                          | Type    | Cause                                                                          |
|----------------------------------------------------------------------------------------------------------------------|---------|--------------------------------------------------------------------------------|
|  System restart                     | Warning | The computer has been restarted at the specified time.                         |
|  Settings deleted                   | Alarm   | The settings have been deleted at the specified time (Installation procedure). |
|  Options deleted                    | Alarm   | The options have been deleted at the specified time (Installation procedure).  |
|  Alarm deleted                      | Warning | The alarms have been deleted at the specified time (See chapter 5.1).          |
|  Options restored                   | Alarm   | Someone has restored the options.                                              |
|  Settings restored                  | Alarm   | Someone has restored the settings.                                             |
|  Options + settings restored        | Alarm   | Someone has restored the options and settings.                                 |
|  Options (+ settings) not restored | Alarm   | The options and settings that have been restored are not correct.              |

### 5.4.2 Communication alarms

| Description                                                                                                        | Type  | Cause                                                                                                                                                                                                                    |
|--------------------------------------------------------------------------------------------------------------------|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Board IO-xx-xx [xx] not found. | Alarm | The Orion has no connection with the relevant IO board. Possible causes: <ul style="list-style-type: none"> <li>• Communication interrupted.</li> <li>• Broken contact.</li> <li>• CAN bus terminator defect.</li> </ul> |
|  No alarm contact.              | Alarm | No alarm contact assigned. The IO boards are not configured correctly (Installation procedure).                                                                                                                          |
|  Fan 'xx' not found.            | Alarm | There is a communication problem with the RS485 connection (ebmBus, Modbus on the IO-05-07 board).                                                                                                                       |


### 5.4.3 System alarms (internal)

The Orion-MC tests a number of internal functions that are directly applicable to the computer. On detecting an error the computer generates a system alarm displaying one of the following messages. Always warn your installer in the event of a system alarm!

| <b>Description</b>                                                                                                | <b>Type</b> | <b>Cause</b>                                                         |
|-------------------------------------------------------------------------------------------------------------------|-------------|----------------------------------------------------------------------|
|  Options corrupted               | Alarm       | System setup no longer correct.                                      |
|  Settings corrupted              | Alarm       | System settings are no longer correct.                               |
|  Minimum/maximum value corrupted | Warning     | The stored minimum and maximum values are no longer correct.         |
|  I <sup>2</sup> C error          | Alarm       | Internal communication problem in the Orion.                         |
|  EEPROM error                    | Alarm       | Internal communication problem with the EEPROM settings and options. |
|  RTC error                       | Warning     | Problem with the real-time clock (program flow).                     |
|  TIMER error                     | Warning     | Internal clock is not working correctly.                             |
|  HTRAP error                     | Warning     | Internal memory is not working correctly.                            |
|  PLL error                      | Warning     | PLL circuit is not working correctly.                                |
|  IO board ADC error            | Warning     | Analog/Digital converter not working properly.                       |

## 6 Diagnostics

Pressing the **F5** diagnostics keys accesses extra functions. You can use these functions to access information about the system elements. This information is clustered by controlled group. The diagnostic functions are displayed by pressing the ➡ key for the relevant element.

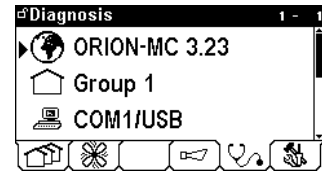

You can also fetch information about the various communication lines. Only the installed communication lines are displayed (See chapter 6.3).

You can also use the diagnostics screen to read the data of a SD card or write data to a SD card. More information is given in chapter 6.4


### 6.1 Software version, serial number and module

#### Software version

The diagnostics opening screen displays the software's version (in this example Orion-MC 3.22). Since the majority of this computer's functions are determined by the software it is important that the number in front of the decimal point (in this example 3.22) is in agreement with the number of this manual (see the version number on the front page + footer texts).


#### Serial number

Each Orion is assigned a unique serial number. When the cursor is on *Orion-MC*, pressing the ➡ key displays the screen with the serial number. This can be applicable to a software update.

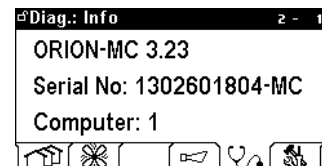

#### Module


You can amend or add a module (for example, CANopen communication) by entering a code under *Module* (↩).

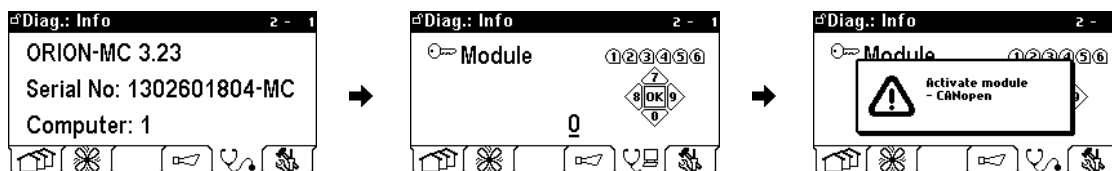

**Note** You can request the code from your supplier.

### 6.2 Ventilation control

Pressing on the ➡ key when the cursor is on *Group* fetches diagnostics information for the group with fans. You can use the ↑↓ keys to select one of the fans in the group. You cannot make any changes.

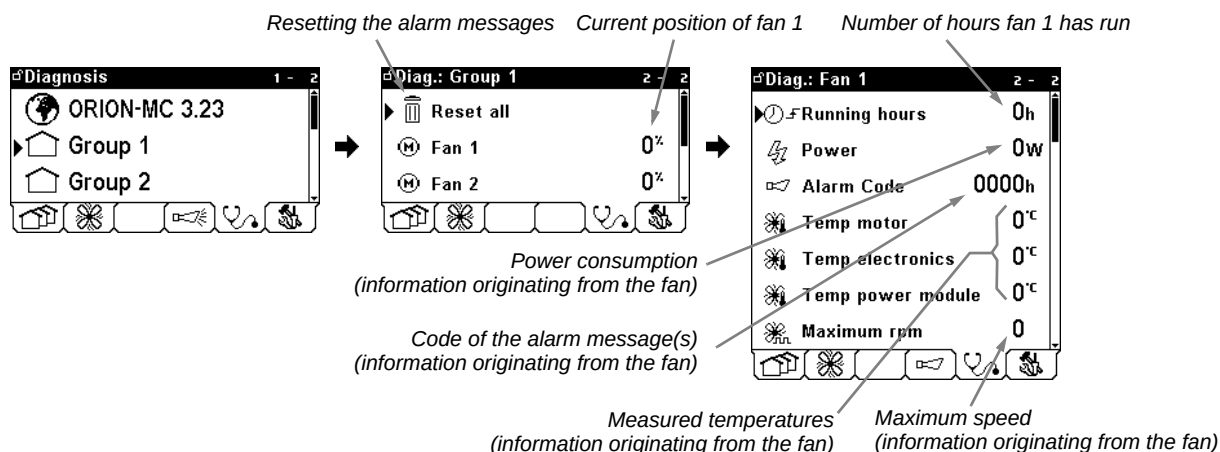


### Note

- It is possible that the diagnostics information is not displayed directly when the fan does not send any information or sends other information.
- A speed of 100% indicates that the fan is rotating at maximum speed.


### Reset all

It is possible that different alarm messages are sent to the Orion-MC when the system includes a large number of fans. Once the failure has been resolved then the alarm messages can be deleted with the *Reset all* function. Confirm the reset with the **OK** key.

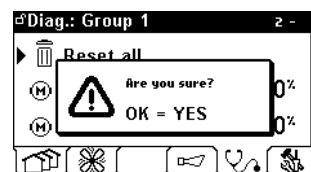

## 6.3 Communication

### 6.3.1 COM1/USB and COM2

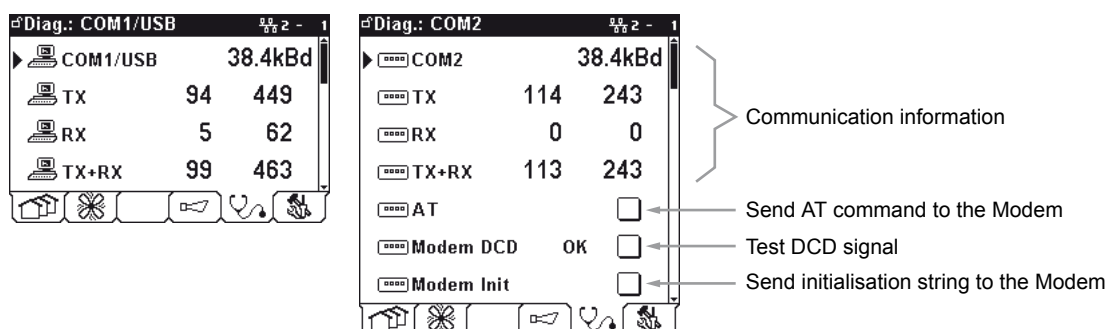

### 6.3.2 CAN Local (IO boards)

| Diag.: CAN LOCAL 2 - 1 |   |     |
|------------------------|---|-----|
| TXOK                   | 1 | 225 |
| RXOK                   | 1 | 241 |
| TXOK+RXOK              | 0 | 459 |
| BOFF                   |   | 0   |
| EWRN                   |   | 0   |
| Stuff error            |   | 0   |
| Form error             |   | 0   |
| Ack error              |   | 0   |
| Bit1 error             |   | 0   |
| Bit0 busoff error      |   | 0   |
| Bit0 normal error      |   | 0   |
| Crc error              |   | 0   |

Communication information

## 6.4 SD card

### 6.4.1 SD card settings

| Diagnosis 1 - 40                                                       |   | Diag.: SD-CARD 2 - 1                                                                    |                |
|------------------------------------------------------------------------|---|-----------------------------------------------------------------------------------------|----------------|
| <div> <div>SD</div> <div>SD-CARD</div> <div>Display Green</div> </div> | → | <div> <div>SD</div> <div>SD-CARD</div> <div>active</div> </div>                         | SD card status |
|                                                                        |   | <div> <div>SD</div> <div>SD-CARD</div> <div>927792 991488</div> </div>                  |                |
|                                                                        |   | <div> <div>SD</div> <div>AL.001</div> <div>SIZE 120061 19.42.52 06-06-2008</div> </div> |                |
|                                                                        |   | <div> <div>SD</div> <div>AL.001</div> <div>SIZE 65908 11.13.40 26-05-2010</div> </div>  |                |
|                                                                        |   | <div> <div>SD</div> <div>OPTA.001</div> <div>SIZE 0 00:00.00 00-00-0</div> </div>       |                |
|                                                                        |   | <div> <div>SD</div> <div>SETP.001</div> <div>SIZE 0 00:00.00 00-00-0</div> </div>       |                |
|                                                                        |   | <div> <div>SD</div> <div>SETP.001</div> <div>SIZE 0 00:00.00 00-00-0</div> </div>       |                |

Status of the file

File information

Files on the SD card

#### Changing the SD card status

Press the **→** key when the cursor is on **SD CARD**. Change the status with the **↑↓** keys. Confirm with the **OK** key. You can assign the following statuses to the SD card:

**Remove:** The SD card can be removed safely from the Orion-MC.

**Ask remove:** Data is still being written to the card, the SD card cannot be removed yet.

**Current:** The SD card can be used to save or restore data.



### Changing the status of the file

Press the **➡** key when the cursor is on the file. Change the status with the **⬆** **⬆** keys. Confirm with the **OK** key. You can assign the following statuses to the SD card:

-  No action takes place.
-  The data are stored on the SD card. With log data the data are supplemented continually and the **➡** symbol is always displayed. With one-off data (such as options) the symbol changes back to  once the data has been saved.
-  The data are read out from the SD card and send to the Orion (for example, options). Once the read-out has been completed the symbol changes back to .


### Data on the SD card

Alarm list (AL), options (OPT) and setpoints (SETP).

## 6.4.2 SD card location


The SD card is in the case of the Orion-MC. Open the case to access the SD card. The SD card is located on the CPU board. Carefully slide the SD card into or out of the holder. Only FAT-16 or FAT-32 format SD cards can be used: SDHC cards cannot be used.

**Note** Make sure that the status of the SD card is set to *Remove* (see chapter 6.4.1).

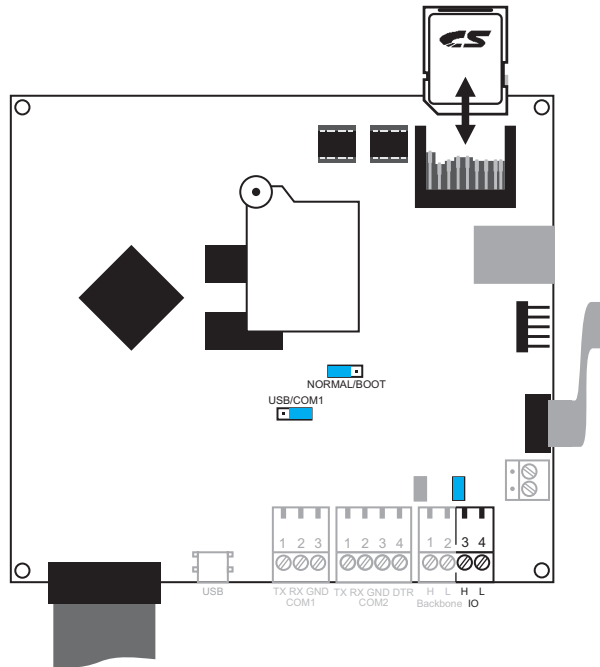


## 7 Installation procedure

Once the Orion-MC has been connected in accordance with the connection diagrams (see chapter 9) then you can enable the required options. Pressing the **F6** key when the main group screen is displayed opens the following screen:

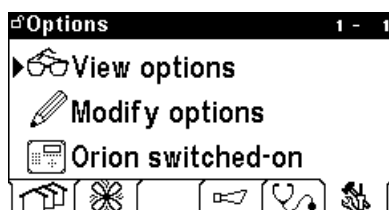

This screen can be used to view and/or change the options and switch the Orion-MC on or off with the software. Moving the cursor to *View options* or *Change options* and then pressing **➡** opens the option groups, provided that these are not secured with an access code. You always have access to *View options*, even when changes cannot be made without an access code. The access code is set in the *General* group (see chapter 7.1). The option groups that can be configured during the installation procedure are:

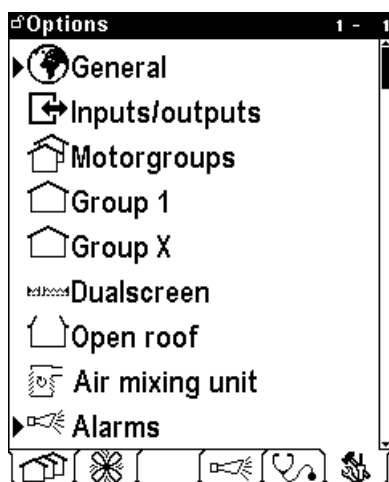

**Note** Your screen may differ from the screen shown above: solely the option groups of the available modules are displayed!

You can page through the various option groups by pressing **↓** or **↑** and then pressing **➡**. In the options screen you can use **↓** and **↑** to browse through all questions: press **➡** to change the option settings.

Fill in the configuration of each option group in the charts shown on the following pages.

### 7.1 General options

The general options include the language, communication settings and access codes.

## General

### Options, general

Work through options?

|                       |   |
|-----------------------|---|
| N                     | Y |
| Language?             |   |
| Delete options? (*1)  |   |
| Delete setpoints?     |   |
| Brightness?           |   |
| LCD dimming?          |   |
| Computer number:      |   |
| COM1/USB Yes/No (*2)  |   |
| N                     | Y |
| COM1/USB kBd          |   |
| COM1/USB Modem Yes/No |   |
| N                     | Y |
| ATS0=                 |   |
| COM2 Yes/No (*3)      |   |
| N                     | Y |
| COM2 kBd              |   |
| COM2 Modem Yes/No     |   |
| N                     | Y |
| ATS0=                 |   |
| Ethernet Yes/No (*4)  |   |
| N                     | Y |
| Port:                 |   |
| IP: . . .             |   |
| Mask: . . .           |   |
| Gate: . . .           |   |
| User's code: (*5)     |   |
| Installer's code:     |   |
| PC code:              |   |
| Options OK?           |   |

Options

- (\*1) Set the required language. If so required, you can delete existing options and setpoints. You can adjust the brightness of the screen. Activating LDC dimming will automatically dim the screen after 1 minute's inactivity.
- (\*2) Enable the COM1 or USB port here. In addition, set the communication speed (default: 38.4 kBd). Under Answer (ATS0=), set the number of rings before the modem answers.
- (\*3) Enable the COM2 port here. In addition, set the communication speed (default: 38.4 kBd). Under Answer (ATS0=), set the number of rings before the modem answers.
- (\*4) Enter the network settings here.  
Port = the port number.  
IP = the IP address of the Orion  
Mask = Definition of the local network.  
Gate = IP address of the router.  
Use the ← and → keys to browse through the settings. You can use the ↓ and ↑ keys to change the figures.
- (\*5) A password consists of digits. When the password is to be entered the keys of the Orion are assigned the numerical values displayed on the screen (F1=1, F2=2, ↑=7, etc.). Confirm the entry with **OK**. Under Repeat, enter your selected password again.  
Passwords may not begin with 0 and must consist of at least 1 and at most 4 digits.  
Entering 0 (↓) disables the password function.  
The user's access code can be used to disable access to the control settings and installation procedure. The settings are automatically disabled once you have not pressed any key for 10 minutes.  
The installer's access code can be used to secure access to the installation procedure.  
The PC code secures logging in via PC software.

## 7.2 IO module settings

You use the IO modules options to configure the inputs and outputs.

**Example** You have connected an analogue control signal from the main controller to a IO-05-07 module. You now need to specify the signal received by this input in the IO options.



**Options: IO**

IO-05-07[-] (\*6)

IO-08-09[1]

IO-EKU[-]

IO-H1MC[-]

IO-H1MC[-]

(\*6) The standard Orion-MC is supplied with one integral IO-08-09. You can connect additional IO modules via CAN Local (see chapter 9.3.1).

**Options: IO-05-07**

Work through options?

N Y

Number of IO module: 1..16

Analogue inputs: (\*7)

Analogue outputs: (\*8)

Digital outputs: (\*9)

RS485 Yes/No (\*10)

N Y

Baud rate: kBd

Parity: Non / Even / Odd

Alarm contact Yes/No (\*11)

Copy options to IO number: (\*12)

Options OK?

Y

**Options: IO**

(\*7) Enter the CAN Local address configured on the IO module here.

(\*8) Press **OK** to set the minimum and maximum of the output (voltage).

(\*9) Press **OK** to test the output with the **↓↑** keys.

(\*10) Enable the RS485 communication (ebmBus or Modbus) of the IO module here. Set the data speed and parity to the correct values.

- ebmBus; 9.6kBd, no parity  
- Modbus Ziehl-Abegg; 19.2kBd, even parity  
- Modbus EBM; 19.2kBd, even parity

(\*11) Yes = the alarm contact of this module is de-energised in the event of a hard alarm. No = the alarm contact is de-energised only when the CAN-Local communication is broken or in the event of a power failure.

(\*12) The options of identical IO modules are often the same. You can use *Copy options* to copy the IO module's settings.

Enter the CAN Local address of the new IO module and confirm with **OK**. Confirm again with **OK**. The new IO module will then be created with the same options. You can then continue immediately with the options of the newly-created IO module.

## Options: IO-08-09

Work through options?

N

Y

Number of IO module:

1..8

Digital inputs:

|  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|

(\*13)

Analogue outputs:

|  |  |  |  |  |
|--|--|--|--|--|
|  |  |  |  |  |
|--|--|--|--|--|

(\*14)

Digital outputs:

|  |  |  |  |  |
|--|--|--|--|--|
|  |  |  |  |  |
|--|--|--|--|--|

(\*15)

Alarm contact

Yes/No

(\*16)

Copy options to IO number:

(\*17)

Options OK?

Y

## Options: IO

(\*13) The current value of the input is shown in the display (ON or OFF).

(\*14) Press **OK** to configure the output. You can select from a 0-5 V or 0-20 mA signal (**↓↑**). Press **OK** to set the minimum and maximum of the output.

(\*15) Press **OK** to test the output with the **↓↑** keys.

(\*16) Yes = the alarm contact of this module is de-energised in the event of a hard alarm. No = the alarm contact is de-energised only when the CAN-Local communication is broken or in the event of a power failure.

(\*17) The options of identical IO modules are often the same. You can use *Copy options* to copy the IO module's settings.

Enter the CAN Local address of the new IO module and confirm with **OK**. Confirm again with **OK**. The new IO module will then be created with the same options. You can then continue immediately with the options of the newly-created IO module.

## Options: H1MC/H2MC/EKU (\*18)

Work through options?

N

Y

Number of IO module:

1..32

(\*19)

Motor control:

|  |  |  |  |  |
|--|--|--|--|--|
|  |  |  |  |  |
|--|--|--|--|--|

(\*20)

Alarm contact

Yes/No

(\*21)

Options OK?

Y

## Options: IO

(\*18) The options for the EKU, H2MC and H1MC are virtually identical.


(\*19) Enter the CAN Local address configured on the IO module here.

(\*20) Enter the correct type of motor.  
Window motor (100% = open, 0% = closed)  
Screen motor (100% = open, 0% = closed)  
You can also view the current setting for the position here.

(\*21) Yes = the alarm contact of this module is de-energised in the event of a hard alarm. No = the alarm contact is de-energised only when the CAN-Local communication is broken or in the event of a power failure.

### 7.3 Motor groups


A motor group consists of motors (fans that are controlled simultaneously).  
See also Appendix 2. Configure the number of motor groups here.

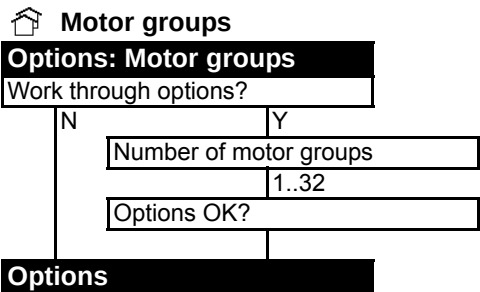


### 7.4 Group settings

You can configure the options for each group, namely:

- window motors (airing)
- screen motors
- fan motors

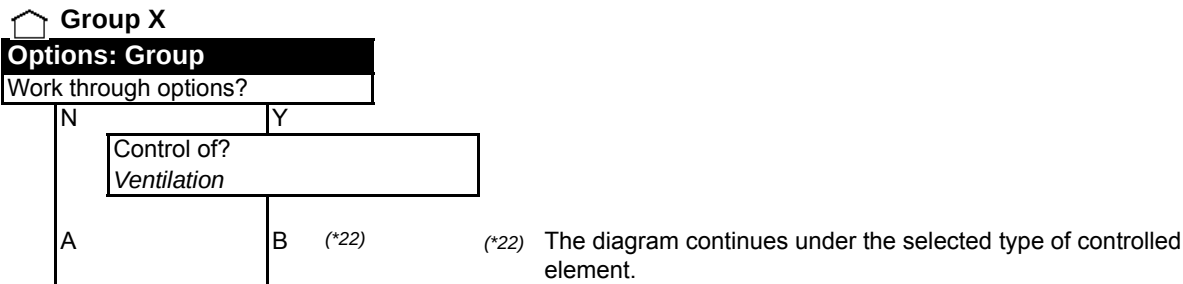


#### Ventilation

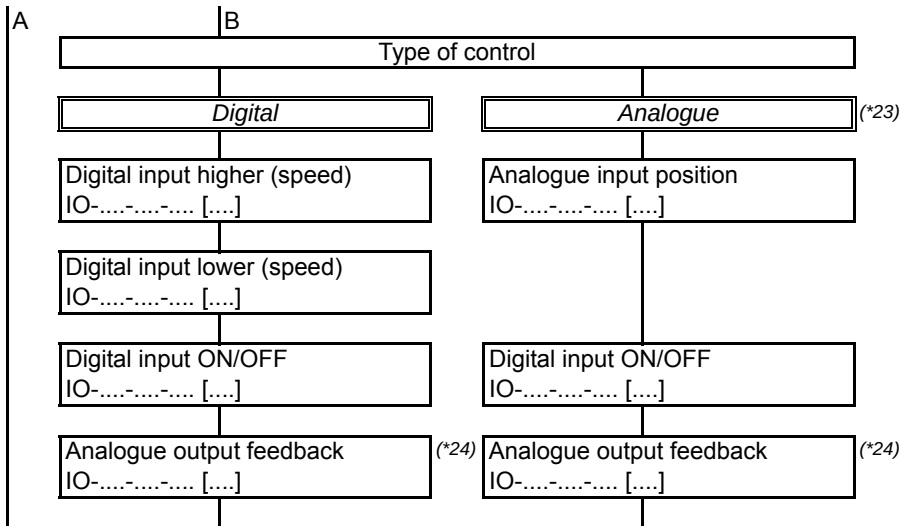

|                         |                          |       |
|-------------------------|--------------------------|-------|
| Running time            | sec                      | (*25) |
| Number of motors:       |                          | (*26) |
| Communication type:     | ebmBus/Modbus            |       |
| Motors                  | IO-....-....-.... [....] |       |
| Change address:         | 1 → 1                    | (*27) |
| Position                | %                        | (*28) |
| Alarm contact for group | IO-....-....-.... [....] | (*29) |
| Alarm contact, urgent   | IO-....-....-.... [....] |       |
| Options OK?             | Y                        |       |

## Options

- (\*23) Specify whether the control signals from the main controller are analogue or digital here. These options are not applicable to CANopen or BACnet communication.
- (\*24) Specify the analogue output here when feedback to the main controller is necessary.
- (\*25) Set the running time needed to control the fans from 0% to 100% here. The running time is of importance to the feedback to the main controller (the accuracy of the feedback increases with longer running times).
- (\*26) Configure the number of fans in the group here, together with the communication protocol that is used (ebmBus or Modbus) and the IO modules (CAN-IO-05-07[...]) to which the relevant fans are connected. The fans are numbered sequentially. When, for example, group 1 contains 20 fans then the fans are numbered from 1 to 20. When, for example, group 2 contains 14 fans then these fans are numbered from 21 to 34. The next fan in group 3 will then be 35. See also Appendix 2.2. **Each group may not have more than 4 different RS484-busses!**
- (\*27) Configure the data bus address of the fans here. For the purposes of communication with the Orion-MC the address of the fan **needs to be** equal to: *the number of the fan + 1*. **Example** fan number 1 is assigned the address 2 (1+1), fan number 14 is assigned the address 15 (14+1). See also Appendix 2.2. Example: changing address 3 to address 8.

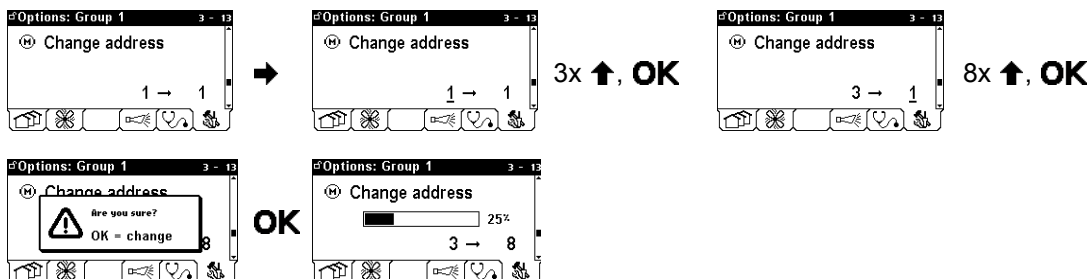

- (\*28) This option is applicable when the main controller controls the position of the ventilation on the basis of a running time. You will then need to configure the main controller's output position. **Example** The main controller calculates that the setting of the ventilation should be 45.3%. Enter 45.3% under *position*.
- (\*29) You can configure two alarm contacts, namely a general alarm contact and an urgent alarm contact. The general alarm contact is de-energised in the event of a failure. The urgent alarm contact is de-energised only when a specific number of fans report a failure.

## 7.5 Release fans



### Release fans

**Options: Release fans**

Work through options?

N J

Amount of groups (\*30)

1...12

Release groups (\*31)

Table groups (\*32) Example

|    | 1 | 2 | 3 | 4 |
|----|---|---|---|---|
| 1  | • |   |   |   |
| 2  |   | • |   |   |
| 3  | • |   |   |   |
| 4  |   | • |   |   |
| 5  | • |   | • |   |
| 6  |   | • | • |   |
| 7  | • |   |   |   |
| 8  |   | • |   |   |
| 9  | • |   |   |   |
| 10 |   | • |   |   |

Fans (\*33)

IO-...-...-... [....]

Options OK?

J

**Options**

(\*30) Fill out the amount of groups.

(\*31) Assign the release of the groups to the right digital input of the IO-board.

(\*32) Fill out the table: column1, fan number; row 1, group.

Adot • represents a fan in a group. Fans can be attached to one or more groups.

(\*33) Show on which IO-module the fans are connected.

## 7.6 Alarms



### Alarms

**Options: Alarms**

Work through options?

N Y

Digital output soft alarm (\*34)

IO-...-...-... [....]

**Options**

(\*34) You can assign a contact to a soft alarm here. This contact will then be de-energised in the event of a soft alarm.



## 8 Technical specifications

### Electrical

|                      |                                |
|----------------------|--------------------------------|
| Power supply         | : 24 Vac $\pm 10\%$ , 50/60 Hz |
| Power consumption    | : max. 15 VA                   |
| Control current fuse | : T 1A (dimensions 5 x 20 mm)  |

### CAN Local communication (between Orion-CPU and IO modules)

|                |                                                               |
|----------------|---------------------------------------------------------------|
| Cable required | : CAN-BK, 1x twisted pair 1x 2x 0.64 mm <sup>2</sup> + shield |
| Connections    | : CAN_High, CAN_Low, Shield                                   |
| Maximum length | : 500 metres @ 100 kbs                                        |

### RS232 communication (between Orion-CPU and PC/MODEM)

|                |                          |
|----------------|--------------------------|
| Cable required | : MSK-9                  |
| Maximum length | : 15 metres @ 38400 baud |

### USB communication (between Orion-CPU and PC)

|                |                                           |
|----------------|-------------------------------------------|
| Cable required | : USB with USB B mini plug and USB A plug |
| Maximum length | : 5 metres @ 115 kbs                      |

### Digital inputs (8)

|                   |                                              |
|-------------------|----------------------------------------------|
| Digital input 1-8 | : NPN / PNP sensor 12..24Vdc 8mA max. 10 kHz |
|-------------------|----------------------------------------------|

### Analogue outputs (4)

|                     |                                             |
|---------------------|---------------------------------------------|
| Analogue output 1-4 | : 0-5 Vdc, max. 1 mA / 0-20 mA, max. 10 Vdc |
|---------------------|---------------------------------------------|

### Digital outputs (4x Contact, 1x Alarm)

|                      |                    |
|----------------------|--------------------|
| Relay output K1...K4 | : 0,5 A, 24 Vac/dc |
| Alarm relay          | : 0,5 A, 24 Vac/dc |

### Power supply, 24 VDC

|                |                        |
|----------------|------------------------|
| Output Current | : 24 Vdc / max. 200 mA |
|----------------|------------------------|

### CE Directives

|                                        |                                                                                                    |
|----------------------------------------|----------------------------------------------------------------------------------------------------|
| EMC                                    | 2004/108/EC                                                                                        |
| Low voltage                            | 2006/95/EC                                                                                         |
| Complies with UL60950-1                | (Information Technology Equipment - Safety-Part1:general requirements) USE ONLY FOR SELV VOLTAGES. |
| Complies with FR4;<br>ULG4-V0;24Vac;1A | (LIMITED<240VA;fused 1A)                                                                           |

### Mechanical

|                        |                      |
|------------------------|----------------------|
| Ambient temperature    | : 0...40 °C          |
| Dimensions (H x W x D) | : 268 x 220 x 110 mm |
| Housing                | : IP 54 plastic      |
| Weight                 | : approx. 3 kg       |

## 9 Connection diagrams

### 9.1 Connection sequence

Read these instructions thoroughly before you begin work on the assembly and connections.


This product should be installed by an approved installer with certification according to the relevant prevailing standards (for example, NEN-ISO). The installer must possess the knowledge of and experience with electronic control equipment required to install the Orion-MC.

**IMPORTANT!** For your safety, you must work through the installation procedure in the following sequence.

1. Install the necessary equipment (see also Appendix 2).
2. Install the necessary IO modules (see also Appendix 2).
3. Read in all motors and equipment with position feedback: these are the motors controlled using the IO modules such as the H1MC, H2MC and CAN-IO-EKU modules. Reading in these motors and equipment will ensure that they do not go out of range during the installation of the Orion-MC.
4. If possible, set all IO modules and connected equipment in manual operation mode: this will make sure that the motors and equipment to be controlled by the unit will not be started unintentionally during the installation of the Orion-MC.


**Note** The following connection diagrams explain the communication with the main controller, and do not extend to the connection of options (such as temperature sensors, RS485 communication, etc.). Information about the connection of options is enclosed in the relevant CAN IO module manual. In addition, see the examples of connections in Appendix 2.

## 9.2 CAN-IO-08-09

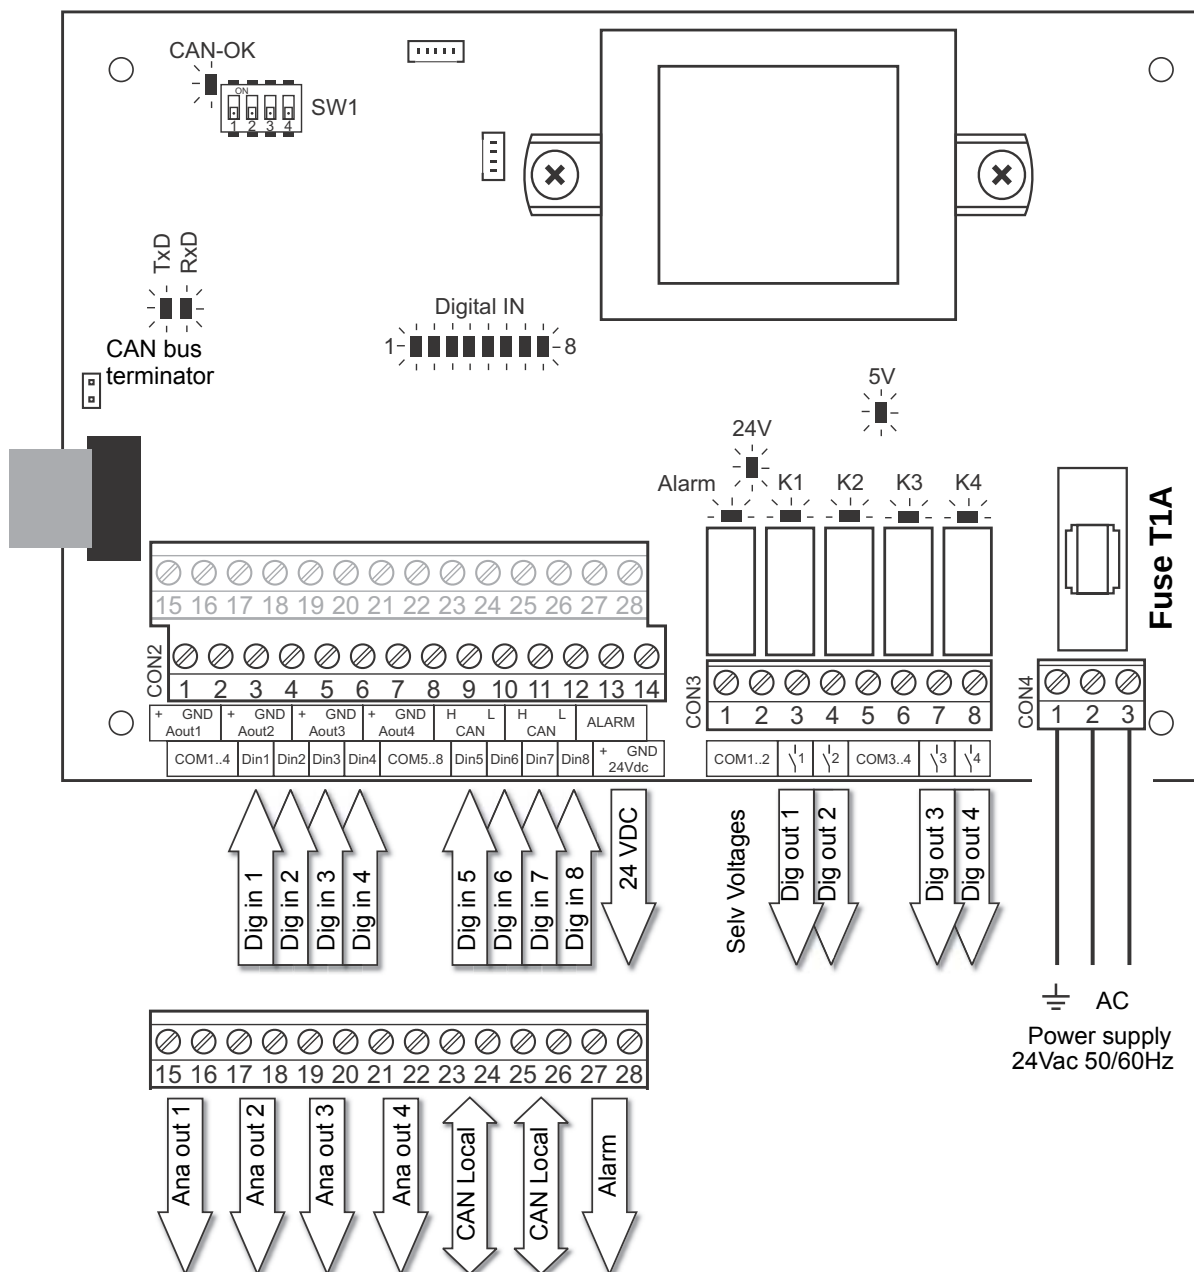

9.2.1 Digital inputs

The digital inputs are intended for the control signals from the main controller. See Appendix 2.1 for examples of connections. The digital inputs are assigned during the installation procedure.

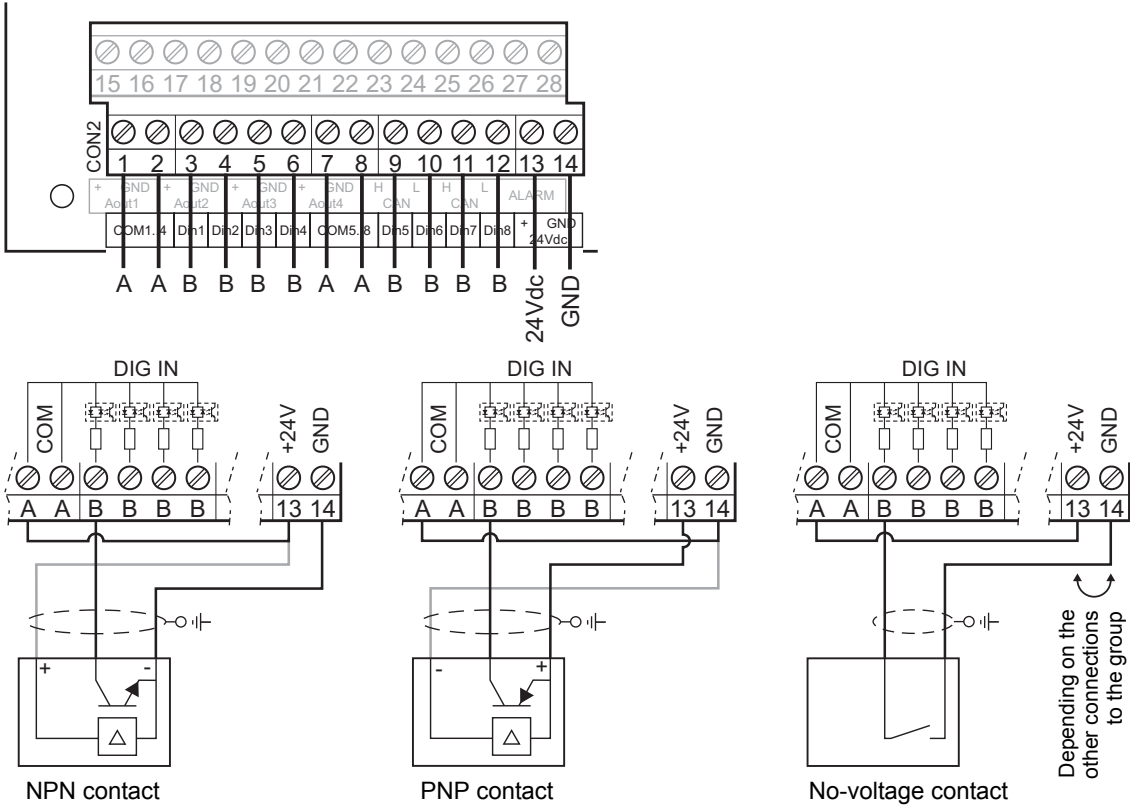


**Note** You can connect either NPN contacts or PNP contacts to one input group. Example: When a PNP contact is connected to digital input 6 then you may only connect other PNP contacts or no-voltage contacts to inputs 5, 7 and 8.

Note the inputs in use in the following table.

| Digital input | Terminal |   |    | Selection                                                                           |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  | Description |
|---------------|----------|---|----|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|-------------|
|               |          |   |    | Window                                                                              | Screen                                                                              | Ventilation                                                                         | Flap                                                                                | Heating                                                                             | Alarm                                                                               |  |             |
| 1             | 1/2      | - | 3  |  |  |  |  |  |  |  |             |
| 2             | 1/2      | - | 4  |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  |             |
| 3             | 1/2      | - | 5  |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  |             |
| 4             | 1/2      | - | 6  |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  |             |
| 5             | 7/8      | - | 9  |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  |             |
| 6             | 7/8      | - | 10 |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  |             |
| 7             | 7/8      | - | 11 |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  |             |
| 8             | 7/8      | - | 12 |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |  |             |

## 9.2.2 Analogue outputs

The analogue outputs are intended for the feedback to the main controller. See Appendix 2.1 for examples of connections. The analogue outputs are assigned during the installation procedure.

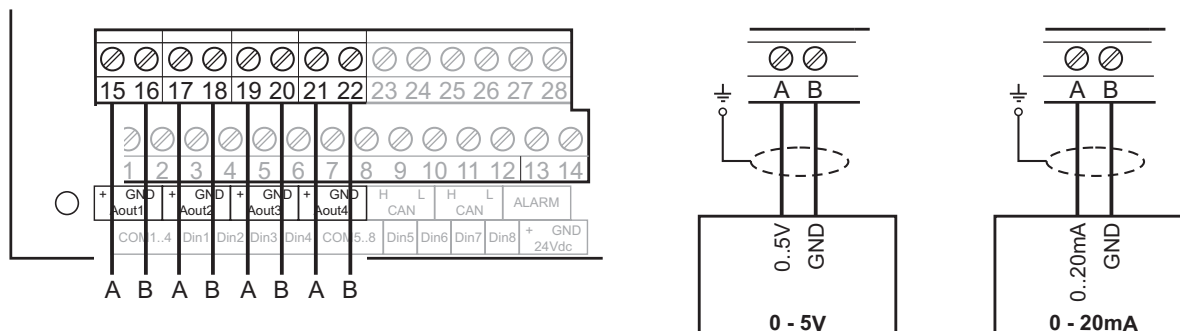


Note the outputs in use in the following table. Also note the type of output that is used (0-5V or 0-20mA) and the range of the output (4-20mA, for example).

| Analogue output | Terminal<br>A - B | Selection       |                 |           |               |                  |  | Type of output | Range<br>Min / Max | Description |
|-----------------|-------------------|-----------------|-----------------|-----------|---------------|------------------|--|----------------|--------------------|-------------|
|                 |                   | Window position | Screen position | Fan speed | Flap position | Heater intensity |  |                |                    |             |
| 1               | 15 - 16           |                 |                 |           |               |                  |  | 0-5V / 0-20mA  |                    |             |
| 2               | 17 - 18           |                 |                 |           |               |                  |  | 0-5V / 0-20mA  |                    |             |
| 3               | 19 - 20           |                 |                 |           |               |                  |  | 0-5V / 0-20mA  |                    |             |
| 4               | 21 - 22           |                 |                 |           |               |                  |  | 0-5V / 0-20mA  |                    |             |

**Note** Configure the type of output and the range during the installation procedure.

9.2.3 Digital outputs

The digital outputs are intended for the feedback to the main controller. See Appendix 2.1 for examples of connections. The digital outputs are assigned during the installation procedure.

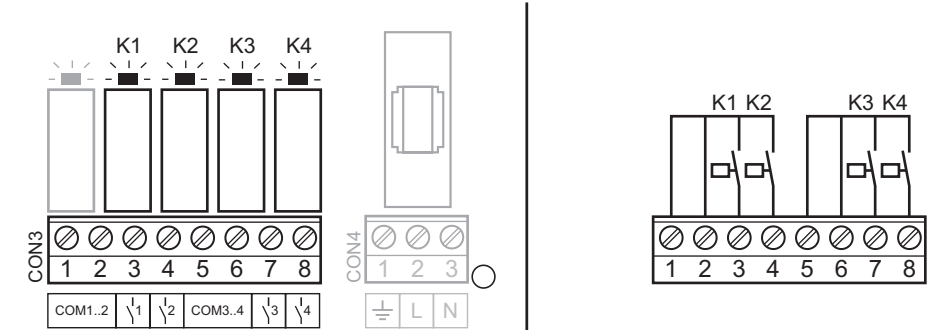


Note the outputs in use in the following table.

| Digital output | Terminal | Selection |             |      |         |  |  |  |  | Description |
|----------------|----------|-----------|-------------|------|---------|--|--|--|--|-------------|
|                |          | Alarm     | Ventilation | Flap | Heating |  |  |  |  |             |
| 1              | 1/2 - 3  |           |             |      |         |  |  |  |  |             |
| 2              | 1/2 - 4  |           |             |      |         |  |  |  |  |             |
| 3              | 5/6 - 7  |           |             |      |         |  |  |  |  |             |
| 4              | 5/6 - 8  |           |             |      |         |  |  |  |  |             |

9.2.4 Alarm contact

The no-voltage alarm contact is interrupted in the event of an alarm or a power failure. You can include the alarm contact in an alarm circuit.

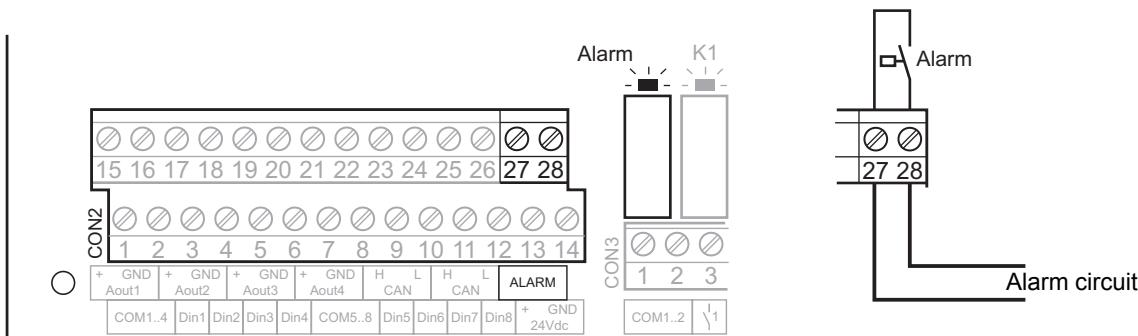


## 9.3 Communication

### 9.3.1 CAN Local (IO modules)

The CAN Local data bus is used for communication between the Orion-MC and the IO modules (see also the examples of connections in Appendix 2).


*CPU board*

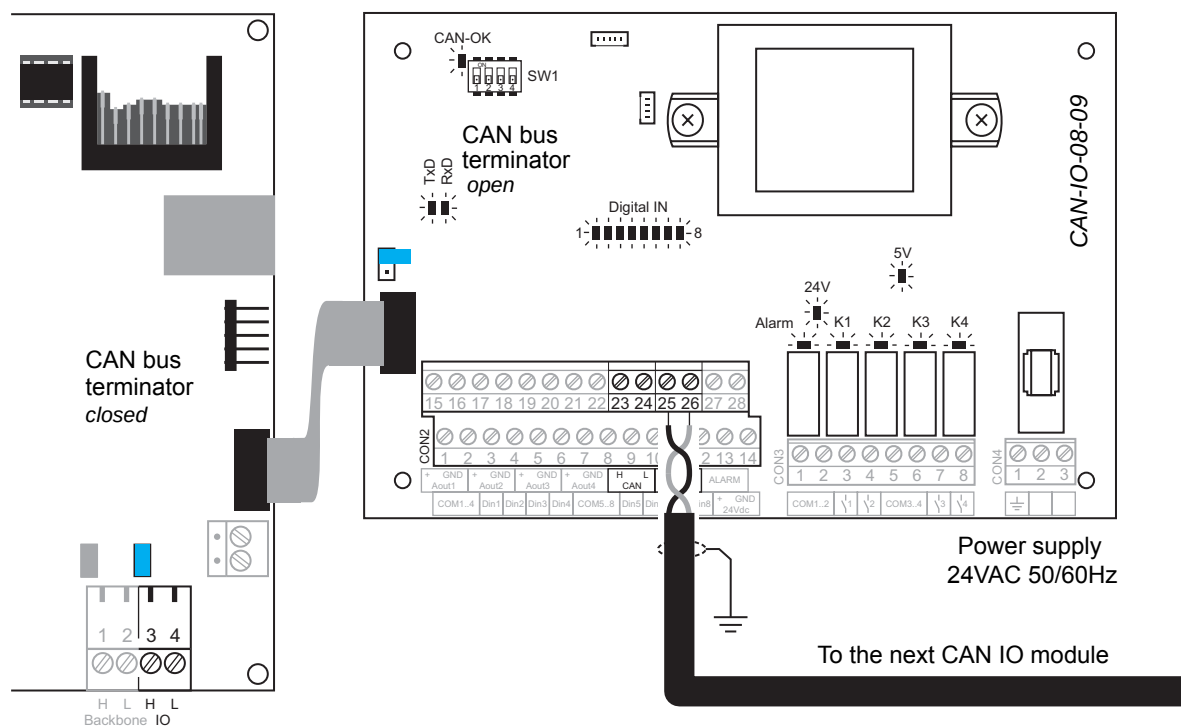


The bus must be terminated with jumpers at the first and last communication node.

**Example** Fit the jumpers on the CPU board and on the last IO module in the event that the CAN IO modules are connected to the integral IO module of the Orion-MC (as shown in the example above). (Note: remove the jumper from the integral IO module or relocate it to a position where the pins are not connected.)




Example of the shield connection

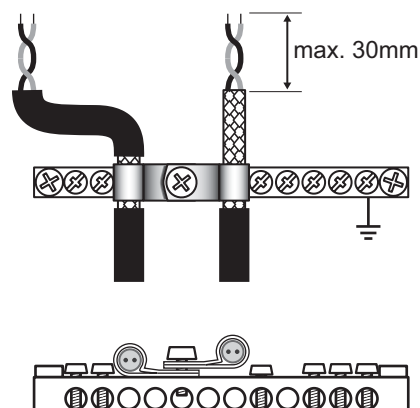

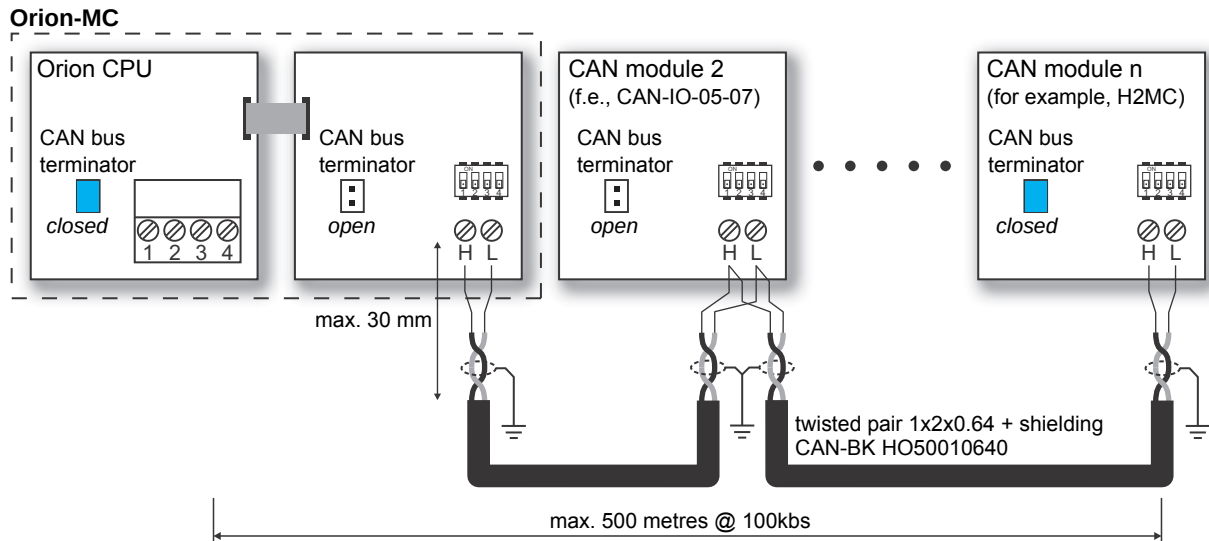

**Note** The Orion-MC does not need to be installed at the end of the communication line.

Each IO module in the communication line should be assigned a unique address. The address is configured using the IO module's DIP switch.


| Address | DIP switch                                                                          | Address | DIP switch                                                                          | Address | DIP switch                                                                           | Address | DIP switch                                                                            |
|---------|-------------------------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------|---------|--------------------------------------------------------------------------------------|---------|---------------------------------------------------------------------------------------|
| 1       |  | 5       |  | 9       |  | 13      |  |
| 2       |  | 6       |  | 10      |  | 14      |  |
| 3       |  | 7       |  | 11      |  | 15      |  |
| 4       |  | 8       |  | 12      |  | 16      |  |

### 9.3.2 Communication with PC or Modem via USB

You can use the COM1 port or USB port (see also chapter 9.3.3). You cannot use the two ports together.

**Note** It is not possible to access a number of Orion-MC computers at the same time with USB.



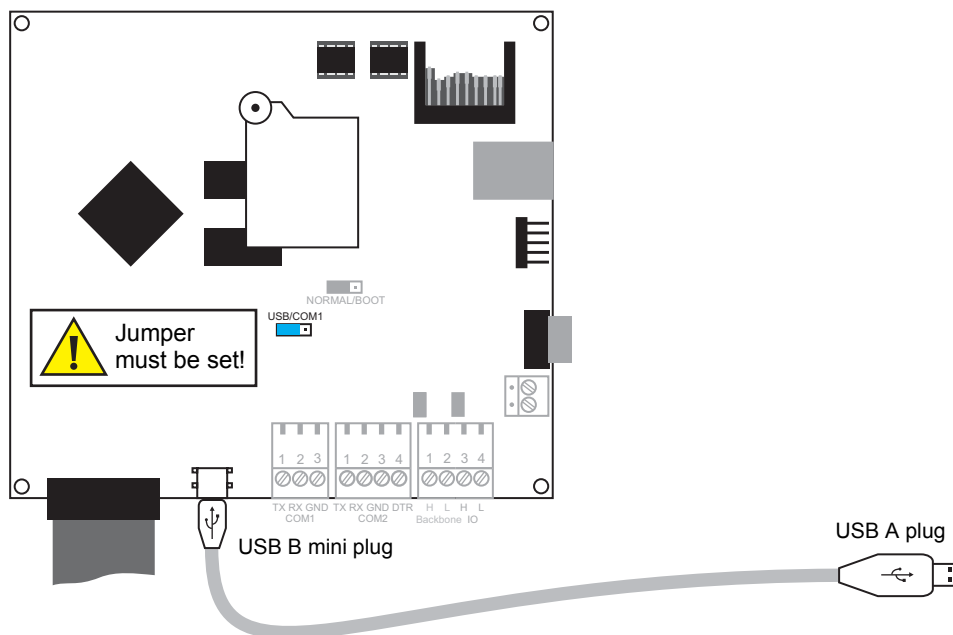

**IMPORTANT!** Set the USB/COM1 jumper to USB.


Two drivers will need to be installed for communications between the Orion-MC and a PC via USB. The general instructions for a PC with Windows are given below. Begin by installing the 'USB serial converter' driver followed by the 'USB serial port' driver.

1. Connect the Orion-MC to the PC with an USB cable.
2. Connect the Orion-MC to the power supply.
3. If Windows does not recognise the USB chip then the 'New hardware found' Wizard will start.
4. Use the Wizard to search for the drivers in the CD's 'USB' folder.
5. Install the 'USB serial converter' driver (this is selected automatically). Ignore any Windows message stating that the driver is unsigned or untested.
6. Windows will now once again find new hardware.
7. Install the 'USB serial port' driver using the same method.

### 9.3.3 Communication with PC or Modem via RS232

You can use the COM1 port or USB port (see also chapter 9.3.2). You cannot use the two ports together. The COM2 port can be used at any time.

**Note** It is not possible to access a number of Orion-MC computers at the same time with RS232.

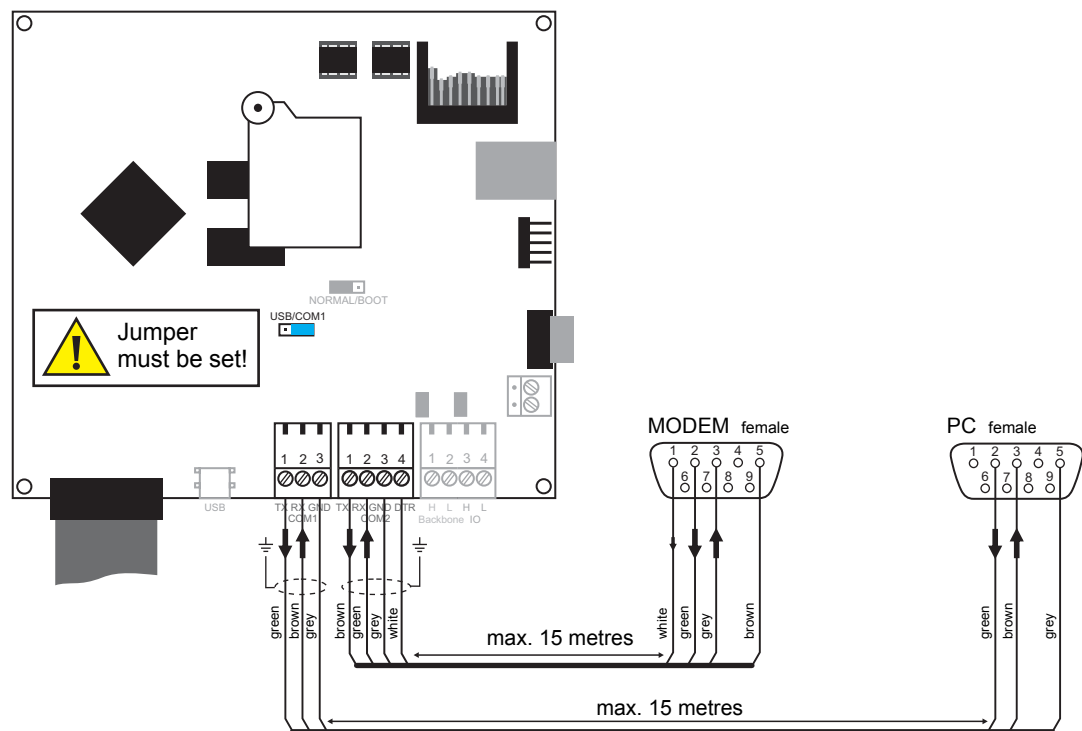


**IMPORTANT!** Set the USB/COM1 jumper to COM1.

**Note** See chapter 9.3.1 for an example of the connection of the shield.


### 9.3.4 Communication with PC or Modem via Ethernet

You can use Ethernet to include the Orion-MC in a local IP network.

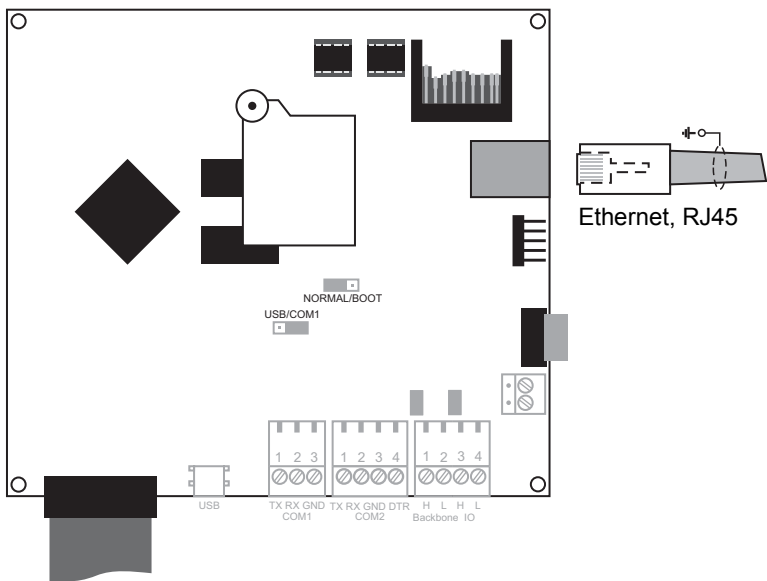

# Appendix 1    Settings list


## Appendix 1.1    Ventilation
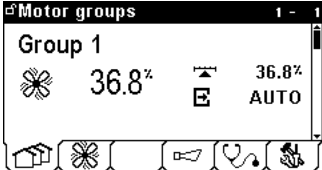
| Main group                                                                                  | Settings                                                                                    | Default | User |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|---------|------|
| <b>F1</b>  |                                                                                             |         |      |
|            | ➔                                                                                           |         |      |
|                                                                                             |  Operation | AUTO    | -    |
|                                                                                             |  Position  | 0.0 %   | %    |
|                                                                                             |  Fan 1 ➔   | 0 %     | %    |
|                                                                                             |  Fan 2 ➔   | 0 %     | %    |
|                                                                                             |  Fan 3 ➔   | 0 %     | %    |
|                                                                                             |  Fan ... ➔ | 0 %     | %    |
|                                                                                             |  Fan ... ➔ |         |      |
|                                                                                             |  Operation | AUTO    | -    |
|                                                                                             |  Position  | 0 %     | %    |
|                                                                                             |  Offset   | 0 %     | %    |

## Appendix 2 System examples

### Appendix 2.1 Connection to the main controller

#### Digital control (Orion-MC with CAN-IO-08-09)

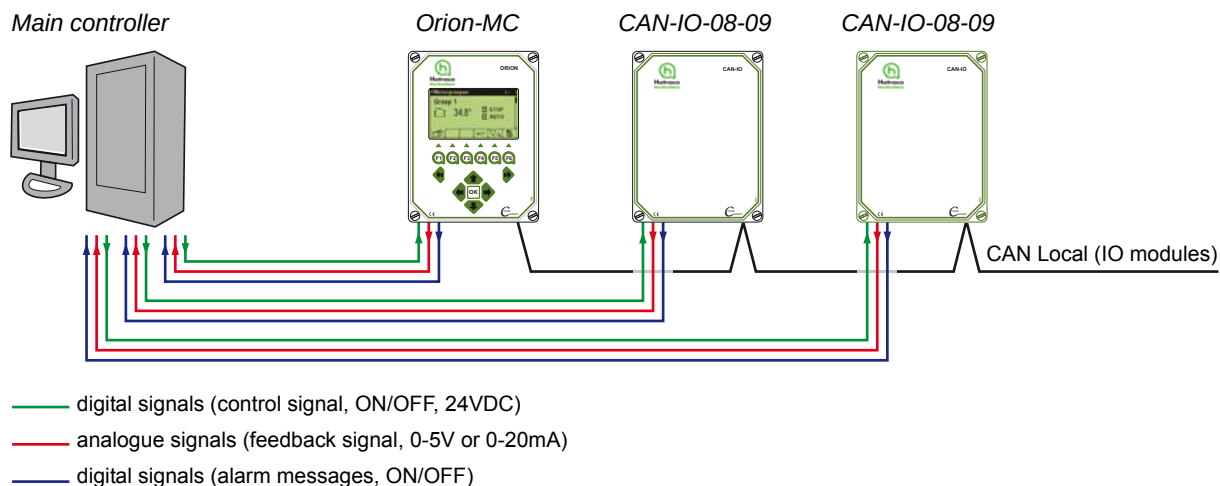


The main controller sends digital commands for each group to the Orion-MC (open, close, increase, decrease, etc.). The virtual motor of the Orion-MC sends the set position as an analogue signal back to the main controller. The main controller stops sending the digital command once the virtual motor has adopted the required position. Digital feedback is given for alarms (the contact is de-energised in the event of an alarm).

#### Note

- You need two digital inputs and one analogue output for each group: you need one digital output for each group for alarm messages.
- You can expand the number of inputs and outputs by installing extra CAN-IO-08-09 modules.

## Appendix 2.2 Ventilation

### IO-05-07 module with EC fans (example)

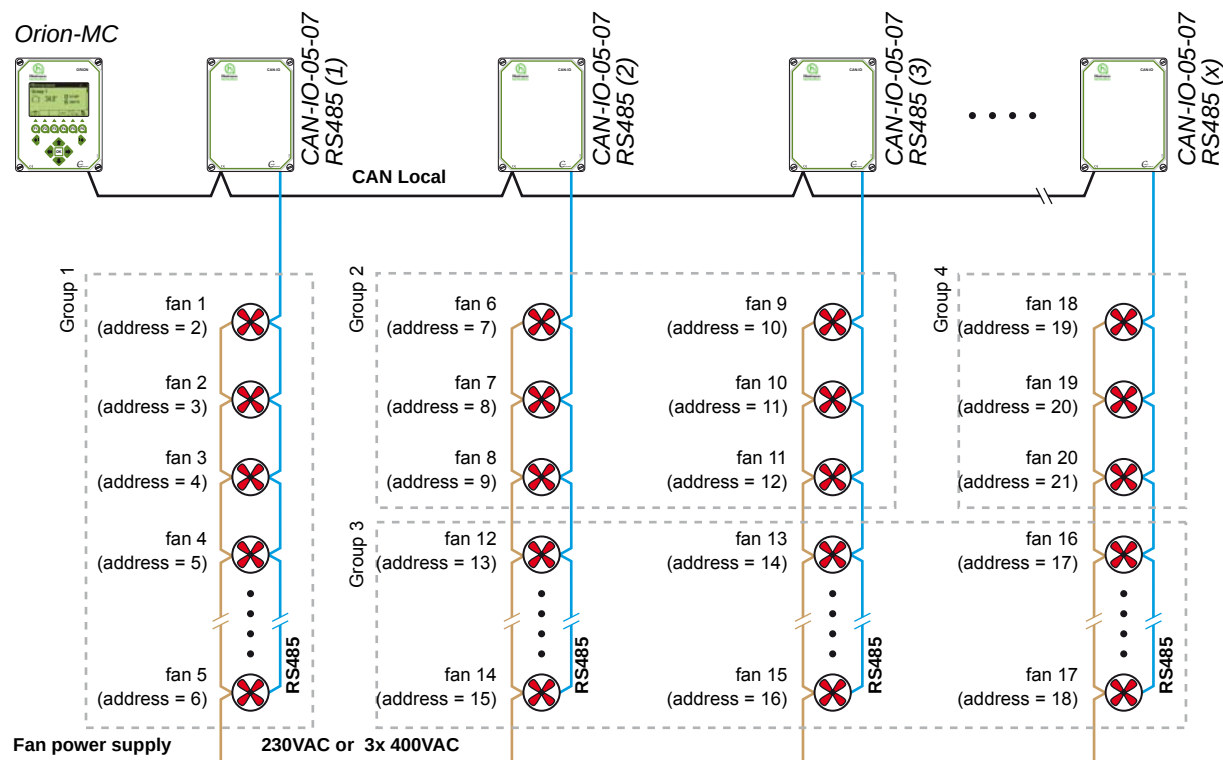

**Comment:** The number of fans at one RS485-Bus is limited to 31!


The main controller (not shown) determines the required fan position of a group. The Orion-MC ensures that the relevant fan position is set.

The required fan position is sent to the IO-05-07 modules via the CAN Local communication. The modules then convert the information into RS485 communication (ebmBus or Modbus). The EC fans then set themselves to the required speed. EC fans have an integral communication interface and separate power supplies (230V or 400V). The EC fans also send the actual fan position and any alarm messages, where relevant, to the Orion-MC.

#### Note

- The fans are numbered sequentially. In the above example group 1 has 5 fans (numbers 1 to 5). Group 2 has 6 fans, numbered from 6 to 11. The next fan in group 3 is then number 12, etc. The fans in a group do not all need to be connected to the same bus.
- For the purposes of communication with the Orion-MC the address must be set to the number of the fan + 1. **Example** fan number 14 is assigned the address 15 (14+1). This simplifies the replacement of a faulty fan. New fans that have yet to be configured are often set to the address 1. Once you have replaced the faulty fan you then only need to change the address of the new fan (1) to the original address of the faulty fan.

### Example IO-05-07 module with separate EC interface (example)

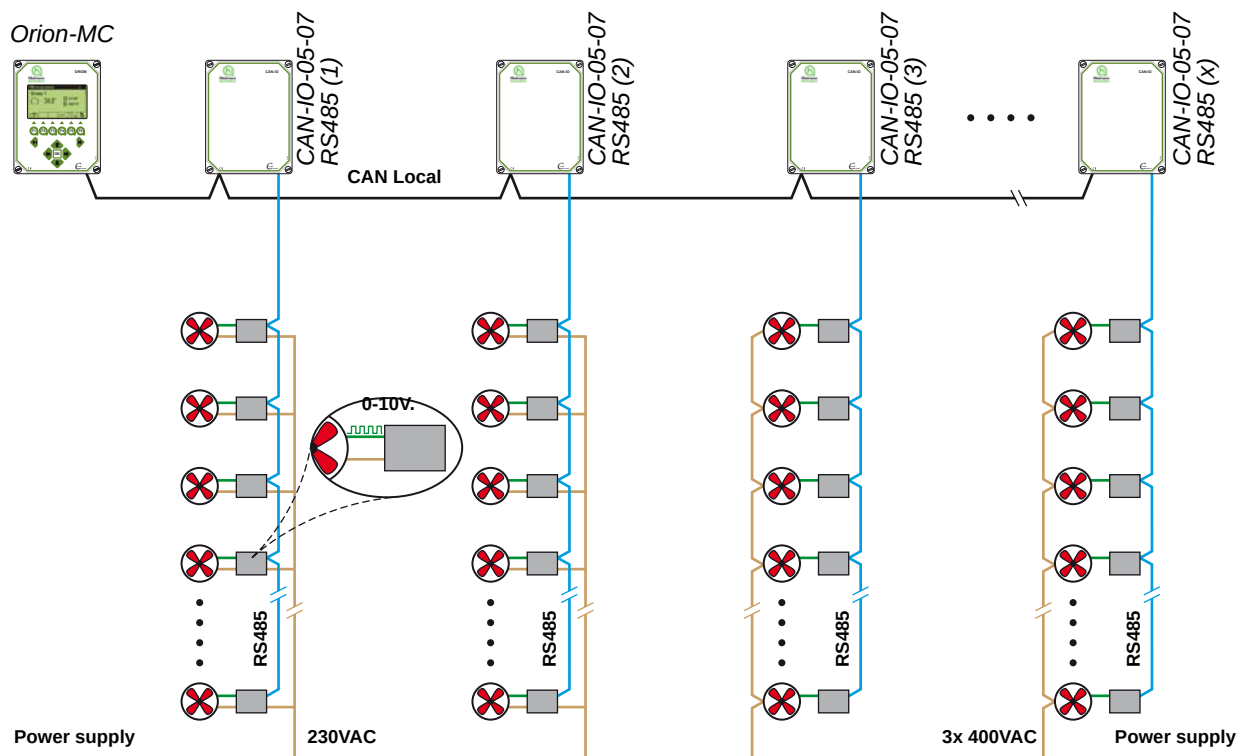

**Comment:** The number of fans at one RS485-Bus is limited to 31!


The main controller (not shown) determines the required fan position of a group. The Orion-MC ensures that the relevant fan position is set.

The required fan position is sent to the IO-05-07 modules via the CAN Local communication. The module converts the information into RS485 communication and then sends it to the EC interface.

The EC interface ensures that the fan rotates at the required speed. In addition, the EC interface sends the actual fan position and any alarm messages, where relevant, to the Orion-MC.

**Note**

- The groups are classified in the same manner as for EC fans.
- When 400VAC fans are used then each EC interface must have a separate power supply (230VAC).

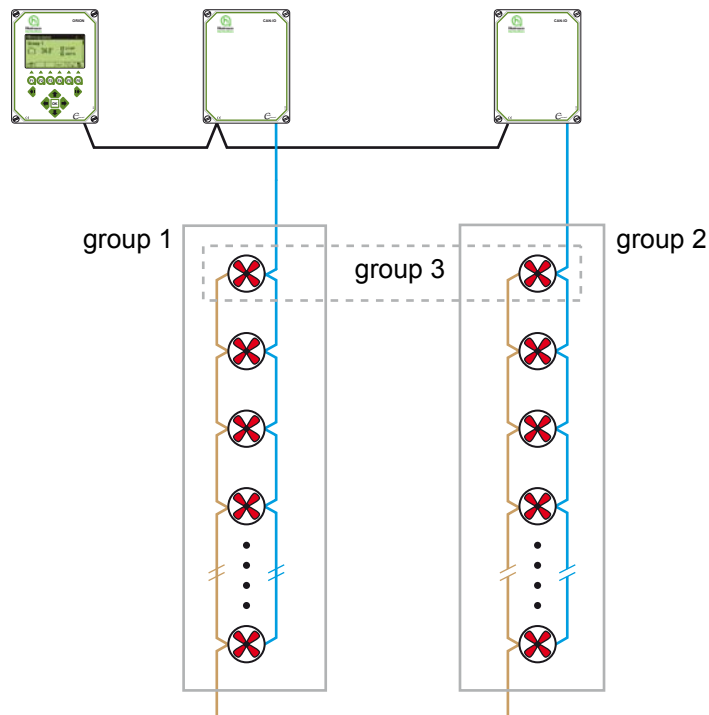**Example** IO-05-07 modules with EC-fans. Groups


**Note** Maximum 31 fans on a RS485-Bus!

It is possible independent of the setpoint of the motorgroup, to shut of or switch on fans in this group. Up to maximal 12 digital inputs are available. All available fans can be assigned to one or more digital inputs.

**Example** Fan 1,3,5,7,9 belong to group1.  
 Fan 2,4,6,8,10 belong to group 2.  
 Fan 5 & 6 belong to group 3.

[illegible]



## EC Declaration of conformity

### Manufacturer:

Hotraco Horti BV  
Stationsstraat 142  
5963 AC Hegelsom  
Netherlands

Telephone: +31 77 327 5050

Fax: +31 77 327 50 21

Trade register: Venlo, no 12027894

hereby declares that the: **Orion-MC**

to which this declaration relates, is in conformity with the following standards or other normative documents:


- Class B emission limits as described in EN 61000-6-3 (2007)
- Immunity levels as described in EN 61000-6-1 (2007)
- Emission limits as described in EN 61000-3-2 (2006)
- Emission limits as described in EN 61000-3-3 (1995) + A1 (2001) + A2 (2005)
- The low voltage guide according to NEN-EN 61010-1.

The product complies with the requirements set out in:

1. the Low Voltage Guideline: directive 2006/95/EC
2. the EMC Guideline: directive 2004/108/EC

Place: Hegelsom

Date: 11/9/15

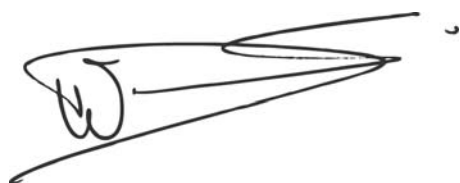

D.W. Fetter  
Directeur

