Alexa

UX Recommendations

Revision History

v0.6
- Added actions for Timers and Alarms
- Updated: behaviour of the suggestion view

v0.5
- Feedback for Timer or Alarm elapsing occurs through modal alert system instead of notification
- If the user is not wearing Kona when a Timer or Alarm alert is produced, a KCA notification should be sent to inform the user

v0.4
- When in Alexa experience, press-and-hold Enter should invoke listening state again instead of exiting out of Alexa

v0.3
- Added visual response behaviour for Timers and Alarms
- Pressing Left from thinking state should take the user to the listening state

v0.2
- Pressing Left from a listening state should take the user to the previous view or a projector off state, depending on where they came from
- Pressing Left from a thinking state should take the user to the suggestion view
- Updated cases navigate user to the suggestion view

A. Alexa Visual Responses

Text

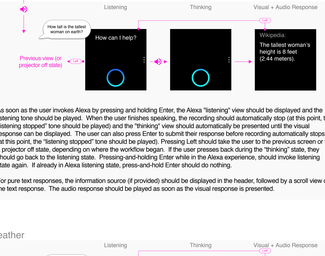

As soon as the user invokes Alexa by pressing and holding Enter, the Alexa "listening" view should be displayed and the listening tone should be played. When the user finishes speaking, the recording should automatically stop (at this point, the "listening stopped" tone should be played) and the "thinking" view should automatically be presented until the visual response can be displayed. The user can also press Enter to submit their response before recording automatically stops (at this point, the "listening stopped" tone should be played). Pressing Left should take the user to the previous screen or to a projector off state, depending on where the workflow began. If the user presses back during the "thinking" state, they should go back to the listening state. Pressing-and-holding Enter while in the Alexa experience, should invoke listening state again. If already in Alexa listening state, press-and-hold Enter should do nothing.

For pure text responses, the information source (if provided) should be displayed in the header, followed by a scroll view of the text response. The audio response should be played as soon as the visual response is presented.

Weather

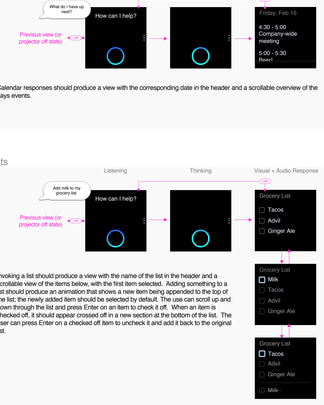

Weather responses should produce a multi-page view. The first page should have the current condition and temperature, the second page should contain a summary of the day, and the third page should summarize the next three days. If there is no user input when the pages are presented, the pages should automatically change according to the audio response, otherwise the user can scroll up and down through them.

Calendar

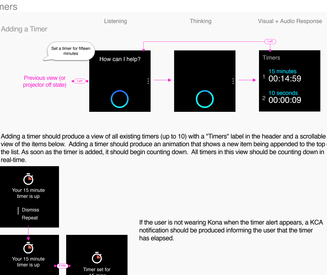

Calendar responses should produce a view with the corresponding date in the header and a scrollable overview of the days events.

Lists

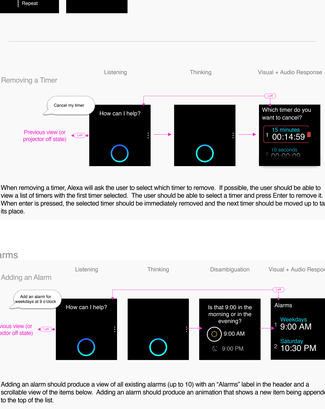

Invoking a list should produce a view with the name of the list in the header and a scrollable view of the items below, with the first item selected. Adding something to a list should produce an animation that shows a new item being appended to the top of the list; the newly added item should be selected by default. The user can scroll up and down through the list and press Enter on an item to check it off. When an item is checked off, it should appear crossed off in a new section at the bottom of the list. The user can press Enter on a checked off item to uncheck it and add it back to the original list.

Timers

Adding a Timer

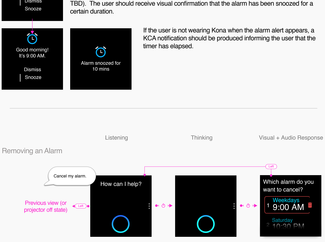

Adding a timer should produce a view of all existing timers (up to 10) with a "Timers" label in the header and a scrollable view of the items below. Adding a timer should produce an animation that shows a new item being appended to the top of the list. As soon as the timer is added, it should begin counting down. All timers in this view should be counting down in real-time.

If the user is not wearing Kona when the timer alert appears, a KCA notification should be produced informing the user that the timer has elapsed.

Removing a Timer

When removing a timer, Alexa will ask the user to select which timer to remove. If possible, the user should be able to view a list of timers with the first timer selected. The user should be able to select a timer and press Enter to remove it. When enter is pressed, the selected timer should be immediately removed and the next timer should be moved up to take its place.

Alarms

Adding an Alarm

Adding an alarm should produce a view of all existing alarms (up to 10) with an "Alarms" label in the header and a scrollable view of the items below. Adding an alarm should produce an animation that shows a new item being appended to the top of the list.

If the user does not specify a time period (AM or PM), they must be required to select before the alarm can be set. If they disambiguate in the initial command, this step should be skipped.

When an alarm elapses, an alert and sound should be produced. If the user is in a session, the alert should appear immediately - the alert should not timeout until it is dismissed by the user. If the user is not in a session, the alert should turn on the projector and be displayed. The alert can be dismissed by selecting Stop (default selection) and pressing Enter. The user can also select "Snooze" and press Enter which should dismiss the alert and snooze it for 10 mins (value TBD). The user should receive visual confirmation that the alarm has been snoozed for a certain duration.

If the user is not wearing Kona when the alarm alert appears, a KCA notification should be produced informing the user that the timer has elapsed.

Removing an Alarm

When removing an alarm, Alexa will ask the user to select which alarm to remove. If possible, the user should be able to view a list of alarms and allow the user to select one and press Enter to remove it. When enter is pressed, the selected alarm should be immediately removed and the next alarm should be moved up to take its place.

B. Suggestion View

When the suggestion view first appears, it should indicate "Sorry, I didn't didn't catch that" and then transition to suggestions. The suggestions should rotate , one every few seconds (timing TBD). The user should also be able to use Up/Down to scroll through the suggestions in a looping carousel.

The user can press right to access the peek menu to view the selected command. The user can execute the selected command by pressing Enter (TBD).