

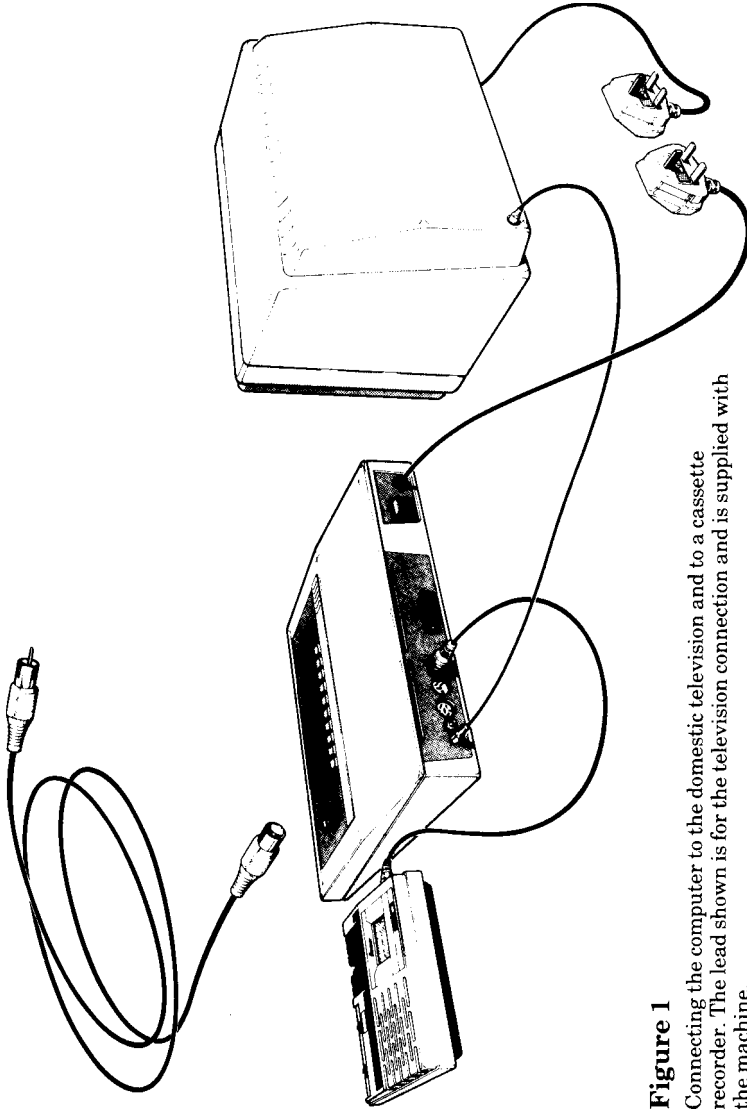


Figure 1

Connecting the computer to the domestic television and to a cassette recorder. The lead shown is for the television connection and is supplied with the machine.