

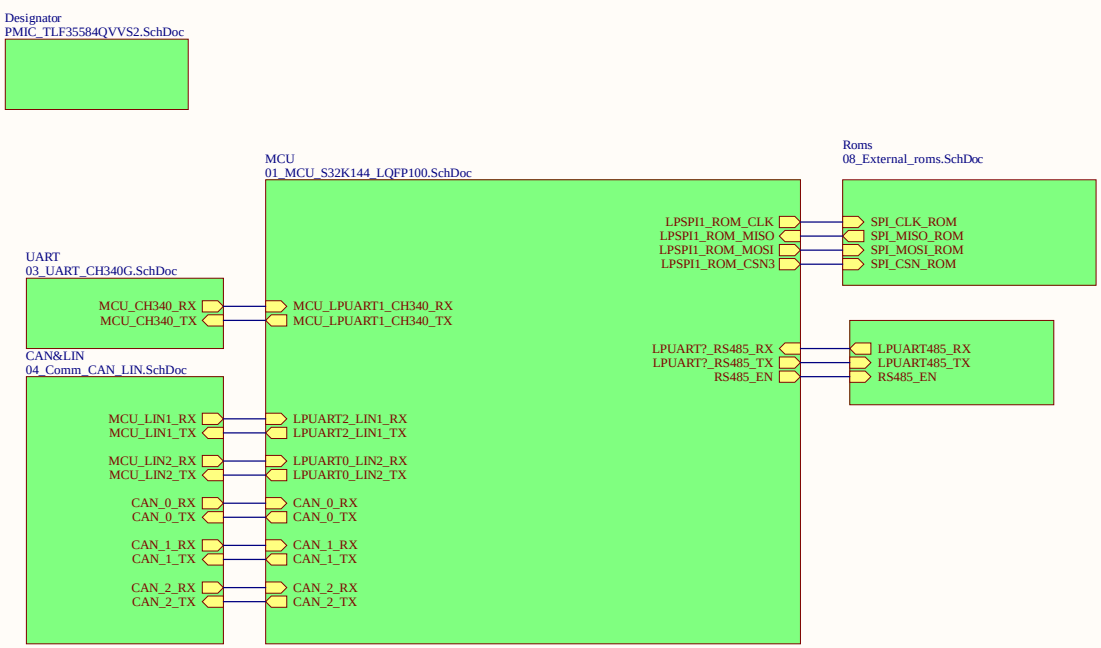
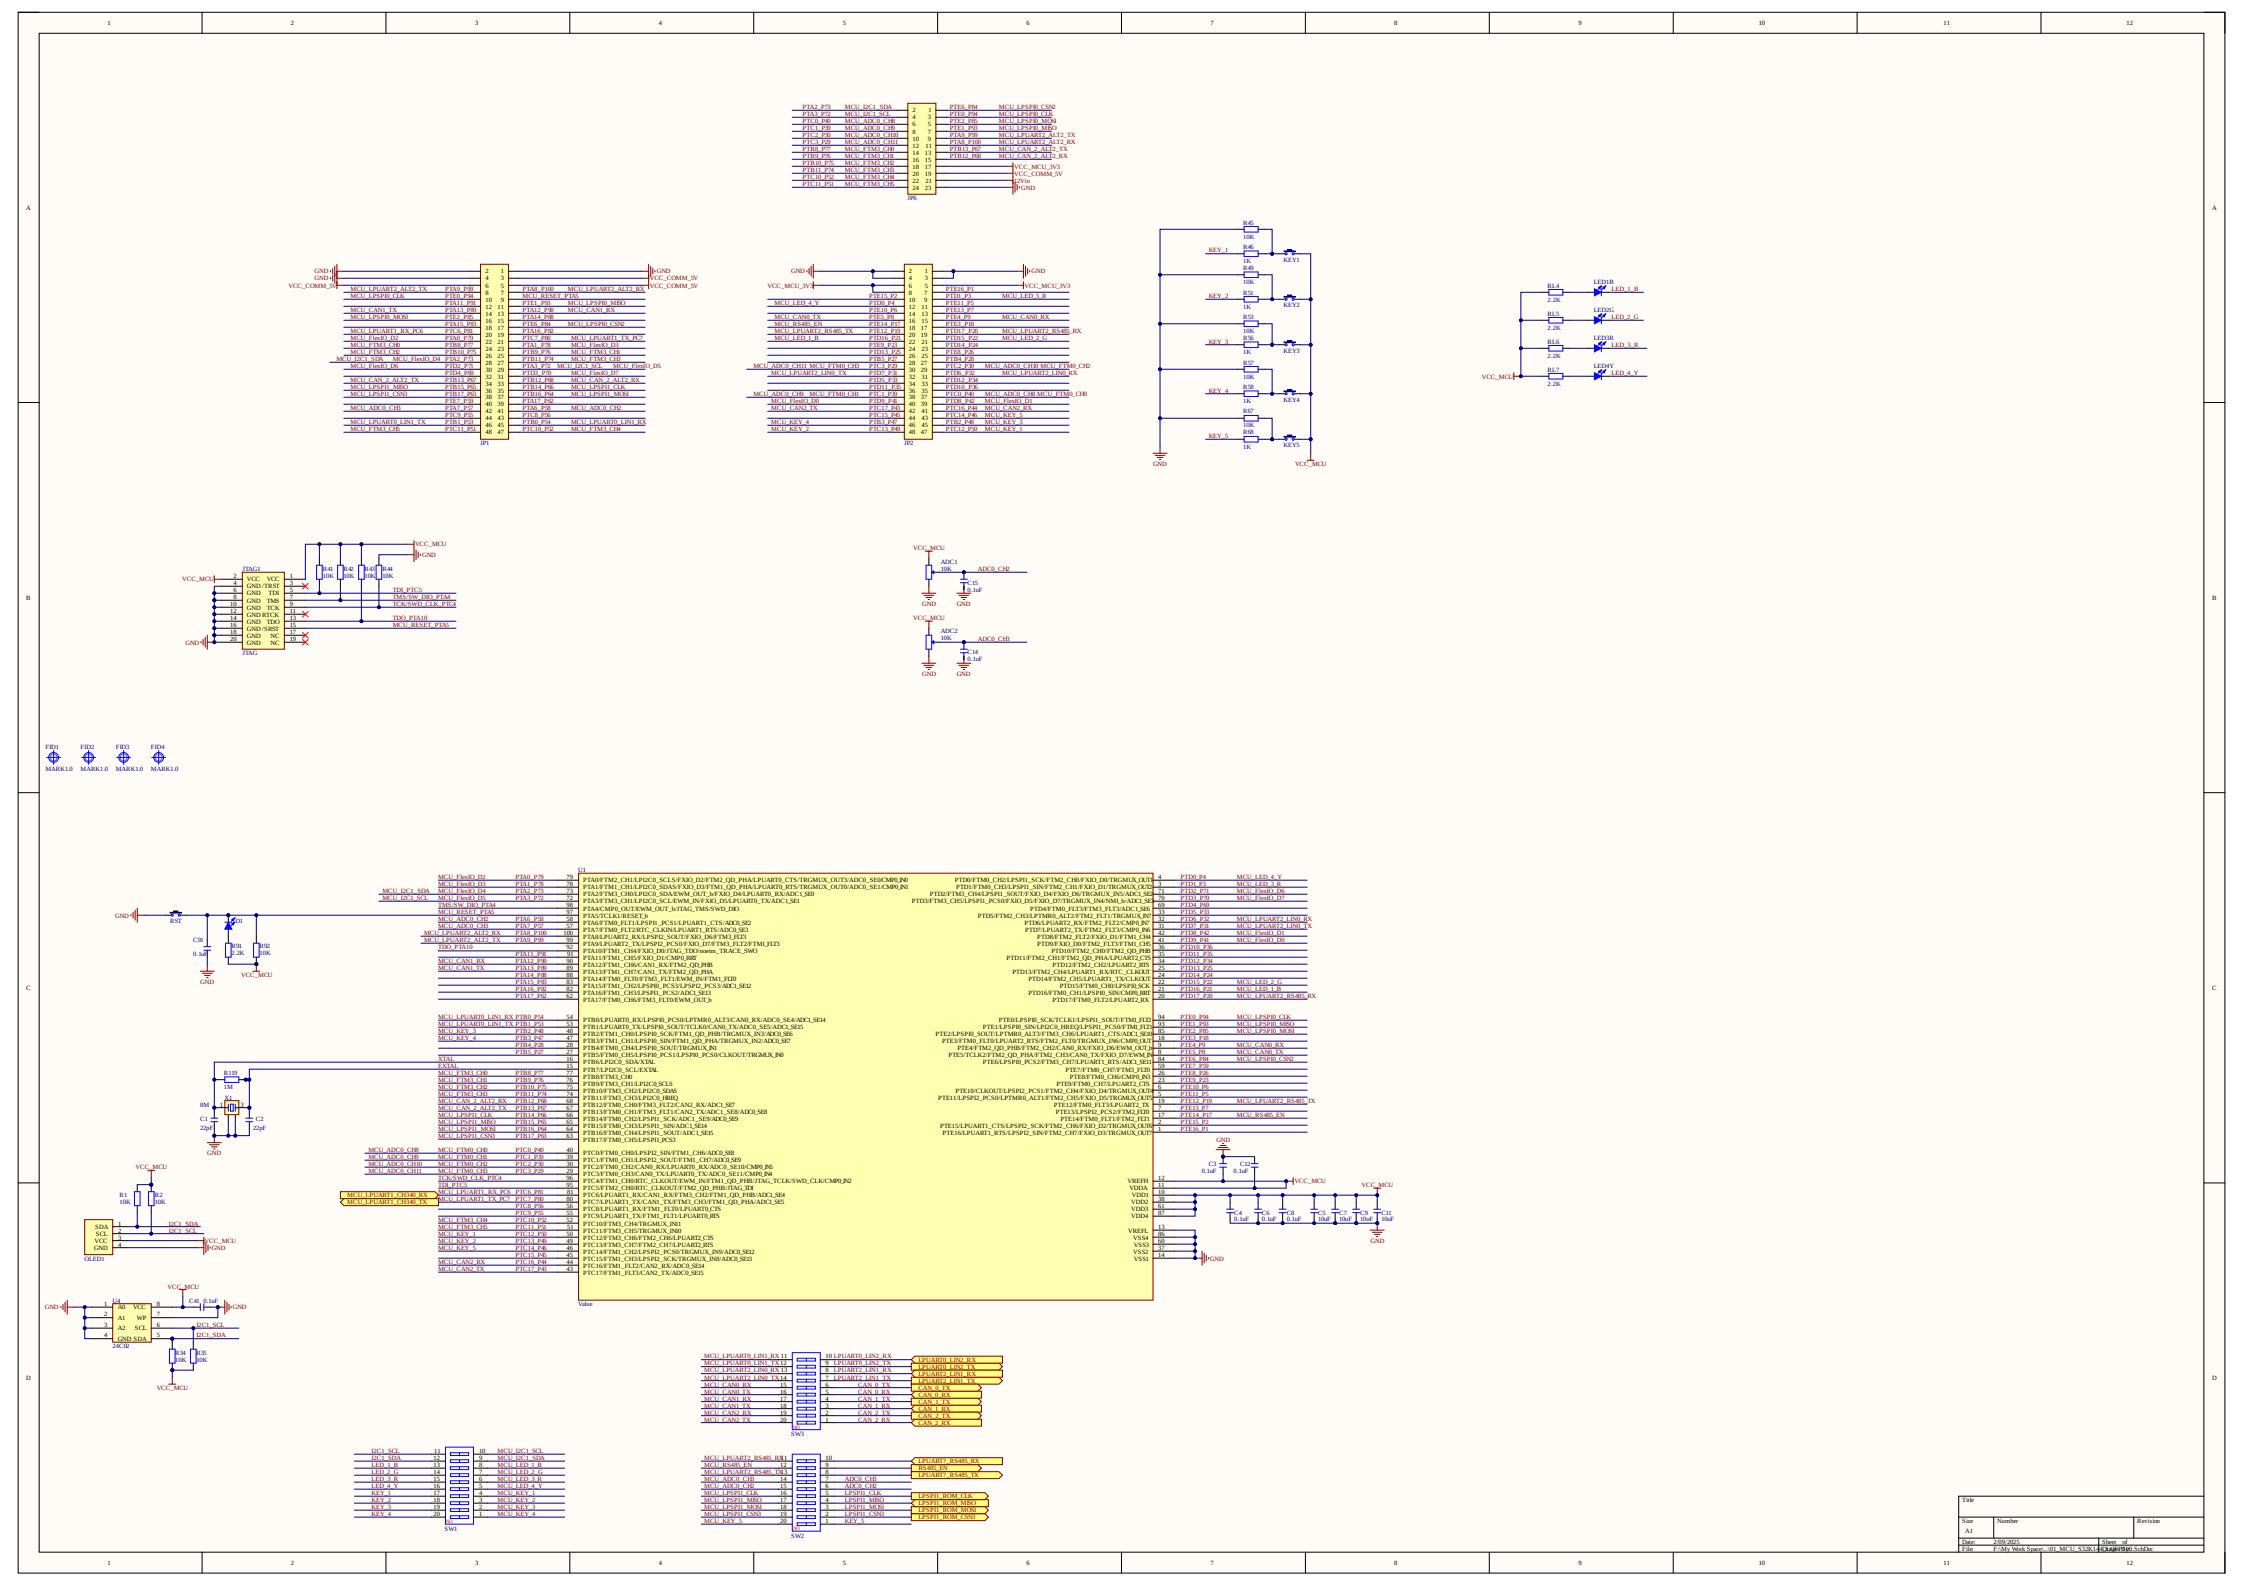


Title		
Size A3	Number	Revision
Date: 2/09/2025		Sheet of
File: F:\My Work Space\..\s32k144开发板总图.SchDoc		Drawn By:



JP1
JP2
JP6
KEY_1
KEY_2
KEY_3
KEY_4
KEY_5
LED1R
LED_1_R
LED2G
LED_2_G
LED3R
LED_3_R
LED4Y
LED_4_Y
JTAG1
JTAG
ADC1
ADC2
ADC0_CH2
ADC0_CH6
FID1
FID2
FID3
FID4
MARK1.0
U1
Value
OLED1
SW1
SW2
SW3
U4
24C02
Title
Size
A1
Number
Revision
Date: 2/09/2015
Sheet of
File: F:\My Work Space\...\01. MCU_S32K144\Schematic\S32K144.SchDoc

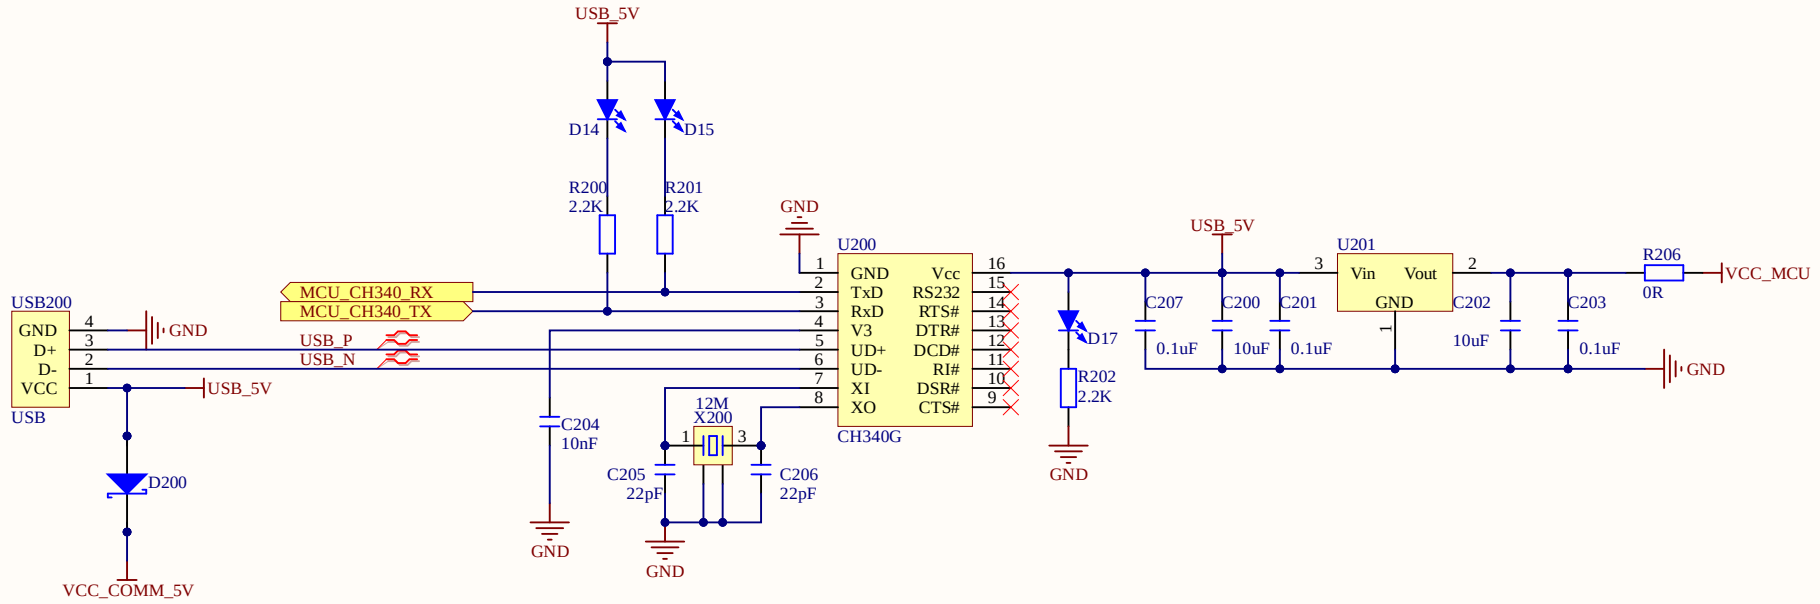


Title		
Size A4	Number	Revision
Date: 2/09/2025		Sheet of
File: F:\My Work Space\..\03_UART_CH340G.SchDoc		Drawn By:

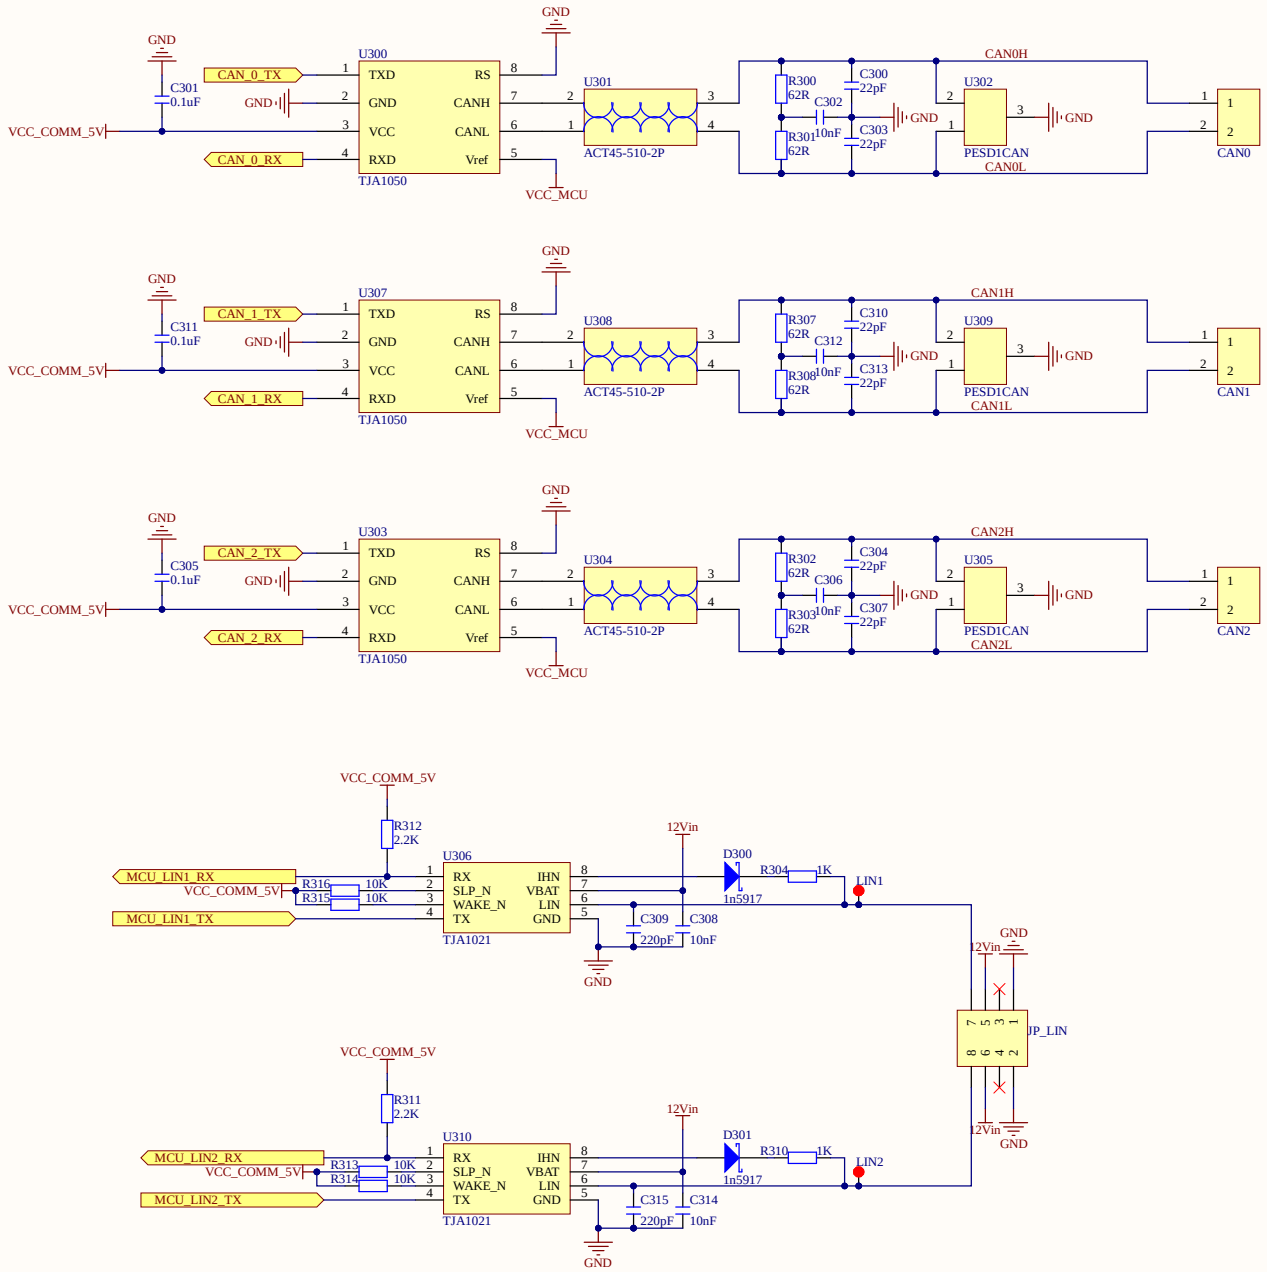

Title	总线通讯	
Size: A3	Number	Revision
Date: 2/09/2025	Sheet of	
File: F:\My Work Space\..\04_Comm_CAN_LIN.SchDoc	Drawn By:	

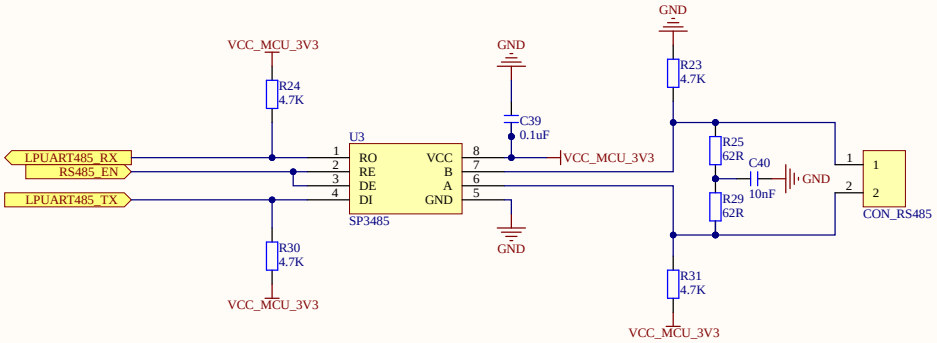


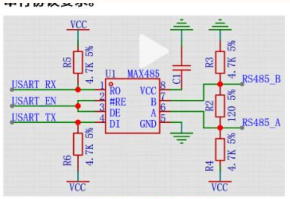

这款芯片的引脚定义如下：
RO — 接收器输出
RE — 接收器输出使能（低电平有效）
DE — 驱动器输出使能（高电平有效）
DI — 驱动器输入
GND — 连接地
A — 驱动器输出/接收器输入（同相）
B — 驱动器输出/接收器输入（反相）
VCC — 芯片供电


一般在485设备的数据向MCU发送时我们把芯片叫做接收器。
在MCU向485设备发送数据时我们把芯片叫做驱动器。
SP3485的驱动器输出是差分输出，空载时输出电压的大小为0V～+3.3V。SP3485有一根使能控制线(高电平有效)。DE上的逻辑高电平(1)将使能驱动器的差分输出。SP3485接收器的输入是差分输入，接收器的输入电阻通常为15K。如果RE为低，接收器使能，反之接收器禁止。

ED： 1 发送使能；0发送禁止
RE： 0 接收使能；1接收禁止
因此，我们一般将EDRE接在一起，单片机MCU向外发送数据时，将USART_EN置位1，单片机MCU接收外界送数据时，将USART_EN置位0，即可。

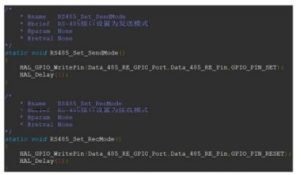


写程序时，要在接收和发送时将USART_EN引脚置位不同的电平

Title		
Size A3	Number	Revision
Date: 2/09/2025	Sheet of	
File: F:\My Work Space\...\06_RS485_SP3485.SchDoc	Drawn By:	

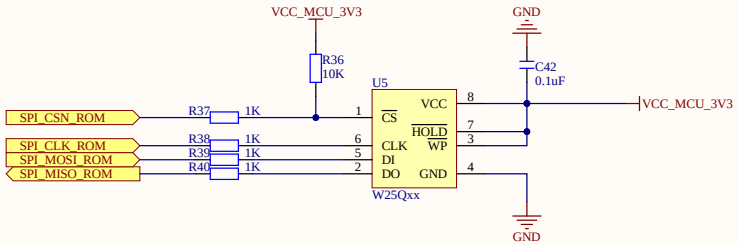


W25Qxx系列芯片电压最大为3.6V
所以不适合在单片机5V的情况下使用,1K限流电阻可以保证在使用5V供电时,不会损坏芯片,也可以在需要释放SPI引脚时拆掉.

Title		
Size: A3	Number	Revision
Date: 2/09/2025	Sheet of	
File: F:\My Work Space\..\08_External_roms.SchDoc	Drawn By:	

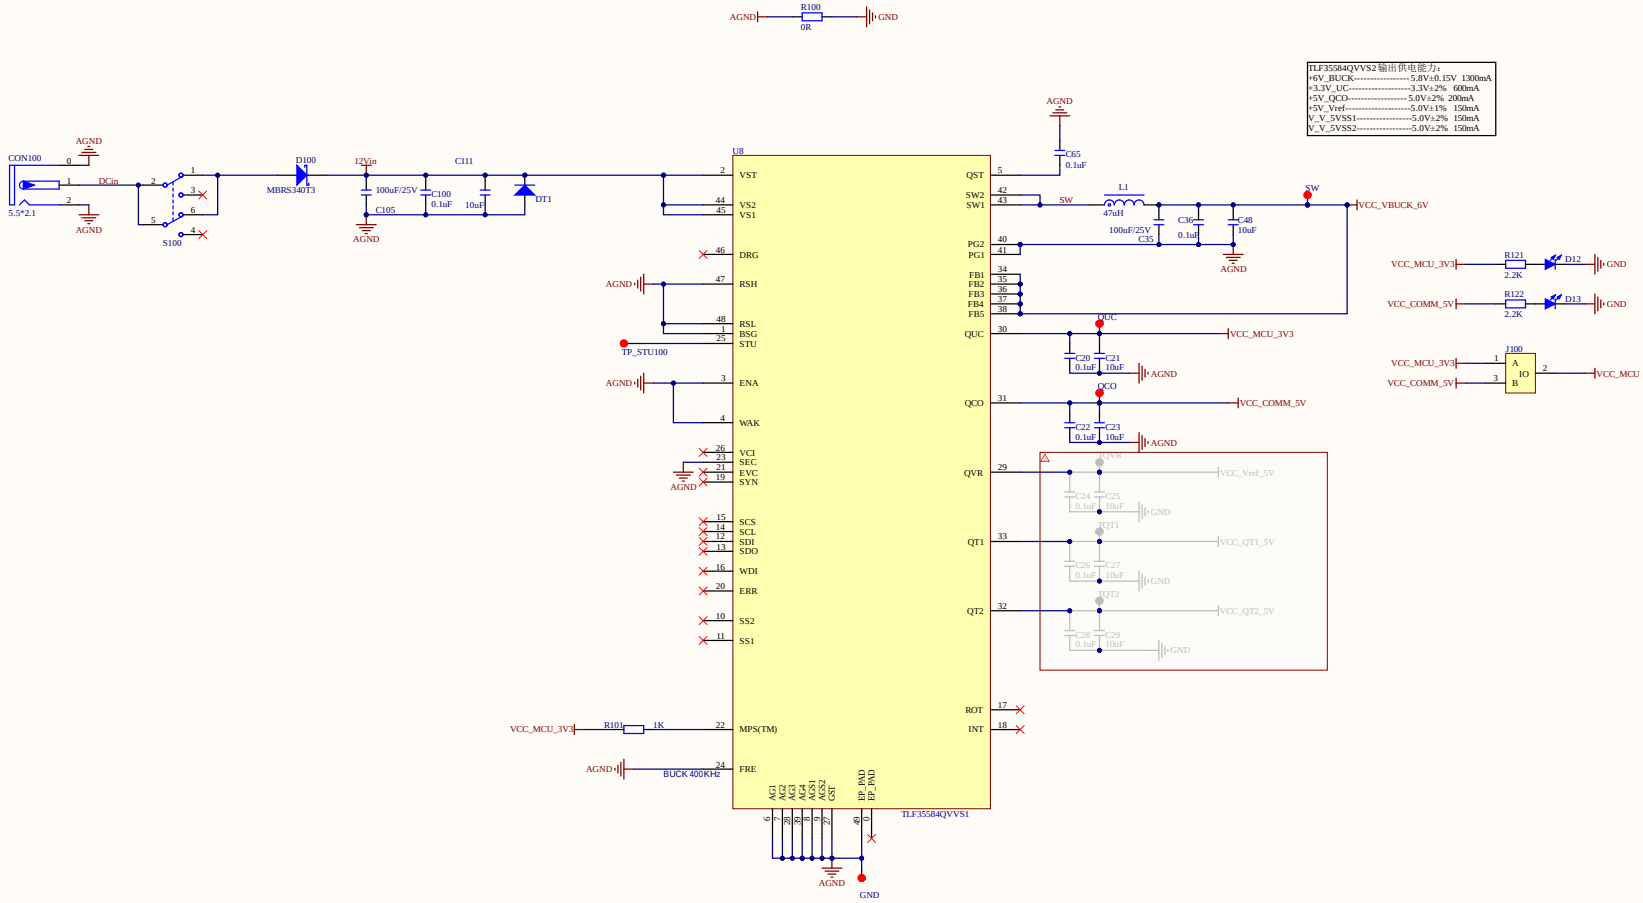

Title			
Size	Number		Revision
A2			
Date:	2/09/2025	Sheet of	
File:	F:\My Work Space\...\PMIC_TLF35584QVVS2.SchDoc		

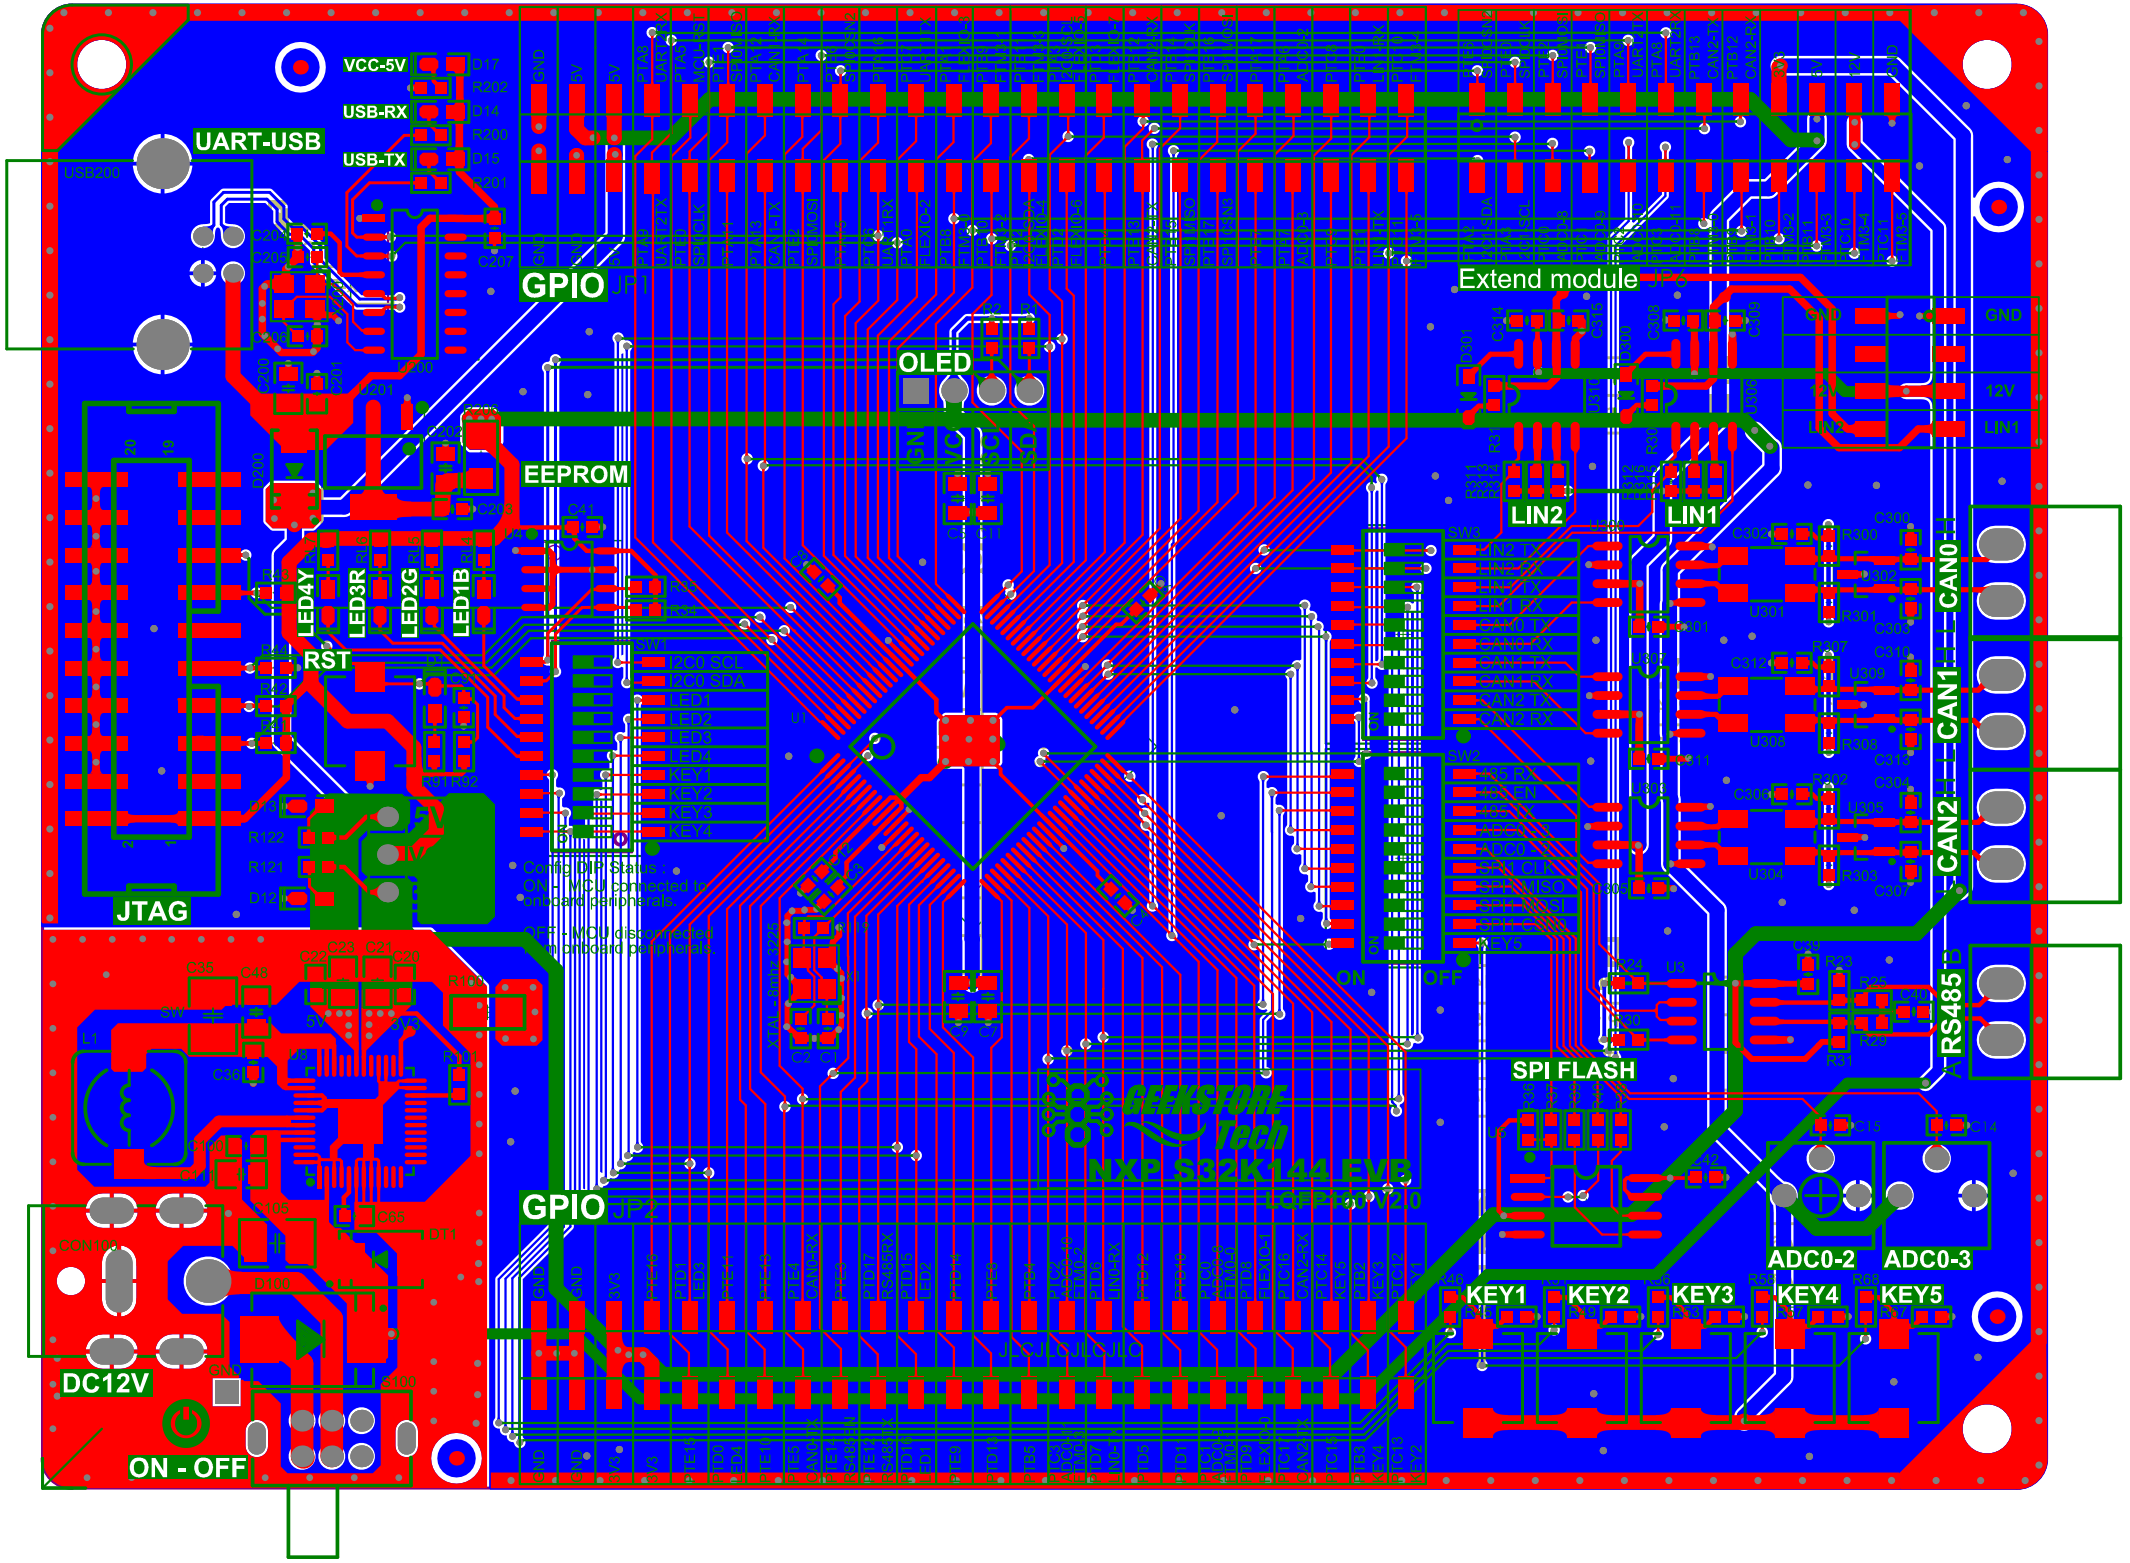
VCC-5V
USB-RX
USB-TX
UART-USB
GPIO
OLED
EEPROM
Extend module
LIN2
LIN1
CAN0
CAN1
CAN2
RS485
LED4Y
LED3R
LED2G
LED1B
RST
JTAG
SPI FLASH
NXP S32K144 EVB
GPIO
ADC0-2
ADC0-3
KEY1
KEY2
KEY3
KEY4
KEY5
DC12V
ON - OFF