




DLP6500 ALC GUI

This GUI application is also available in sourcecode as a Visual Studio project

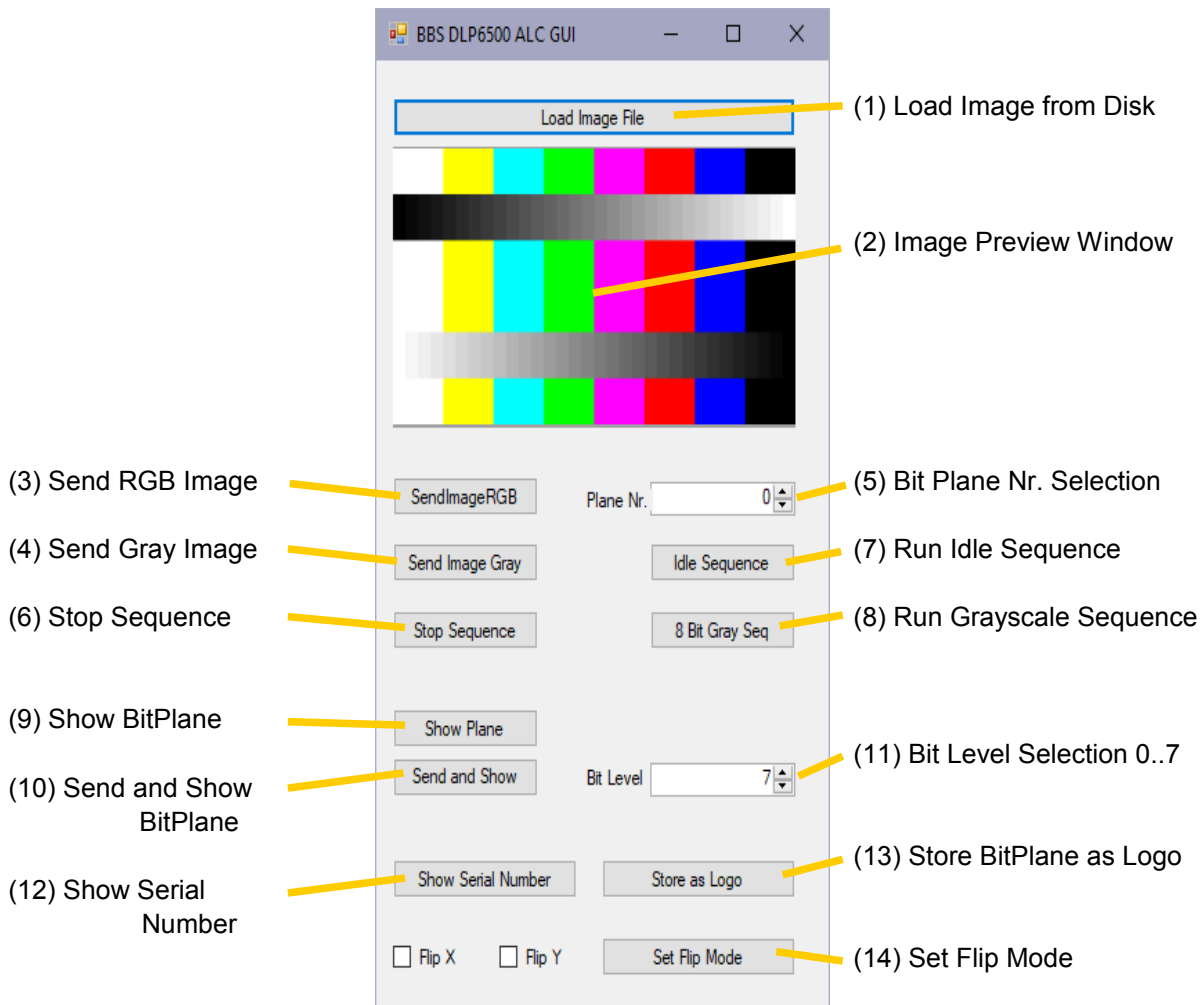

Using the GUI:

- | | |
|---------------------------|--|
| (1) Load Image from Disk: | Loads an Image file from Disk into the GUI
Windows GDI supported formats can be opened. BMP, JPEG, PNG... |
| (2) Image Preview Window: | The loaded Image will be show in the Preview Window scalled and centered
Images will not be scalled and positioned top left on the DLP! |
| (3) Send RGB Image: | Sends the GUI loaded image into the DLP Controllers BitPlane Memory.
24 BitPlanes are sent. B[0..7], G[0..7], R[0..7]
The BitPlanes are stored into BitPlane Memory Locations starting
with the Nr. selected in (5) |
| (4) Send Gray Image: | Sends the GUI loaded image into the DLP Controllers BitPlane Memory.
8 BitPlanes are sent. If the image is a color Image blue chanel is used B[0..7]
The BitPlanes are stored into BitPlane Memory Locations starting
with the Nr. selected in (5) |
| (6) Stop Sequence: | Stop the Sequence that is actually running in the DLP Controller. |
| (7) Run Idle Sequence: | Stop the actually running Sequence and run the Idle Sequence
The Idle Sequence is defined in the Firmware and can not be overwritten
The BitPlane shown is the last one in Memory at Location 7705
On power up the Startup Logo is loaded from Flash into Memory and
the Idle Sequence is started.
The Startup Logo can be changed with Button (13)
When not using the DLP actively, run the idle sequence!
Also see the Reliability notes in the Documentation Folder! |
| (8) Run Gray Sequence: | Stop the actually running Sequence and run the Grayscale Sequence
This Grayscale Sequence is defined by the Firmware and placed into
Sequence Buffer Location 0
This Sequence displays an 8 Bit linear Grayscale image from the
Patterns in BitPlane Memory Locations 0..7
This Grayscale Sequence can be overwritten. |
| (9) Show BitPlane: | Loads the BitPlane in Memory Location selected in (5) into the DLP
and clocks the Mirrors to display it. |
| (10) Send and Show: | Sends the BitLevel selected in (11) of the GUI loaded image into the
DLP Controllers BitPlane Memory Location selected in (5)
Then loads it into the DLP and clocks the Mirrors to display it. |
| (12) Show Serial Number: | This opens up a Window that displays the Controllers Serial Number. |

- (13) Store BitPlane as Logo: Stores the GUI Loaded image into the DLP Controllers Logo Flash Memory. The BitLevel selected in (11) will be used. If the actual image is a color image the blue channel will be used. This LOGO is displayed after power up by the Idle Sequence. To protect the Flash write endurance only one write action per power cycle is executed. Consecutive write actions are ignored.
- (14) Set Flip Mode: This sets the Mode how BitPlanes are loaded from BitPlane Memory into the DLP. The checkboxes for FlipX and FlipY are evaluated and the Flags are sent to the DLP Controller. To see an effect on the DLP a BitPlane must be loaded into the DLP and the Mirrors must be clocked or a Sequence must be running.

Equivalent C Function Calls

See the header files for details

All functions below use a handle hdev returned by GetDevice();

- (3) Send RGB Image: `SendImageRGB(hdev, planenr, pImg);`
- (4) Send Gray Image: `SendImageMono(hdev, planenr, grayvals);`
- (6) Stop Sequence: `StopSequence(hdev);`
- (7) Run Idle Sequence: `StopSequence(hdev);`
`RunSequence(hdev, IDLE_SEQ_START);`
- (8) Run Gray Sequence: `StopSequence(hdev);`
`RunSequence(hdev, 0);`
- (9) Show BitPlane: `LoadPlaneToDLP(hdev, planenr);`
`DLP_GlobalMCP(hdev);`
- (10) Send and Show: `CalcPlane(grayvals, plane, bitlev);`
`SendPlane(hdev, planenr, plane);`
`LoadPlaneToDLP(hdev, planenr);`
`DLP_GlobalMCP(hdev);`
- (14) Set Flip Mode: `SetModeRegister(hdev, DMD_MODE_REG, MODE_FLIP_X | MODE_FLIP_Y);`
//Flags set depending on the GUI Checkboxes checked