ARMMC – Mitel User Guide

Mitel 6930w IP Phone

Overview of the 6930w IP Phone

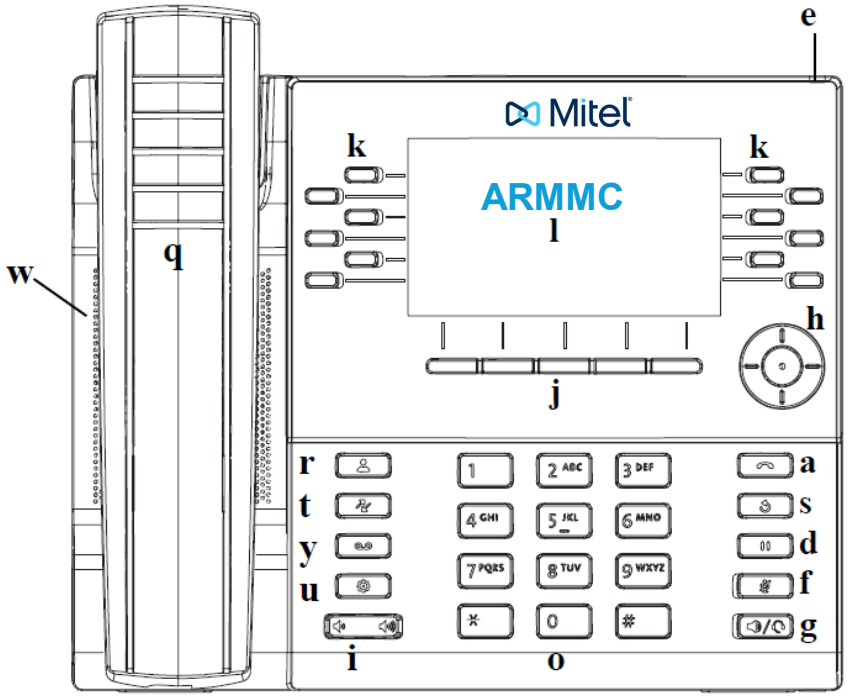

a	Goodbye Key	**l**	LCD Screen
d	Hold Key	**o**	Dialpad
e	Message Waiting Indicator (MWI)	**q**	Handset
f	Mute Key	**r**	Contacts Key
g	Speaker/Headset Key	**s**	Redial Key
h	Navigation Keys/Select Button	**t**	Call History Key
i	Volume Control	**u**	Settings Key
j	State-Sensitive Softkeys	**w**	Speaker
k	Programmable Keys	**y**	Voicemail Key

Key Description for 6930w IP Phone

	Contacts key - Displays a list of your contacts.
	Call History key - Displays a list of your missed, outgoing, and answered calls.
	Voicemail key - Provides access to your voicemail service (if configured).
	Settings key - Provides services and settings that allow you to customize your phone.
	Volume controls - Adjusts the volume for the ringer, handset, headset, and speakerphone. Press the volume control keys while the phone is ringing to adjust the ringer volume. Pressing these keys during an active call adjusts the volume of the audio device being used (handset, headset, or speaker).
	Goodbye key - Ends an active call. The **Goodbye** key also exits an open list (such as **Call History**) and menus (such as the **Settings** menu) without saving changes.
	Redial key - Displays a list of your previously dialed calls. Pressing the **Redial** key twice redials the last dialed number displayed on the **Home** screen.

Key Description for 6930w IP Phone

	Hold key - Places an active call on hold. To retrieve a held call, press the applicable **Line** key.
	Mute key - Mutes the microphone so that your caller cannot hear you (the LED beside the key turns on when the microphone is on mute).
	Speaker/Headset key - Transfers the active call to the speaker or headset, allowing handsfree use of the phone.
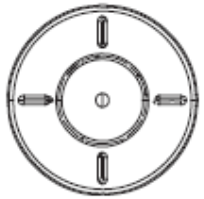	**Navigation keys and select button** - Multi-directional navigation keys that allow you to navigate through the phone's User Interface (UI). Pressing the center **Select** button sets options as well as performs actions such as dialing out from the **Contacts** or **Call History**. On the Home screen, the left and right navigation keys can be used to access the additional pages of programmable softkeys.
	State-sensitive softkeys - Five state-sensitive softkeys that allow you to perform different functions during specific states (i.e. when the phone is an idle, connected, incoming, outgoing, or busy state).
	**Programmable keys** - 12 programmable, multi-function self-labeling keys that allow you to use up to 72 specific functions.

Basic Call Operations for 6930w IP Phone

Placing Calls

To place a call, you can use the handset or the speakerphone.

Using the Handset to Place a Call

1. Pick up the handset.

2. Do one of the following:

- Dial the number.
- Press a Speed Call key.
- Pressing the Redial hard key twice or by pressing the Redial softkey.

3. To end the call, hang up the handset.

Using Speakerphone to Place a Call

The handsfree speakerphone feature allows you to speak to someone without using the handset.

- To dial using speakerphone

  a. Press

  b. Enter a number at the dial tone.

- Lift the handset to switch between speakerphone and handset.
- When the handset is on hook, press to disconnect the call.

Initiating a callback

The callback feature allows you to be notified when a busy phone becomes free or when a phone

has been used after a no-answer condition was encountered.

To request a callback when the call you initiated is busy or has not answered:

1. Press the **Call Me Back** softkey.

2. Hang up.

Initiating a Call Waiting

The person you're calling is busy. Your call stays active until they are free.

If you call someone and they're busy or unavailable. Normally, the system might send you busy tone. If you choose "**I Will Wait**": The system keeps your call queued or parked. It may ring the destination again or notify them. You stay connected until: The person answers, or You hang up

Answering Calls

When a call is ringing at your extension, the inbound caller's name and extension are displayed on the screen. Additionally, the line LED flashes quickly to indicate an incoming call.

To answer a call, you can use the handset or the speakerphone depending on how you set your automatic off-hook preference or how your system administrator has set this option.

Using the Handset to Answer a Call

1. To answer a call using the handset, do one of the following when the phone rings:

- Pick up the handset.
- Press the flashing Line key and lift the handset.
- Press the flashing Line key.

2. To end the call, hang up the handset.

Using the Speakerphone to Answer a Call

To use a Speakerphone to answer calls, do the following:

1. Press

The LED beside the hardkey lights red.

2. To end the call, press again.

The LED beside the hardkey turns off.

Handling Calls for 6930w IP Phone

Placing a Call on Hold or Off Hold

- To place an active call on hold, Press

The line key light begins to flash slowly and after a short time, the phone beeps softly to remind you that you have a call on hold.

- To take the call off hold, do either of the following:

- Press

- Press the flashing line key.

- To retrieve a call on hold, press the applicable Line key

Note:

After a prolonged period of time on hold, the held call may automatically switch to an incoming call to remind you that the call was on hold.

Transferring a Call

You can transfer a call in two ways:

- In a blind transfer (Unattended Transfer), you transfer the call without the other party first answering your call.
- In a consultative transfer (Attended transfer), you talk to the other party before completing the transfer.

Both types of transfer use a similar procedure.

To transfer a call:

1. Ensure you are on active call with the party you wish to transfer.

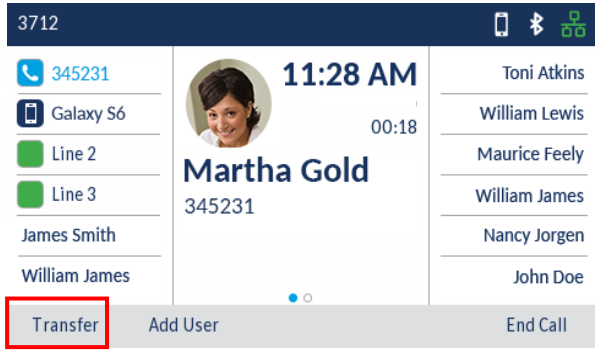

2. Press the **Transfer** softkey.

The active call is placed on hold.

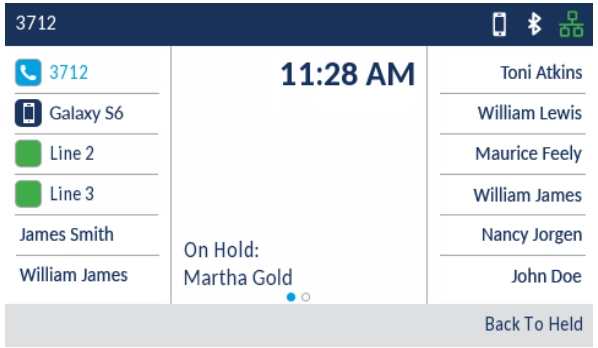

Transferring a Call

3. Enter the transfer recipient's number.

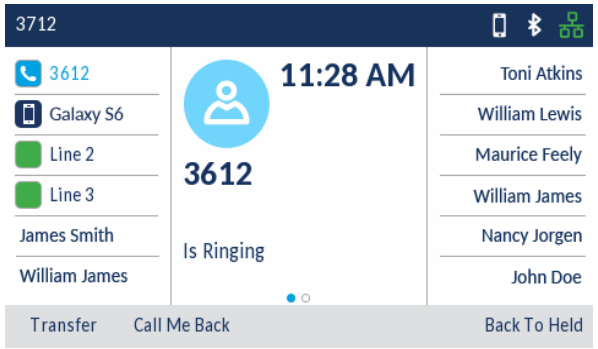

4. Press the **Transfer** softkey or hang up the handset to complete an unattended call transfer

or

Wait for an answer, consult, and then press the **Transfer** softkey or hang up the handset to complete an attended transfer.

Creating a multi-party conference call

The Mitel MiVoice 6930 IP phone supports multiples parties in a conference call.

To create a multi-party conference call:

1. Ensure you are on active call with one of the parties with whom you wish to create a conference.

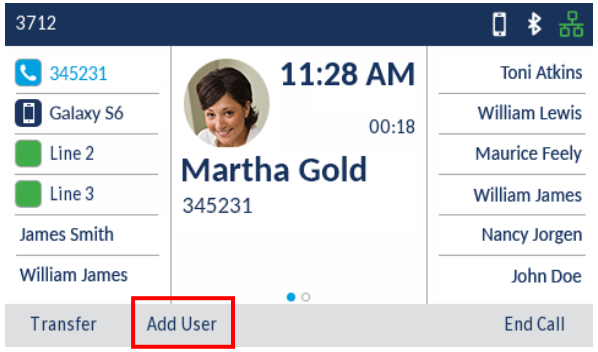

2. Press the **Add User** softkey.

The active call is placed on hold.

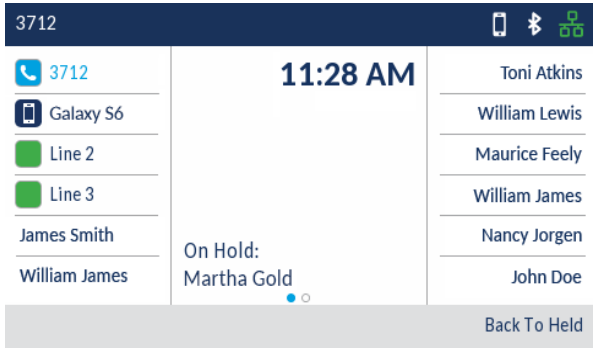

Creating a multi-party conference call

3. Enter the conference target's number.

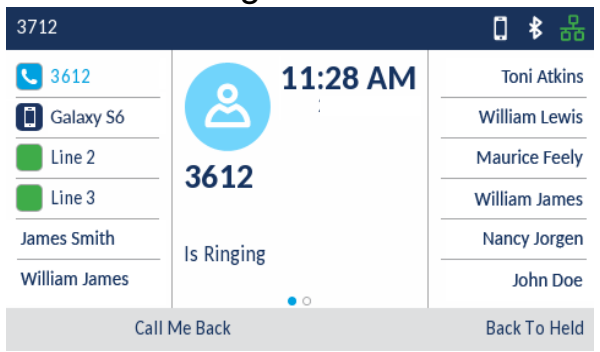

4. Wait for an answer, consult, and then press the **Join Calls** softkey to create the three-way conference call.

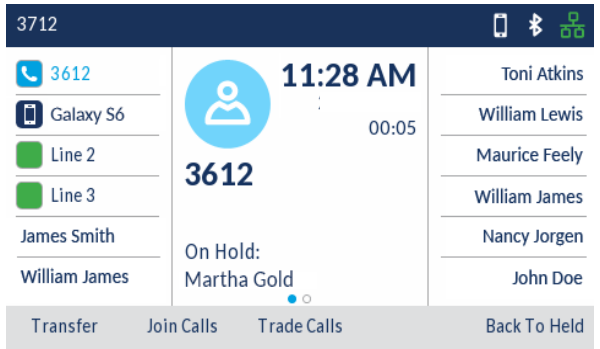

Notes:

1. Pressing the **Trade Calls** softkey swaps the active call with the other party currently on hold.

2. Pressing the **Split** softkey splits the conference call by placing all callers on hold except for the initial caller.

5. Repeat steps 2 to 4 to add additional parties to the conference.

Note: If you want to create a conference call with two parties you are already in calls with (on different line appearances), press the **Add Held** softkey and press the applicable **Line** key with the held call.

Ending a conference and transferring remaining parties

The Mitel MiVoice 6930 IP phone allows a host to easily leave a conference call without disrupting the connection of the other remaining parties.

If you are the host of a conference call and want to leave the conference, press the **Leave Call** softkey on the phone. Your phone leaves the conference call but the remaining parties are still connected together.

Call History

The **Call History** application is a stored log of all your calls. You can view details of all your outgoing and received calls as well as any calls that were unanswered or missed. Your telephone logs the type of call, information regarding the remote party (name, number, and avatar), and the time of the call.

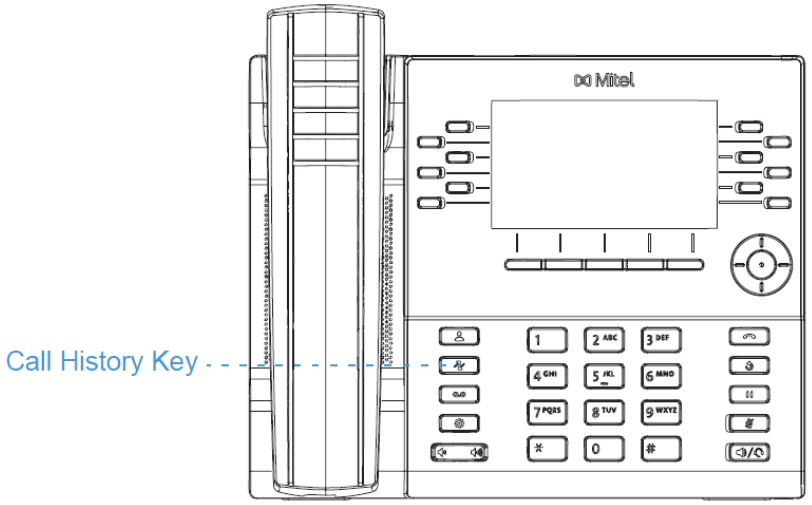

The following table identifies and describes the various icons displayed in the **Call History** application:

Icon	Description
	Indicates an incoming call that was not answered (missed).
	Indicates an outgoing call (outgoing)
	Indicates an incoming call that was answered (received).

Call History

To access and use the **Call History** application:

1. Press the (**Call History**) key.

2. You can view the list of call entries on the right for each respective type of call by pressing the up and down navigation keys.

3. Press the right navigation key to move to the call entry column.

From this column, you can use the up and down navigation keys to scroll through the call entries.

4. From the call entry column, press the right navigation key to display the individual call details for the selected call.

5. Press the **Dial** softkey, **Select** button or (**Speaker/Headset**) key for speaker or headset operation
or
Pickup the handset for handset operation.

6. Press the (**Goodbye**) key, or **Close** softkey to exit.

Missed calls indicator

The Mitel MiVoice 6930 IP phone has a missed calls icon located on the status bar that indicates the number of calls that went unanswered.

As the number of unanswered calls increment, the information associated with the calls are stored in the **Call History** application under the **Missed** call folder. When the user accesses the **Missed** call folder, the missed call indicator on the **Home** screen is removed.

Note: Missed calls are also indicated on the screensaver.

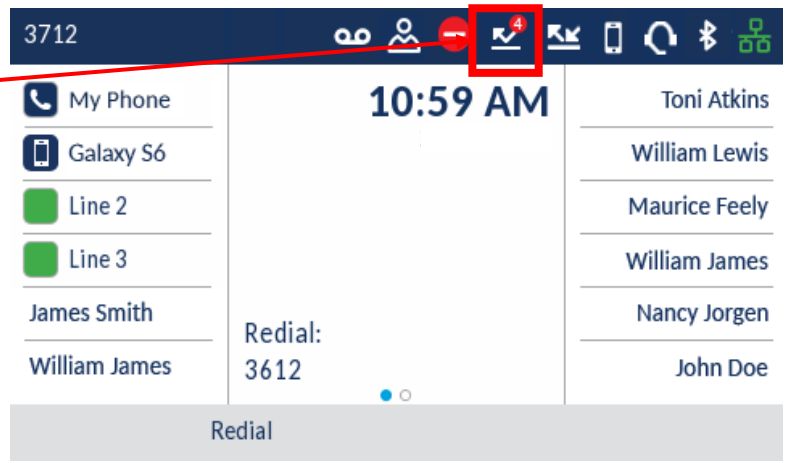

To view missed call details in Call History application:

1. Press the (**Call History**) key.
2. Use the navigation keys to highlight the **Missed** call type folder.
3. Press the right navigation key to move to the call entry column.
4. Use up and down navigation keys to highlight the individual call entry.
5. Press the right navigation key to see more detailed information about the call entry.
6. Press the (**Goodbye**) key, or **Close** softkey to exit.

The missed calls indicator on the **Home** screen is cleared upon exit.

Other User Setting for the 6930w IP Phone

Adjusting the Ring and Listening Volume

To adjust the volume on your phone, use the keys. The volume settings for the ringer, handset, and speakerphone are independent of one another, and you can set them as follows:

- Adjust the volume of your phone's ringer while the phone is ringing or while setting the ring tone of the phone.
- Adjust the handset listening volume while the handset is off hook.
- Adjust the speakerphone volume when the LED next to is illuminated.

Muting a Call

Mute lets you temporarily turn your phone's handset microphone off during a call.

- To mute a call so that the caller does not hear you, press

The LED beside the hardkey turns red when the mute is active.

Note: Mute does not work during number dial-out.

- To unmute a call that is on mute so that the caller can hear you, press again.

The LED beside the hardkey turns off.

Redialing a number

You can redial the most recently dialed number that is displayed on the **Home** screen by pressing the **Redial** hard key twice or by pressing the **Redial** softkey.

Ring Tones

There are a total of 20 (10 modern and 10 classic) distinct ring tones available for selection on the Mitel MiVoice 6930 IP phone. Two different ring tones can be configured for incoming calls from internal numbers and external numbers.

To configure ringtones for internal and external calls:

1. Press the (**Settings**) key on the phone to enter the **Settings** menu.
2. Navigate to the **Audio > Ring Tones** setting and press the **Select** button or **Select** softkey.
3. With the **Internal Ring** setting highlighted press the right navigation key to move to **Internal Ring** selection column.
4. Use the up and down navigation keys to scroll through the list and choose the applicable ring tone.
5. Press the left navigation key and then the down navigation key to highlight the **External Ring** setting.
6. With the **External Ring** setting highlighted press the right navigation key to move to **External Ring** selection column.
7. Use the up and down navigation keys to scroll through the list and choose the applicable ring tone.
8. Press the **Save** softkey to save your changes.

Thank you!