ARMMC – Mitel User Guide

Mitel 6905 IP Phone

Overview of the 6905 IP Phone

a	Message Waiting Lamp	b	LCD Screen
c	Programmable Keys	d	Navigation Keys
e	Settings Key	f	Goodbye Key
g	Redial Key	h	Hold Key
i	Line Appearance Key	j	High Quality Speakerphone
k	6905 Handset	l	Mute Key
m	Volume Control	n	Speaker Key
o	Keypad		

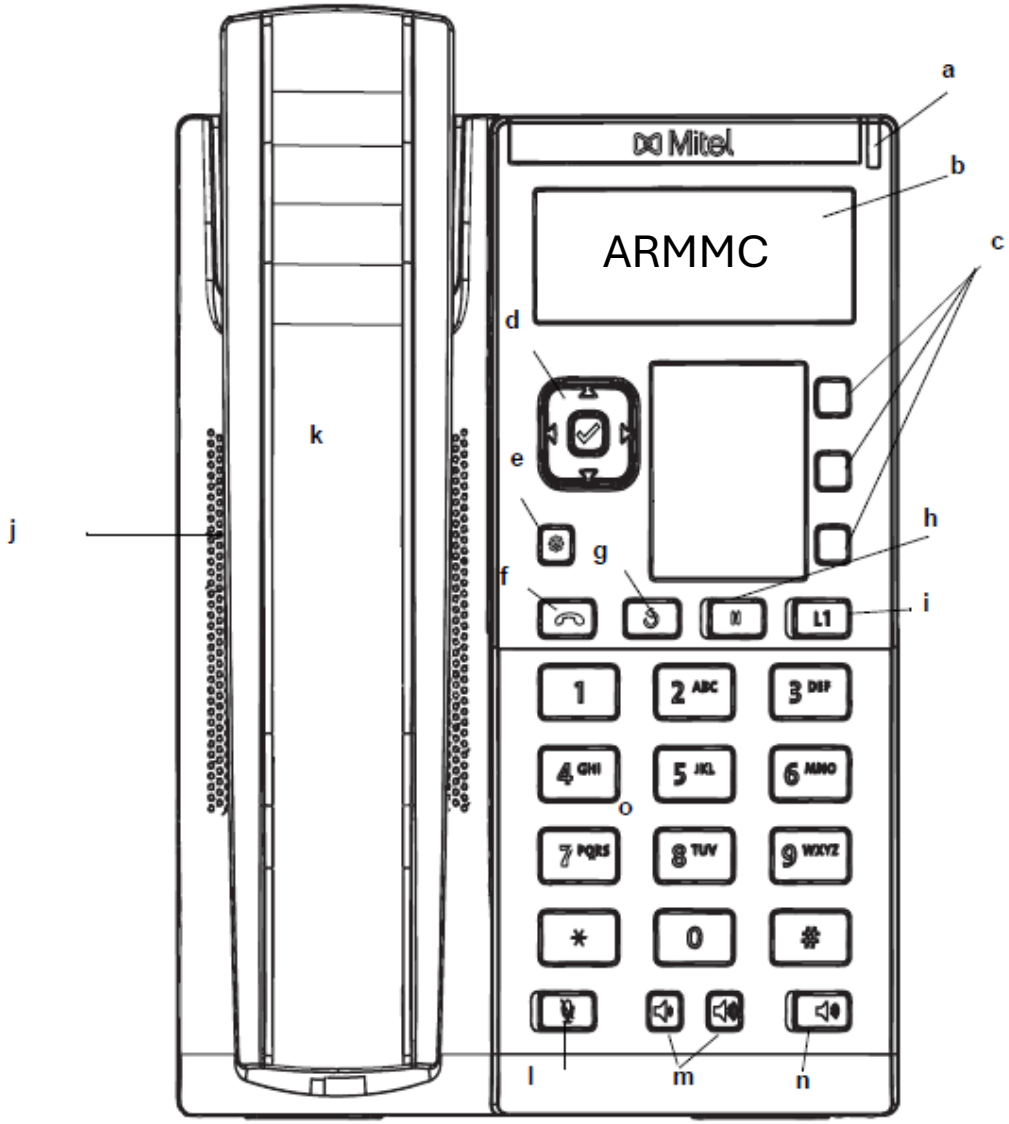

Key Description for 6905 IP Phone

	Settings key—Provides services and static settings that allow you to customize your phone.
	Volume controls —Adjusts the volume for the ringer, handset, and speakerphone. Pressing these keys during an active call adjusts the volume of the audio device being used (handset or speaker).
	Goodbye key—Ends an active call. The **Goodbye** key also exits an open list (such as **Call History**) and menus (such as the **Static Settings** menu) without saving changes.
	Redial key—Redials the last manually dialed number displayed on the LCD screen.
	Hold key—Places an active call on hold. To retrieve a held call, press the applicable **Line** key.
	Mute key—Mutes the microphone so that the caller cannot hear you. The LED beside the key turns on when the microphone is on mute.
	Speaker—Transfers the active call to the speaker.
L1	**Prime Line key** —Line or Call Appearance Keys - Connects you to a line or call. The Mitel 6905 IP phone supports one line key with an LED indicator light.
	Navigation keys and select button—Multi-directional navigation keys that allow you to navigate through the phone's UI. The right, left, and center navigation keys are used as softkeys.

ARMMC Programmable Keys for 6905 IP Phone

Call History Button
- Use this button to view missed calls, answered calls and outgoing calls

Operator/Information Button
- Use this button to quickly call the information/operator

Transfer and Conference Button (Trans/Conf Key)
- Use this button to transfer/conference a call to other user or extension number.

Basic Call Handling Operations for 6905 IP Phone

Placing Calls

To place a call, you can use the handset or the speakerphone.

Using the Handset to Place a Call

1. Pick up the handset.

2. Do one of the following:

- Dial the number.
- Press a Speed Call key.
- Press the (redial) key.

3. To end the call, hang up the handset.

Using Speakerphone to Place a Call

The handsfree speakerphone feature allows you to speak to someone without using the handset.

- To dial using speakerphone

  a. Press .

  b. Enter a number at the dial tone.

- Lift the handset to switch between speakerphone and handset.
- When the handset is on hook, press to disconnect the call.

Answering Calls

When a call is ringing at your extension, the inbound caller's name and extension are displayed on the screen. Additionally, the line LED flashes quickly to indicate an incoming call.

To answer a call, you can use the handset or the speakerphone depending on how you set your automatic off-hook preference or how your system administrator has set this option.

Using the Handset to Answer a Call

1. To answer a call using the handset, do one of the following when the phone rings:

- Pick up the handset.
- Press the flashing Line key and lift the handset.
- Press the flashing Line key.

2. To end the call, hang up the handset.

Using the Speakerphone to Answer a Call

To use a Speakerphone to answer calls, do the following:

1. Press .

The LED beside the hardkey lights red.

2. To end the call, press again.

The LED beside the hardkey turns off.

Interacting with Calls for 6905 IP Phone

Placing a Call on Hold or Off Hold

• To place an active call on hold, Press

The line key light begins to flash slowly and after a short time, the phone beeps softly to remind you that you have a call on hold.

• To take the call off hold, do either of the following:

- Press

- Press the flashing line key.

Note:

If your phone is on hook while a call is on hold, you hear a reminder ring in 10 seconds and at one-minute intervals.

Transferring a Call

You can transfer a call in two ways:

- In a blind transfer, you transfer the call without the other party first answering your call.
- In a consultative transfer, you talk to the other party before completing the transfer.

Both types of transfer use a similar procedure.

To Do a Blind Transfer

1. While engaged in a call, press the **Trans/Conf** line key.

2. Dial the number to which you want to transfer the call.

3. Do either of the following:

- To complete the transfer, hang up the handset or press the **Release** softkey.
- To cancel the transfer, press ◀ or press the key

To Do a Consultative Transfer

1. While engaged in a call, press the **Trans/Conf** line key.

2. Dial the number to which you want to transfer the call.

3. Do either of the following:

- To complete the transfer, wait for an answer, consult, and hang up the handset or press the **Release** softkey.
- To cancel the transfer, press ◀ or press the key

Setting Up a Conference Call

A conference call involves more than two parties connected to a call. The number of persons you can add using your programmed **Trans/Conf** line key to participate in a conference call. You can set up a conference call using either of the following methods:

- In a blind conference call, you add persons to a conference call without them first answering your call.
- In a consultative conference call, you talk to each person before adding that person to the conference call.

Setting up a conference call:

1. When you begin a conference, you are the first party in the conference (Party 1). Pick up the handset or press the key. A line opens up.

2. Dial the number of Party 2 (or answer an incoming call of the Party).

3. Wait for Party 2 to answer. When Party 2 answers, you can consult with the party before adding that party to the conference.

4. Press the **Trans/Conf** line key.

The call is put on hold.

Note: Press if you want to cancel the conference.

Conference Call

Creating a Conference Call by Joining Two Active Calls

1. Ensure you are on an active call with one of the parties with whom you want to create a conference (the other party should be placed on hold).

2. Press ◄ and ► the navigation keys to scroll to the party you want to add to the conference.

3. Press the **Trans/Conf** line key.

The two parties will connect with you to form a conference call.

Leaving a Conference

To leave a conference, hang up the handset or press

Using the Call History

The call history displays recent external inbound, missed, and transferred calls, with the most recent call listed first. Each entry in the History list displays the caller's name or number (if available) and the time or date of the call. Once enabled on your phone by your system administrator, the call history functions automatically.

Viewing a List of All Calls Received, Transferred, Or Missed

1. Press the **Call History** line key.

2. Use ◄ and ► to navigate through the missed, answered, or outgoing calls.

- The total number of missed calls is displayed in parenthesis and the number of new (unread) missed calls is indicated with an *.

  For example, MISSED CALLS *2(3)

  - *2 indicates that there are two new (unread) missed calls from unique numbers.
  - 3 indicates that the total number of missed calls (read and unread) is 3.

- The total number of answered and outgoing calls are displayed in brackets.

  For example, OUTGOING (2)

  2 indicates that the number of unread outgoing calls from a specific number is 2.

3. To view the list of missed, answered, or outgoing calls, press the **Yes** softkey followed by the ▲ and ▼ key to scroll the list.

4. Press the **Exit** softkey to go back to the call history options.

5. Press to exit the call history option.

Note: To close the call history, press .

Using the Call History

Placing a Call Using the Call History

1. Press the **Call History** line key.

2. Use the to scroll the list of missed, answered, or outgoing calls.

3. With the name of the person you want to call displayed on the screen, do either of the following to dial the call:

- Pick up the handset to take the phone off hook.
- Press the button to take the phone off hook.

Other User Setting for the 6905 IP Phone

Adjusting the Ring and Listening Volume

To adjust the volume on your phone, use the keys. The volume settings for the ringer, handset, and speakerphone are independent of one another, and you can set them as follows:

- Adjust the volume of your phone's ringer while the phone is ringing or while setting the ring tone of the phone.
- Adjust the handset listening volume while the handset is off hook.
- Adjust the speakerphone volume when the LED next to is illuminated.

Muting a Call

Mute lets you temporarily turn your phone's handset microphone off during a call.

- To mute a call so that the caller does not hear you, press

  The LED beside the hardkey turns red when the mute is active.

  Note: Mute does not work during number dial-out.

- To unmute a call that is on mute so that the caller can hear you, press again.

  The LED beside the hardkey turns off.

Redial

1. To redial the last number that you manually dialed, pick up the handset (optional).
2. Press

Audio Settings

The **Audio** option allows you to select a ring tone from the available options.

Changing the Ring tone

1. Press .

2. Press ▼ to navigate to **User settings** and press ▶ to select the option.

3. Navigate to the **Audio > Ring Tones** option and press ▶ to select the option.

4. Use ▲ and ▼ to navigate through the available ring tones (**Classic 1** through **Classic 10**) and press the **Save** softkey to set a ring tone.

The ring tone you select is immediately applied to the IP phone.

Thank you!