**Solar ESS Co. Ltd.**
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

INSTALLER GUIDE · BATTERY COMMUNICATION

# Dyness: parallel battery communication

PowerBox Pro (10.24 kWh) wall battery · also applies to DL5.0C and A48100 / B4850 rack modules (CAN IN / CAN OUT)

**One rule for every brand:** only the **master** battery talks to the inverter. All other batteries are chained to it.


## 1 · Set the master / address




| Master 0010 | Master 0100 | Master 0110 | Every slave 0000 |
|---|---|---|---|
| Solis, GoodWe, Deye, Sofar, Victron (CAN) | Growatt SPH / SPA (CAN) | Growatt SPF (RS485) | All OFF |

**Only the master is set**, to match the inverter brand. Every slave stays at 0000 (all OFF). Switch 4 is baud rate: leave OFF (CAN 500k / RS485 9600). A single battery uses the master setting.

## 2 · Connect the communication cables

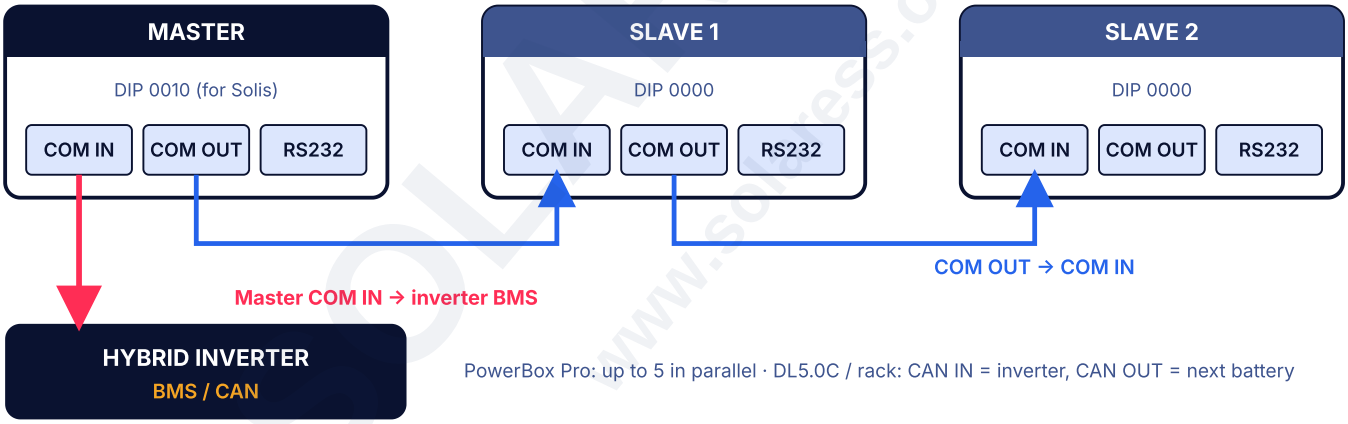


1. Inverter **BMS / CAN** → **Master COM IN** (on DL5.0C / rack modules: **CAN IN**).
2. **Master COM OUT** → **Slave 1 COM IN**, then Slave 1 COM OUT → Slave 2 COM IN, and so on.
3. The master's port pinout is CAN-H pin 4, CAN-L pin 5, matching Solis and Deye BMS ports. Use the cable labelled for the inverter if one is supplied.
4. On PowerBox Pro the manual places the master at the bottom of the stack.

SOLAR ESS www.solaress.org

**Solar ESS Co. Ltd.**
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

## 3 · Inverter settings

- **Solis:** Advanced Settings → Storage Energy Set → Battery Select → **Dyness LV**.
- **Deye:** Battery Mode → Lithium; BMS lithium protocol for Dyness/Pylon CAN (check the Deye manual for the number).
- **GoodWe:** select Dyness in the battery list (SolarGo app).
- **Growatt SPF:** Program 05 = LI, master DIP 0110 (RS485).
- Check: inverter max charge current ÷ one battery's current = number of batteries. If not, a slave is not communicating.

## 4 · Power-on sequence

1. DC breakers OFF. Set the master DIP, slaves 0000.
2. Switch on each battery (Reset / SW button). DL5.0C and rack modules: switch all on, then hold the master SW for 3 seconds.
3. Check all LEDs are green and the voltage at the inverter is above 44.8 V with correct polarity.
4. Close the DC breakers, then start the inverter.
5. Switch off: loads off, breakers off, then hold the master Reset for 3 seconds.

A 120 Ω CAN terminal resistor is supplied with PowerBox Pro. Fit it only where the manual for your unit shows it.

## 5 · Cable & good practice

| | |
|---|---|
| **Pinout** | CAN-H pin 4, CAN-L pin 5, RS485-A pin 2, RS485-B pin 1. |
| **Cable** | Standard straight LAN cable (CAT5e/CAT6, T568B both ends). No crossover. |
| **Routing** | Keep communication cables away from DC power cables. Plugs must click in fully. |
| **Mixing** | Never mix brands, models or capacities in one battery bank or one communication chain. |
| **Voltage** | Before paralleling, charge or rest all packs so their voltages are close. |

## 6 · Troubleshooting: "no SOC" or "BMS communication fail"

| | |
|---|---|
| **Master LED1 flashing yellow** | Communication fault between batteries: check the COM OUT → COM IN cables. |
| **LED1 and LED2 flashing alternately** | Address fault: a slave DIP is not 0000, or a cable is in the wrong port. |
| **Inverter shows no battery** | Master DIP does not match the inverter brand, or the inverter cable is in a slave. |
| **Battery never reaches 100%** | Set the inverter charge voltage to 57.1–57.6 V (PowerBox Pro) or 56.5–57 V (DL5.0C). |
| **Batteries switch off by themselves** | Auto-sleep after about 72 hours without communication: check the inverter link. |

SOLAR ESS www.solaress.org