Solar ESS Co. Ltd.
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

INSTALLER GUIDE · BATTERY COMMUNICATION

GoodWe: parallel battery communication


Lynx Home U · LX U5.4-L low-voltage battery (51.2 V, up to 6 units) · notes for LX U5.0-30 (G3) and LX A5.0

One rule for every brand: only the **master** battery talks to the inverter. All other batteries are chained to it.

1 · Set the master / address

No DIP switch and no address knob on the LX U5.4-L: the batteries choose the master themselves. What matters is (1) a straight COM-to-COM chain, (2) the **terminal resistor** in the free COM port of the **last** battery, and (3) the correct battery model and quantity selected in the inverter app. The older SECU-A5.4L uses DIP switches (DIP2 = terminal resistor ON at the last battery): follow its own manual. The Lynx Home F is a high-voltage battery and is not covered here.

2 · Connect the communication cables

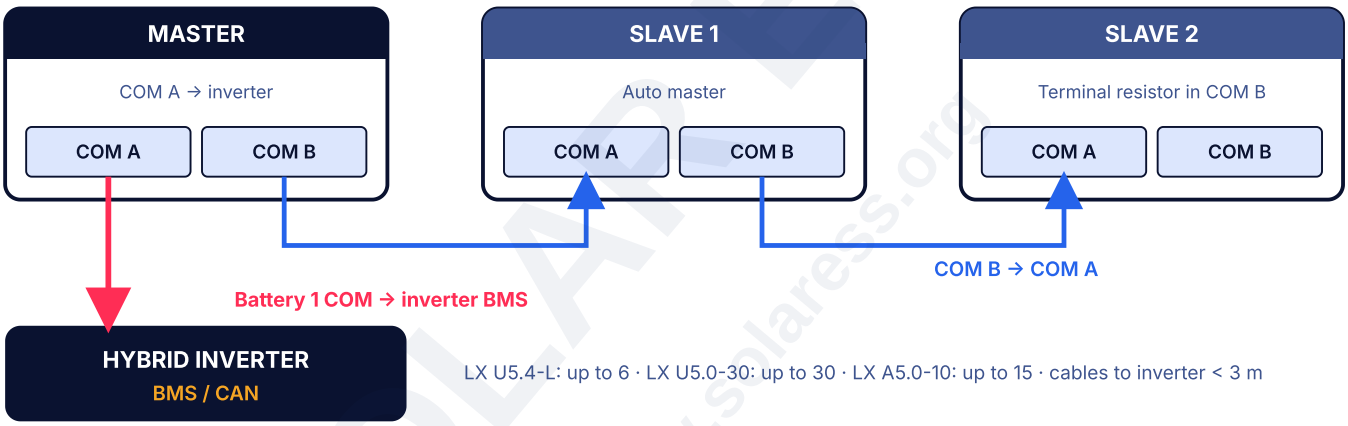

1. Inverter **BMS / CAN** → **one COM port** of battery 1. The two COM ports are identical; either can be used.
2. Battery 1 **other COM** → battery 2 **COM**, then battery 2 → battery 3, and so on.
3. Plug the supplied **terminal resistor** into the free COM port of the **last** battery (a single battery: in its second COM port).
4. COM pinout: CAN-H pin 4, CAN-L pin 5; all other pins unused. Power: + to +, − to − between batteries (20–25 mm²).

SOLAR ESS www.solaress.org

Solar ESS Co. Ltd.
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

3 · Inverter settings

- Connect to the inverter Wi-Fi (Solar-WiFi***) with **PV Master / SolarGo**.
- Basic Setting → Battery Model → **Lynx-U**, then choose the model **and quantity**, e.g. **LX U5.4-L × 3**.
- There is no auto-detect: a wrong model or count gives "Battery Selection Abnormal" or BMS communication failure.
- LX U5.0-30 (G3) and LX A5.0: select the model in SolarGo the same way.

4 · Power-on sequence

1. Check all power and COM cables and the terminal resistor.
2. Switch on the DC breaker.
3. Press the power button on **every battery within 30 seconds**, otherwise the batteries alarm.
4. Start the inverter and check SOC and capacity on the app.
5. Undervoltage lock-out: press the button 5 times within 10 seconds to force charging.

Use batteries of the same model, similar production date and the same cell grade. LX U5.4-L systems cannot be expanded later; LX U5.0-30 can be expanded with the same model within 1 year.

5 · Cable & good practice

Terminator	Always in the free COM port of the last battery, including on single-battery systems.
Cable	Standard straight LAN cable (CAT5e/CAT6, T568B both ends). No crossover.
Routing	Keep communication cables away from DC power cables. Plugs must click in fully.
Mixing	Never mix brands, models or capacities in one battery bank or one communication chain.
Voltage	Before paralleling, charge or rest all packs so their voltages are close.

6 · Troubleshooting: "no SOC" or "BMS communication fail"

Red LED blinking every 3 s	Master/slave communication lost: check the COM cables and restart all batteries within 30 s.
"Multi-master control failure"	Restart all batteries together within 30 seconds.
"Battery Selection Abnormal"	Wrong battery model or quantity in PV Master / SolarGo.
"Inconsistent software version"	Batteries have different firmware: ask our supplier to update them.
BMS communication failure	Terminal resistor missing, or the cable is not straight pin 4/5.