**Solar ESS Co. Ltd.**
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

INSTALLER GUIDE · BATTERY COMMUNICATION

# GoodWe: parallel battery communication


Lynx Home U · LX U5.4-L low-voltage battery (51.2 V, up to 6 units) · notes for LX U5.0-30 (G3) and LX A5.0

**One rule for every brand:** only the **master** battery talks to the inverter. All other batteries are chained to it.

## 1 · Set the master / address

**No DIP switch and no address knob** on the LX U5.4-L: the batteries choose the master themselves. What matters is (1) a straight COM-to-COM chain, (2) the **terminal resistor** in the free COM port of the **last** battery, and (3) the correct battery model and quantity selected in the inverter app. The older SECU-A5.4L uses DIP switches (DIP2 = terminal resistor ON at the last battery): follow its own manual. The Lynx Home F is a high-voltage battery and is not covered here.

## 2 · Connect the communication cables

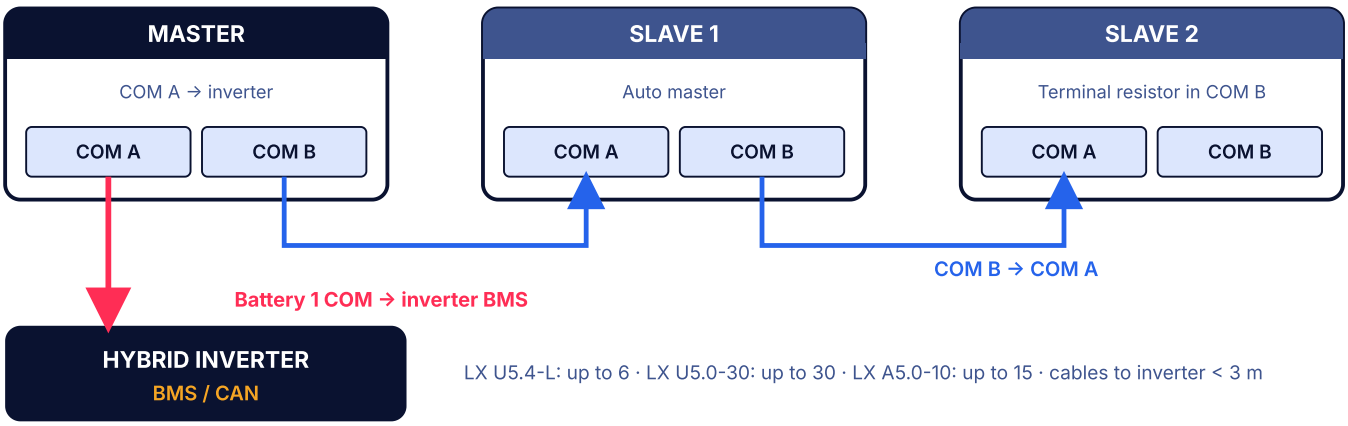


1. Inverter **BMS / CAN** → **one COM port** of battery 1. The two COM ports are identical; either can be used.
2. Battery 1 **other COM** → battery 2 **COM**, then battery 2 → battery 3, and so on.
3. Plug the supplied **terminal resistor** into the free COM port of the **last** battery (a single battery: in its second COM port).
4. COM pinout: CAN-H pin 4, CAN-L pin 5; all other pins unused. Power: + to +, − to − between batteries (20–25 mm²).

**Solar ESS Co. Ltd.**
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

## 3 · Inverter settings

- Connect to the inverter Wi-Fi (Solar-WiFi***) with **PV Master / SolarGo**.
- Basic Setting → Battery Model → **Lynx-U**, then choose the model **and quantity**, e.g. **LX U5.4-L × 3**.
- There is no auto-detect: a wrong model or count gives "Battery Selection Abnormal" or BMS communication failure.
- LX U5.0-30 (G3) and LX A5.0: select the model in SolarGo the same way.

## 4 · Power-on sequence

1. Check all power and COM cables and the terminal resistor.
2. Switch on the DC breaker.
3. Press the power button on **every battery within 30 seconds**, otherwise the batteries alarm.
4. Start the inverter and check SOC and capacity on the app.
5. Undervoltage lock-out: press the button 5 times within 10 seconds to force charging.

Use batteries of the same model, similar production date and the same cell grade. LX U5.4-L systems cannot be expanded later; LX U5.0-30 can be expanded with the same model within 1 year.

## 5 · Cable & good practice

| | |
|---|---|
| **Terminator** | Always in the free COM port of the last battery, including on single-battery systems. |
| **Cable** | Standard straight LAN cable (CAT5e/CAT6, T568B both ends). No crossover. |
| **Routing** | Keep communication cables away from DC power cables. Plugs must click in fully. |
| **Mixing** | Never mix brands, models or capacities in one battery bank or one communication chain. |
| **Voltage** | Before paralleling, charge or rest all packs so their voltages are close. |

## 6 · Troubleshooting: "no SOC" or "BMS communication fail"

| | |
|---|---|
| **Red LED blinking every 3 s** | Master/slave communication lost: check the COM cables and restart all batteries within 30 s. |
| **"Multi-master control failure"** | Restart all batteries together within 30 seconds. |
| **"Battery Selection Abnormal"** | Wrong battery model or quantity in PV Master / SolarGo. |
| **"Inconsistent software version"** | Batteries have different firmware: ask our supplier to update them. |
| **BMS communication failure** | Terminal resistor missing, or the cable is not straight pin 4/5. |