Solar ESS Co. Ltd.
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

INSTALLER GUIDE · BATTERY COMMUNICATION


Parallel batteries: master & slave cabling

DIP switches, LAN (RJ45) sockets and the inverter link for LVTOPSUN and IntelliHome low-voltage batteries

One rule for every brand: only the **master** battery talks to the inverter. All other batteries are chained to it, **Link Out → Link In**.

1 · LVTOPSUN (512314 / G-series)


Set the DIP switch (before power-on)

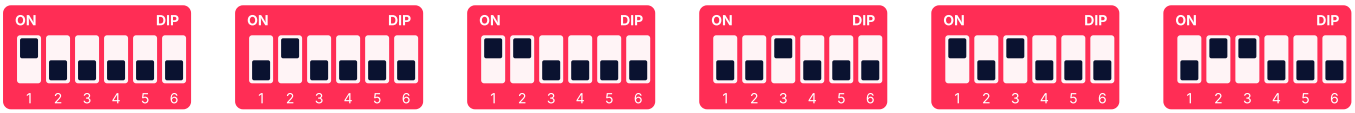

Address 1	Address 2	Address 3	Address 4	Address 5	Address 6
Master	Slave	Slave	Slave	Slave	Slave

6 switches, binary address. Every battery needs its own address. A single battery = 1. Up to 63.

Connect the communication cables

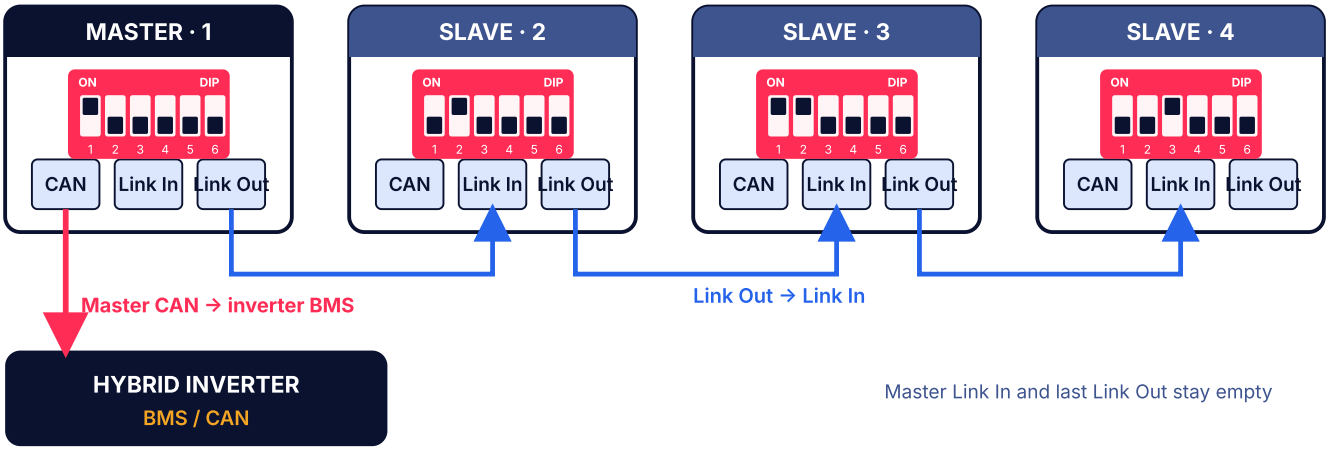


Master Link In and last Link Out stay empty

1. **Master CAN** → inverter **BMS / CAN** port.
2. **Master Link Out** → **Slave 2 Link In**, then Slave 2 Link Out → Slave 3 Link In, and so on.
3. Battery touchscreen → **Set Protocol → PYLON CAN** (master).
4. Inverter → Battery Select: **LVTOPSUN** if listed, otherwise **Pylon LV**.
5. Switch on all batteries, then the inverter. SOC on the inverter must match the battery screen.

Solar ESS Co. Ltd.
53 Moo 2 Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829
www.solaress.org · www.โซลาร์เอสส์.com

2 · IntelliHome (5 / 10 / 14 / 16 kWh)

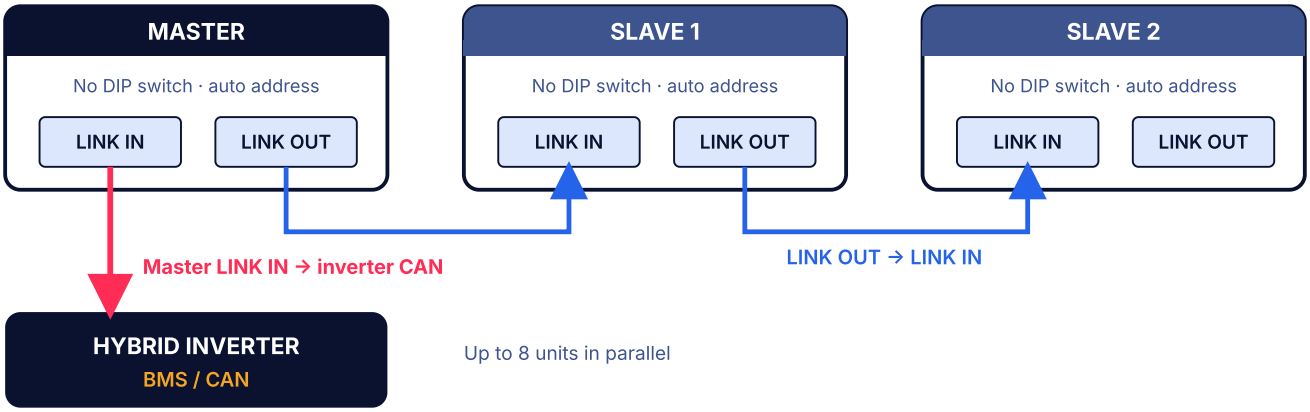

1. **No DIP switch.** Addresses are set automatically from the cable order.
2. Inverter **BMS / CAN** → **Master LINK IN**.
3. **Master LINK OUT** → **Slave 1 LINK IN**, then Slave 1 LINK OUT → Slave 2 LINK IN.
4. No battery model to select: the Solis inverter recognises IntelliHome automatically.
5. Before power-on, check the voltage difference between packs is **below 2.5 V**.
6. Switch on the **master first**, then each slave **2 seconds apart**. Start the inverter last.

> Confirm the inverter port against the wiring drawing supplied with the units before first power-up.

3 · Cable & good practice

Cable	Standard straight LAN cable (CAT5e/CAT6, T568B both ends). No crossover.
Pinout	CAN-H pin 4, CAN-L pin 5 on both brands. Check the inverter BMS port matches.
Routing	Keep communication cables away from DC power cables. Plugs must click in fully.
Mixing	Never mix brands or capacities in one battery bank or one communication chain.

4 · Troubleshooting: "no SOC" or "BMS communication fail"

Inverter cable is in a slave	Move it to the master: CAN (LVTOPSUN) or LINK IN (IntelliHome).
Two batteries share one address	Re-set the DIP switches, then power-cycle all batteries.
Wrong protocol	Battery PYLON CAN, inverter Pylon LV (LVTOPSUN).
Loose or crossed cable	Re-crimp or replace with a straight cable, check pins 4 and 5.