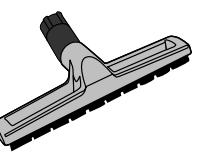


DCO7 accessories


The following items can be used with your DCO7. For further information please see the order form, or visit the Dyson website at www.dyson.com

Hard floor tool


For improved pick-up on hard floors.

**Stubborn dirt brush**

With stiff bristles for dried-in and stubborn dirt.

**Flexi crevice tool**


Extends and flexes into awkward gaps.

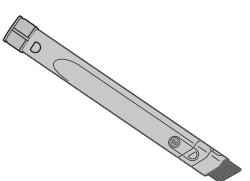**Soft dusting brush**


Soft bristles to gently dust around the home.

**Mattress tool**


Removes dirt and dust mites from mattresses and upholstery.

**Mini turbine head**


Picks up pet hair and dirt from stairs and upholstery.

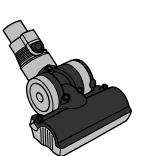**Low reach floor tool**

For easier cleaning under low furniture.

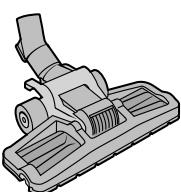**Carpet cleaning kit**

Keeps new carpets looking new.

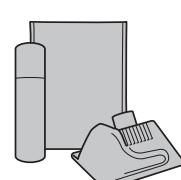
**Important**

- The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
- This appliance is not intended for use by young children or infirm persons without supervision.
- On machines without brush control the brushbar spins at all times – even when the machine is upright. Young children should be supervised to ensure they do not play with the appliance, or place body parts near the cleaner head.
- Check that your electricity supply corresponds to that shown on the rating plate. The appliance must only be used as rated.
- If the supply cable of the appliance is damaged, disconnect the appliance from the socket outlet immediately. The supply cable must be replaced by the manufacturer or its service agent
- or a similarly qualified person in order to avoid a hazard.
- Do not use the cleaner if the cable or plug are damaged or if the cleaner has been damaged, dropped or has come into contact with water or any other liquid. In these cases, contact the Dyson Helpline.
- When vacuuming, certain carpets may generate small static charges in the clear bin™. These are entirely harmless and are not associated with the mains supply. To minimise any effect from this, do not put your hand or insert any object into the clear bin™ unless you have first emptied it and rinsed it out with cold water.
- Do not continue to use the cleaner if any part appears to be faulty, missing or damaged.

European conformity information:

A sample of this product has been tested to conform with the following European Directives: 73/23/EEC Low Voltage (Safety) Directive, 93/68/ EEC CE Marking Directive and 89/336/EEC EMC Directive.


NB: Small details may vary slightly.

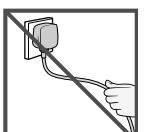For your safety


Do not pull on supply cable.




Do not use cleaner above you on stairs.

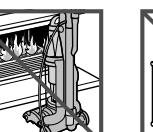


Do not use cleaner near naked flames.

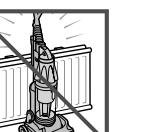


Do not leave cleaner near heat sources.

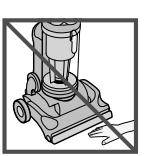


Do not place hands under brushbar when in use.

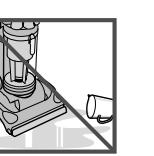

Do not use cleaner to pick up water or any other liquid.

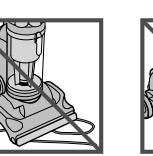

Do not run over supply cable.

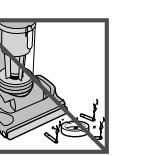

Do not use cleaner to pick up burning objects of any kind.

This product is protected by the following Intellectual Property Rights:

CA 1,241,809 AU 2002231965 AU 2002236554
US 4,573,236 CA 2,438,077 CA 2,438,855
CA 2,312,827 EP 1361813 EP 01370173
US 5,526,623 JP 2002-567126 JP 2002-567131
CA 2,313,177 US 2004-0068829 US 6994740
US 6,691,849 AU 287872 AU 2002241151
CA 2,315,078 EP 1320317 CA 2442218
US 6,289,553 JP 2004-509684 EP 1377196
CA 2,325,953 US 7069620 JP 2004-528087
US 6,425,931 AU 2002226556 AU 2002225207
CA 2,351,552 CA 2,439,250 CA 2,438,069
US 6,572,078 EP 1370172 EP 1361814
US 6,442,791 US 6991666 US 7018439
AU 2001232024 AU 2002229966 AU 2002225232
CA 2400404 CA 2,439,032 CA 2,438,079
EP 1265519 EP 1361812 EP 1361815
JP 2003-525673 JP 2004-537336 JP 3940082
US 7036183 US 7278181 US 6974488
Design registrations: CA 97332, US D475,820, CA 86192
US D427,737, US D455,242

Equivalent patents, design registrations and applications exist in other countries.

5 year guarantee

Register now for your free 5 year guarantee

**DC
07**

dyson

**ONLINE**

Just visit
www.dyson.co.uk/register

**PHONE**

7 days a week
(UK) 0800 298 0298
(IRL) (01) 475 7109

**MAIL**

Complete and return the
freepost registration form

ask dyson
advice and support

We'll help you choose the right Dyson cleaner and give you any advice and assistance you need when you're using it. You can contact us anytime at www.dyson.com or call our team of experts on UK 0800 298 0298, IRL 01 475 7109 between 7am and 10pm, 7 days a week.


www.dyson.com

Ensure you register for your 5 year guarantee today

After registering for your 5 year guarantee, your Dyson vacuum cleaner will be covered for parts and labour for 5 years from the date of purchase, subject to the terms of the guarantee.

If you have any query about your Dyson, call the Dyson Customer Helpline with your serial number and details of where/when you bought the cleaner. Your serial number can be found on your rating plate which is underneath the machine beneath the wheels or behind the clear bin™.

Most queries can be solved over the phone by one of our trained Helpline staff. If your machine needs attention, we'll aim to send one of our Dyson engineers to fix it within 3 working days. We won't keep you waiting around either: our engineers can visit a home or work address - wherever is most convenient for you.

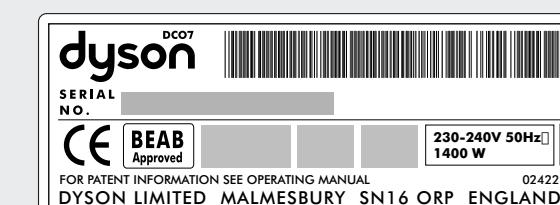



Note your serial number for future reference:

WARM WELCOME
HELLO DABBLING
HI JET SWEEPING



User Guide

Please read this guide carefully before using your DCO7

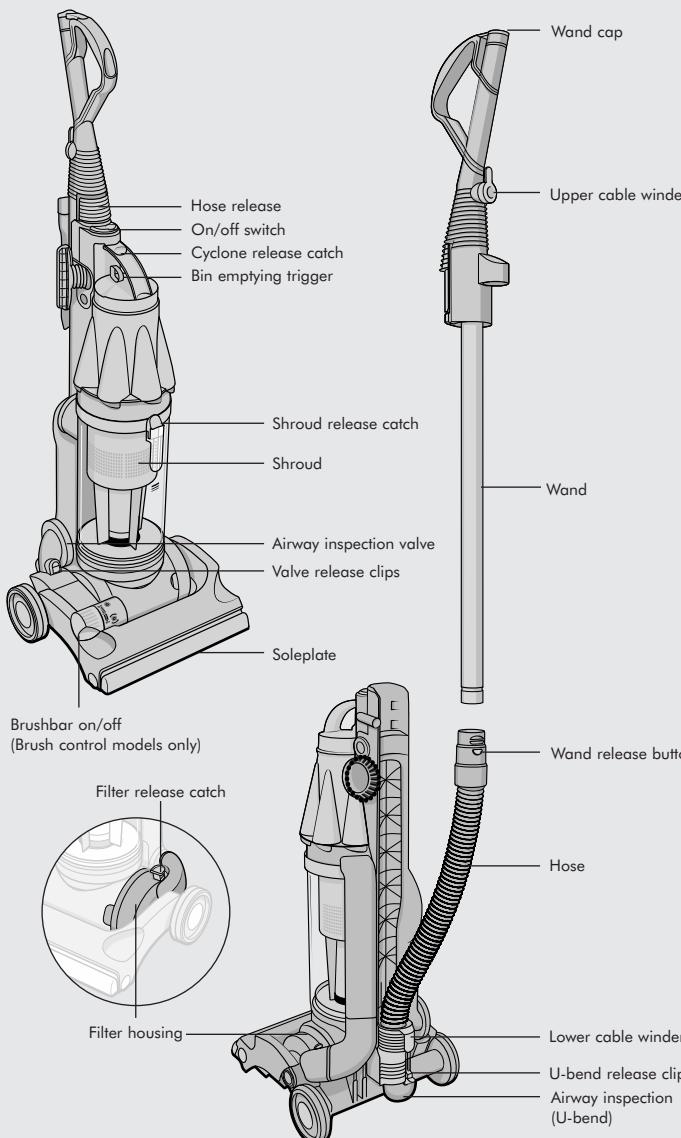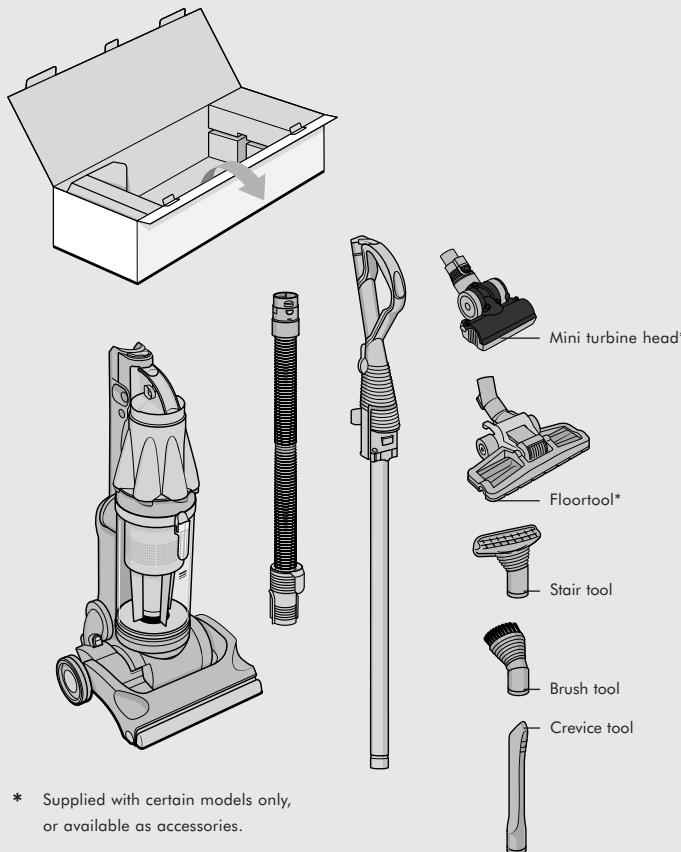DC07**Assembling DC07**

1 Slide hose into runners at back of machine, making sure tab clicks into place.



2 Press wand release button and slide wand down into hose.

⚠️ DCO7 models without brush control are not suitable for hard floors, as the brushbar cannot be turned off. We recommend models with brush control for homes with mixed and hard flooring.

U-bend airway inspection

Tilt machine forward and slide out U-bend airway inspection valve **A**. Check inside for blockages.

⚠️ Make sure all parts have been replaced securely before using your machine.

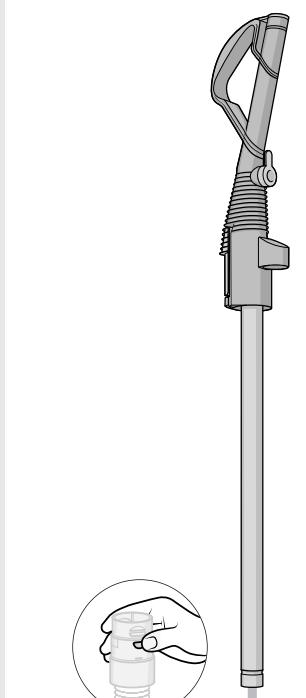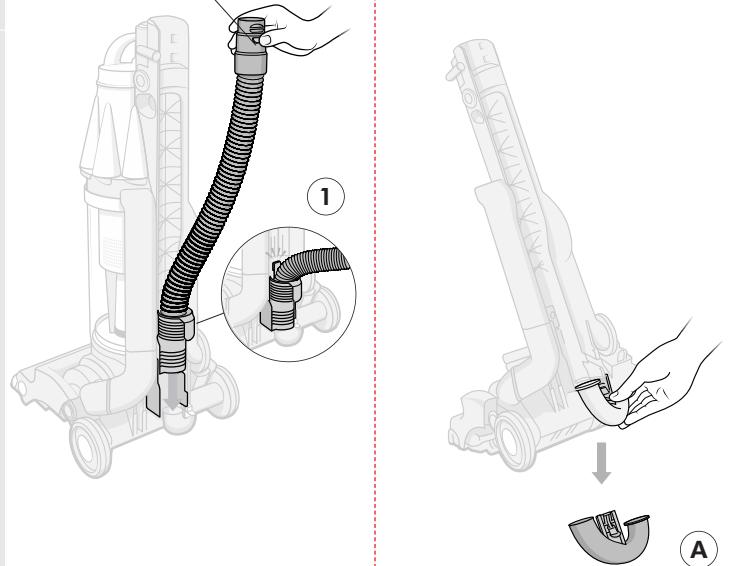

⚠️ The ratchet noise warns that the brushbar is obstructed. Disconnect the machine from the electrical outlet before removing the obstruction.

Turn power off and unplug before checking for blockages.

