SYBINA

MARPOL eRB

Electronic Record Book for the Oil Record Book, Parts I and II

User Manual

Version 1.0.0 · October 2026

1. Introduction

MARPOL eRB is an electronic Oil Record Book for ships, following MARPOL Annex I. It keeps:

- **Oil Record Book Part I**: machinery space operations, for all ships.
- **Oil Record Book Part II**: cargo and ballast operations, for oil tankers.

Each entry is recorded under its MARPOL code letter, signed by the officer in charge and endorsed by the master. The application keeps the full history of entries and corrections, an audit log of user activity, and daily backups of its database.

2. Getting started

2.1 Home screen


After start-up the application opens the home screen. The two buttons on the right open the two record books.



Home screen

2.2 Logging in

Opening a record book asks for your user name and password. Type them and press **LOGIN** or Enter. Your name is then shown at the top right, next to **Logout**. Pages that require the Chief Engineer's signature are endorsed by the master's signature.

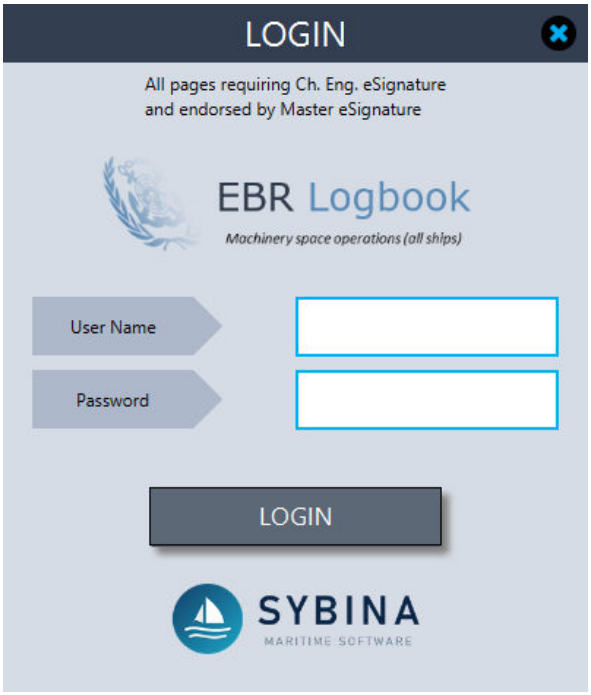

Login dialog


Use **Logout** at the top right to end your session. The login dialog appears again.

2.3 Switching between the record books

Use **Perspectives › Show Perspective** to switch between the **Main Perspective** (home screen), **Oil Record Book Part I** and **Oil Record Book Part 2**.

3. Setting up the ship (Marpol detail)


Before any entry can be saved or signed, the ship and its tanks must be set up. Open the **Marpol detail** tab of either record book.

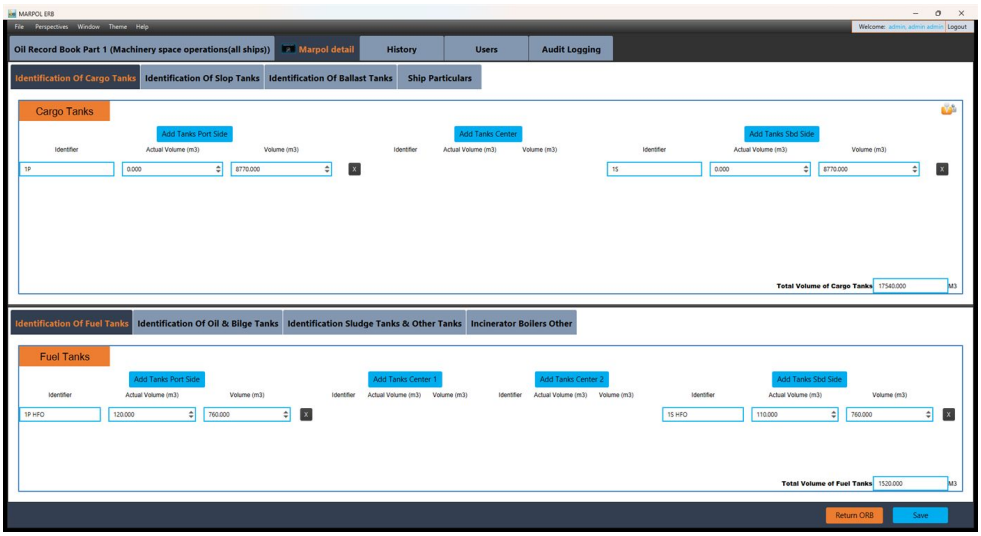

Marpol detail: identification of tanks


- **Ship Particulars**: name, distinctive number and other particulars of the ship. These are printed on every report.
- **Identification of tanks**: cargo, slop and ballast tanks, fuel tanks, oil and bilge tanks, sludge and other tanks, and incinerators and boilers. For each group, add tanks on the port side, centre and starboard side with **Add Tanks**, and enter their identifier and volume in m³. The total volume of each group is calculated for you.

Press **Save** to store the details, or **Return ORB** to go back to the record book. The tanks you define here are the ones offered in the code letter forms.

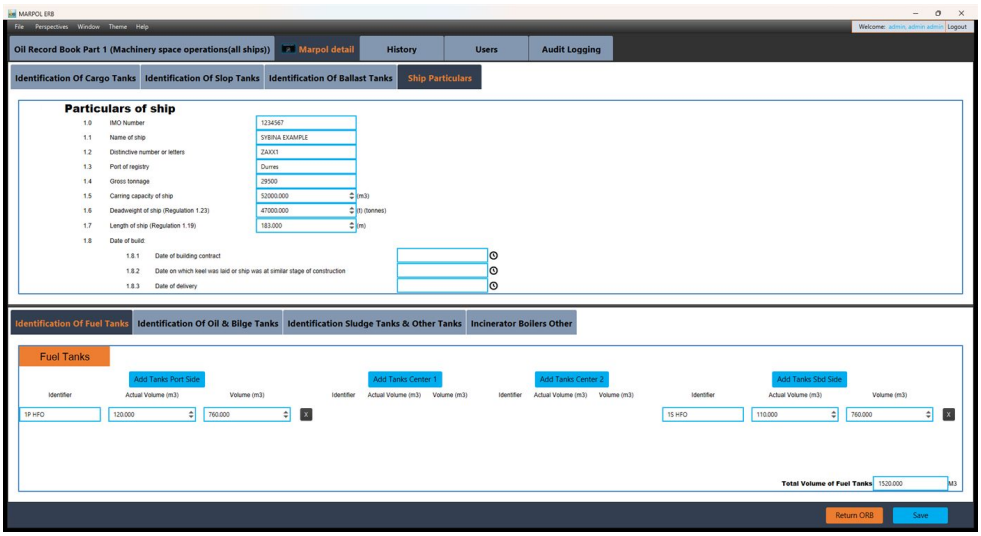

Marpol detail: ship particulars

4. Recording an entry

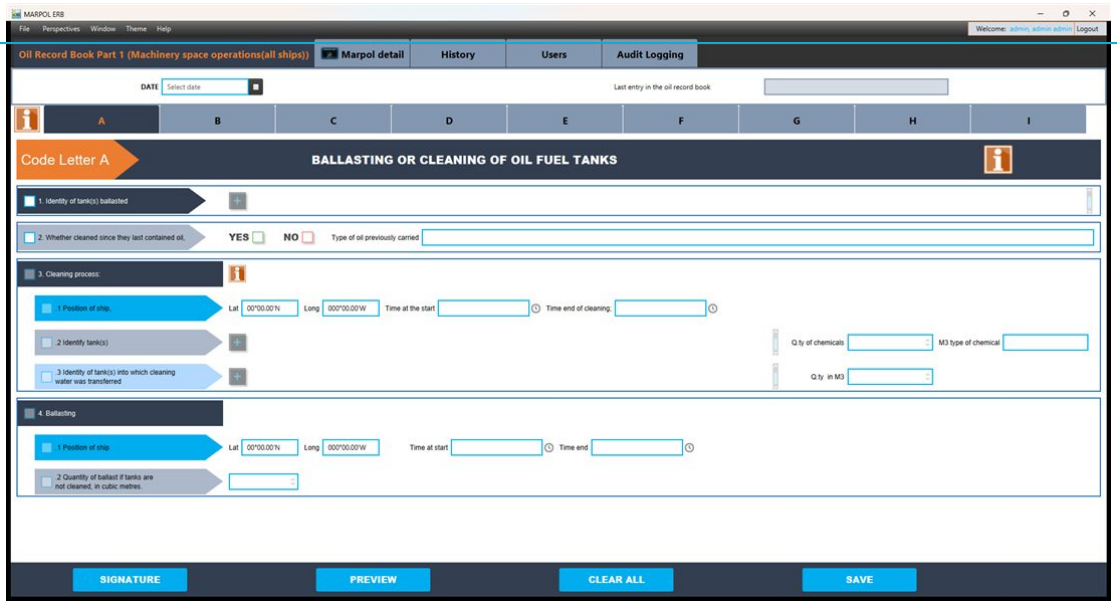

Oil Record Book Part I, code letter A


1. Pick the **DATE** of the operation with the calendar button. The date cannot be in the future, and cannot be before the **Last entry in the oil record book** shown on the right.
2. Select the tab of the **code letter** of the operation.

3. Tick the check box of each item you want to record. This enables its fields. Fill in the fields; use the **+** buttons to choose tanks and **ADD OPERATION** where an operation can repeat.
4. Press **PREVIEW** to check the entry as it will appear in the record book.
5. Press **SIGNATURE**, enter your **Rank**, **Name** and **Surname**, sign in the signature area and press **ACCEPT**. **RESET** clears the signature.
6. Press **SAVE** to record the entry. **CLEAR ALL** empties the form instead.

The application checks every entry before it is previewed, signed or saved, and tells you what is missing or inconsistent (for example a missing date, tank or quantity).

4.1 Guidance for each code letter

The orange **i** buttons open guidance for the code letter or item: what has to be recorded, a filled-in example, the resulting record book entry and notes on how to measure quantities.

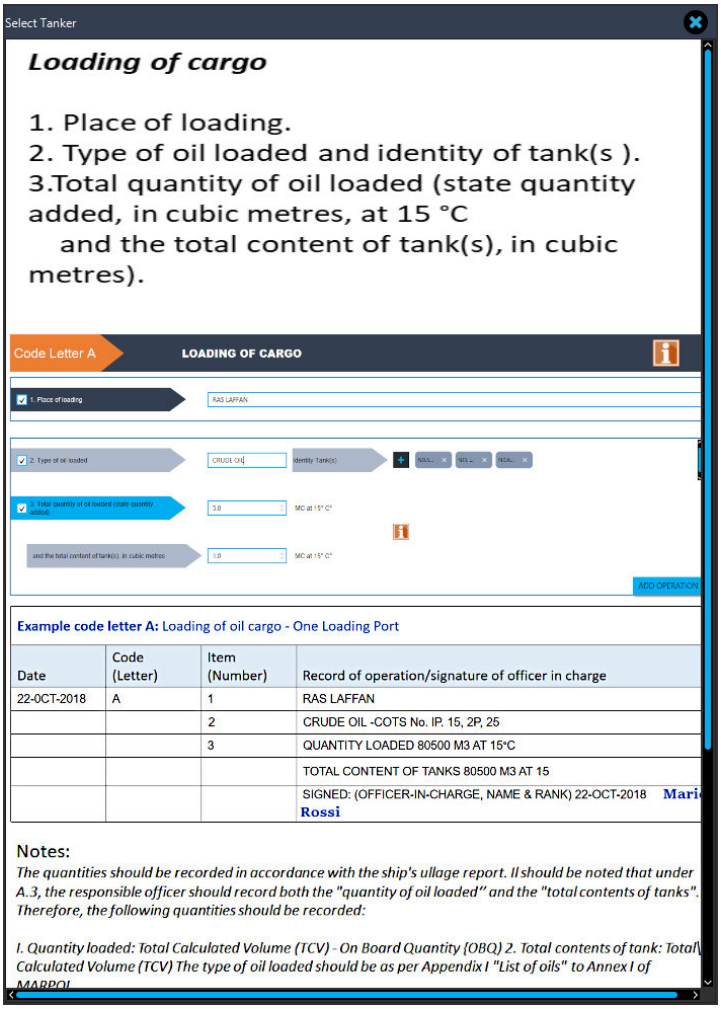

Guidance for Part II code letter A

4.2 Oil Record Book Part I code letters

A. Ballasting or cleaning of oil fuel tanks

B. Discharge of dirty ballast or cleaning water from oil fuel tanks referred to under section A

C. Collection, transfer and disposal of oil residues (sludge)

D. Non-automatic starting of discharge overboard, transfer or disposal otherwise of bilge water which has accumulated in machinery spaces

E. Automatic starting of discharge overboard, transfer or disposal otherwise of bilge water which has accumulated in machinery spaces


F. Condition of the oil filtering equipment

G. Accidental or other exceptional discharges of oil

H. Bunkering of fuel or bulk lubricating oil

I. Additional operational procedures and general remarks

4.3 Oil Record Book Part II code letters

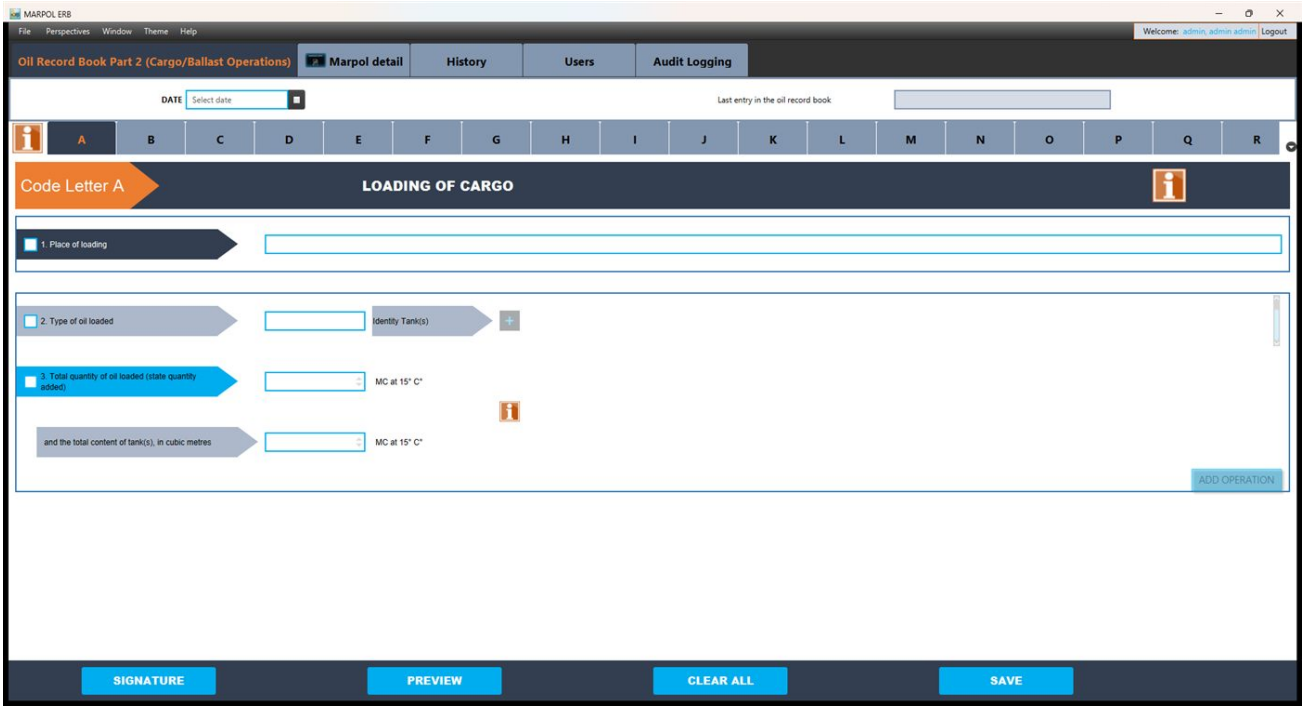

Oil Record Book Part II, code letter A

A. Loading of oil cargo

B. Internal transfer of oil cargo during voyage

C. Unloading of oil cargo

D. Crude oil washing (COW tankers only)

E. Ballasting of cargo tanks

F. Ballasting of dedicated clean ballast tanks (CBT tankers only)

G. Cleaning of cargo tanks

H. Discharge of dirty ballast

I. Discharge of water from slop tanks into the sea

J. Collection, transfer and disposal of residues and oily mixtures not otherwise dealt with

K. Discharge of clean ballast contained in cargo tanks

L. Discharge of ballast from dedicated clean ballast tanks (CBT tankers only)

M. Condition of oil discharge monitoring and control system

N. Accidental or other exceptional discharges of oil

O. Additional operational procedures and general remarks

P. Loading of ballast water (tankers engaged in specific trades)


Q. Re-allocation of ballast water within the ship (tankers engaged in specific trades)

R. Ballast water discharge to reception facility

5. History

The **History** tab lists the recorded entries with their date, code letter, item number, content, correction note, the name and signature of the officer, and the master's signature. Filter the list by **Ship Operations Date** and by **Log Registration Date**; the **Actual Ship Operations** and **Actual Log Registration** options limit it to the current entries.

- **History Preview** and **Preview** produce the record book pages as a report.
- **Master Sign & Save** lets the master endorse the selected entries.

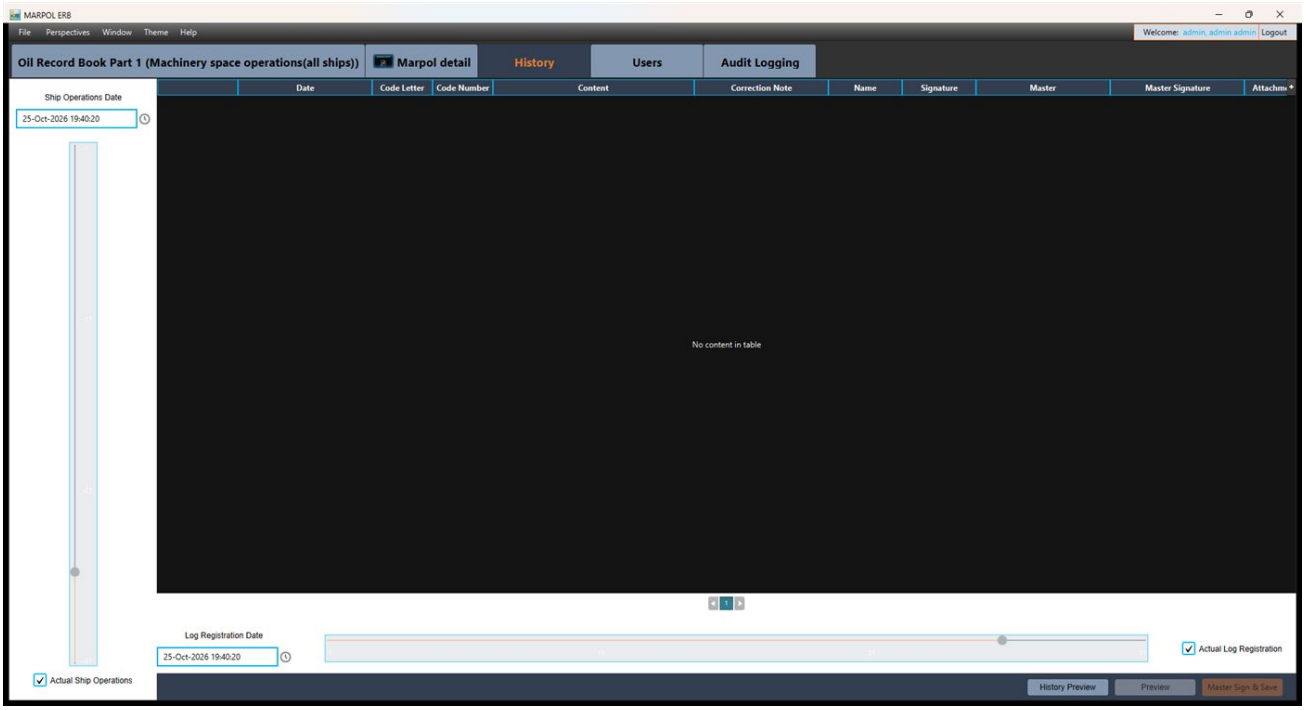

History

6. Users

Administrators manage the users in the **Users** tab. To add a user, choose a role and fill in user name, password, first and last name, date of birth and e-mail, then press **Save**; **Reset** clears the form. Use the edit button of a row to change an existing user. Only users with the right permission can create administrators.



Users


7. Audit logging

The **Audit Logging** tab shows the audit log: who logged in and when, changes to the logbook settings, and the automatic database backups.

8. Data backup and restore

The database is backed up automatically every day at 23:00 UTC into the *backup* folder of the installation. You can also back up and restore by hand with **File › Data Backup/Restore**:

- **Data Backup**: choose the format (**Standard** zip archive or **Xml**), browse for the folder to write the backup to, and press **OK**.
- **Data Restore**: choose the format, browse for the backup file, and press **OK**. Restoring replaces the current data with the content of the backup.

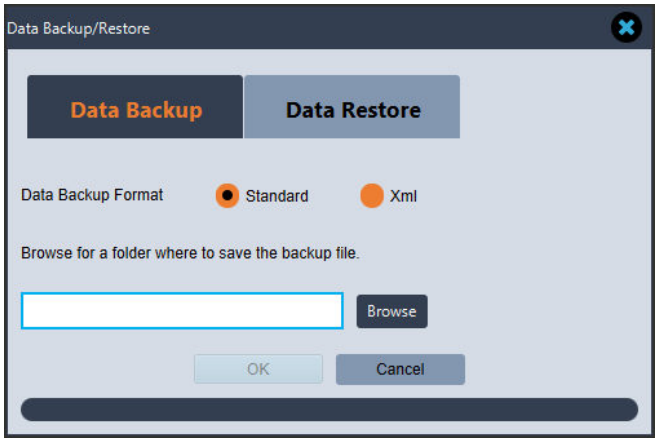


Data Backup/Restore

File › Restart restarts the application and **File › Exit** closes it.

9. Preferences

Open **Window › Preferences**.


- **Multi Installations**: IP address, port and database location of the main installation. Workstations connected to a main installation use its database.
- **License**: the user permit, the machine identifier file and the license file. Use **Create System Identifier File** to produce the identifier needed to request a license.

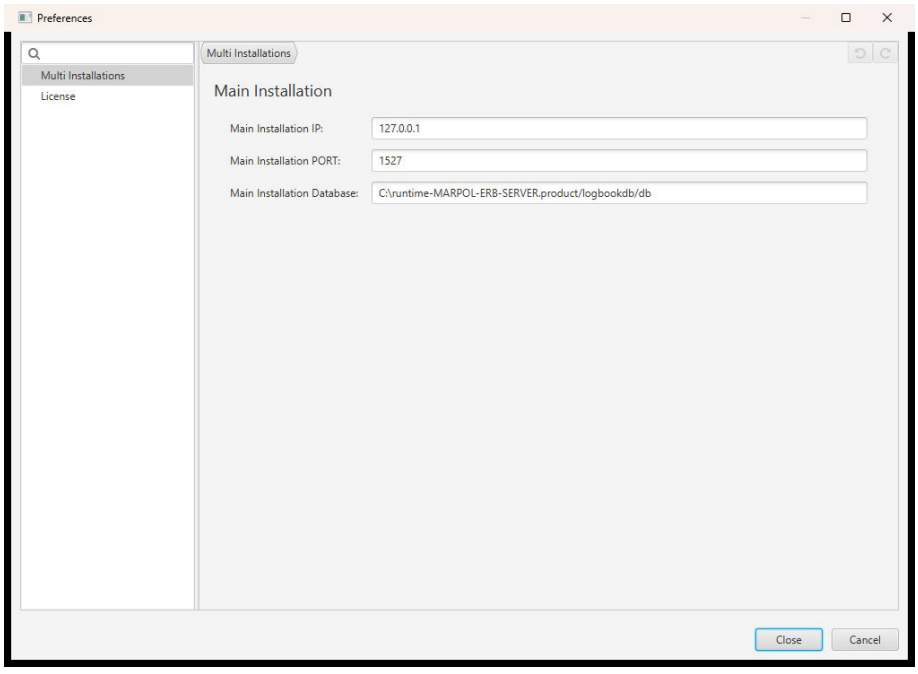

Preferences: main installation

10. Themes, help and version

- **Theme**: choose the **Light**, **Default** or **Modern** theme.
- **Help › Help** opens this manual.
- **Help › About** shows the version and release date.
- **Help › Check for system updates** looks for updates on the update server.

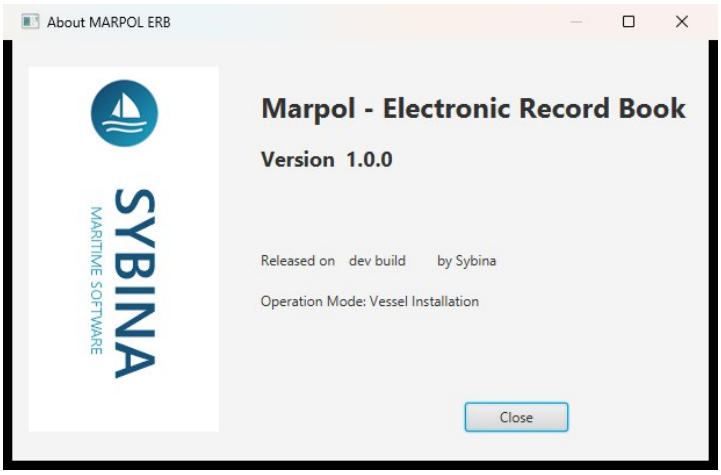

About


11. Messages and what to do

Date error: Please specify the compilation date.
Pick the date of the operation with the calendar button.

Signature Required: Please sign the modifications.
Press SIGNATURE, fill in rank, name and surname, sign and press ACCEPT.

Ship not configured.
Enter the ship in Marpol detail › Ship Particulars and save, then try again.

Alert code Nr …
Complete or correct the item named in the message.

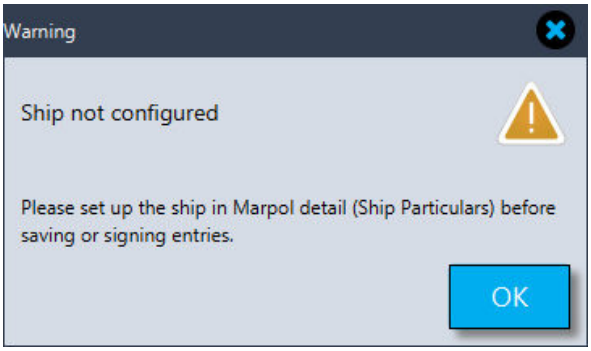

Message shown when no ship has been set up