Thank You

Now that you have purchased the AirU station, here is some information to get you started.

This kit contains an AirU station, housing, and reference documentation.

To get started, and for questions please visit:

Wiki: www.github.com/ktingey/AirU/wiki

For detailed instructions on getting started, an installation guide, as well as hardware and software details.

Slack: Join *airu-dev* slack team for technical support, suggestions, and a virtual high five.

Issue Tracker:

www.github.com/ktingey/AirU/issues


Issues are used to track todos, bugs, feature requests, and more.



Step1

Install

Mount AirU & apply power

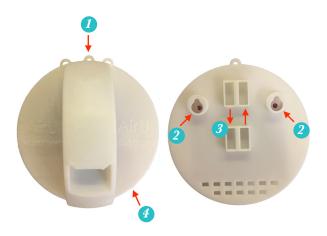

Mount with string (1), screws or nails (2), or zip-ties (3). Plug in power adapter (4).

Step2

Connect



- 1. Connect to AirU
- 2. Visit www.myairu.local and enter WiFi connectivity settings
- 3. Wait 3 seconds and unplug and replug to commit changes



Step3

Register

To register your AirU board you will need to obtain its assigned IP address:



- 1. Open a web browser and visit http://192.168.1.1
- 2. See attached devices and find the AirU's IP



- 1. Connect to AirU page http://192.168.x.x
- 2. Enter in your email and hit 'Register'