


1 Mount the Clamp to the Handle

The V1 clamp occupies the center section of the factory handle.

iX14 STAND V1

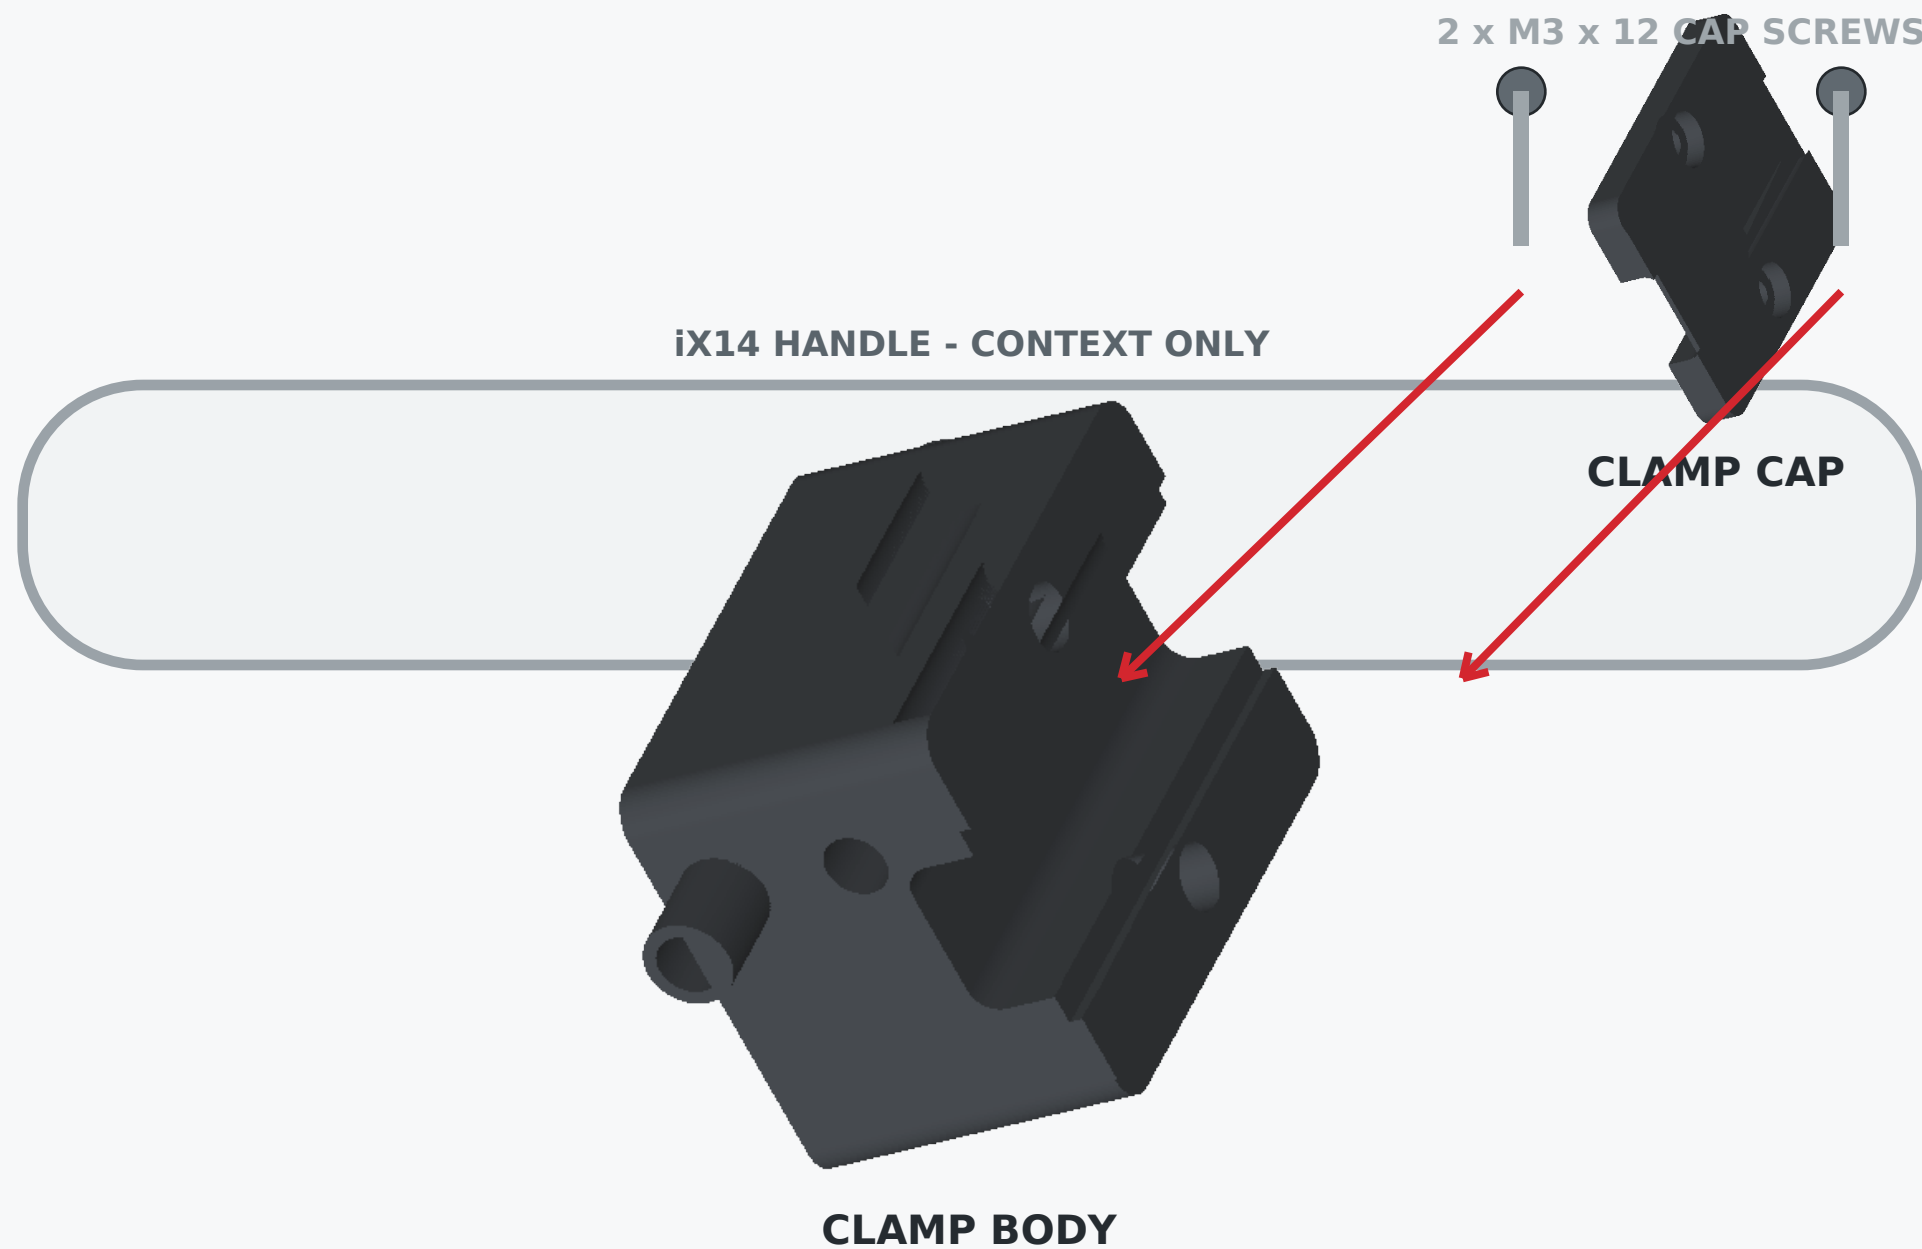

POSITION

Center the body around the handle.
Point the common pivot sleeve toward the rear.
Fit the cap into the matching opening.


TIGHTEN EVENLY

Alternate between the two M3 x 12 screws.
Stop when the clamp cannot rotate.
Washers are not required under the cap screws.

LEGACY NOTE V1 uses more handle space and has a taller stowed profile; V2 is recommended for new builds.

One M4 x 60 bolt retains the complete V1 pivot stack.

M4 x 60 BOLT + 2 x M4 WASHERS + M4 NYLOC

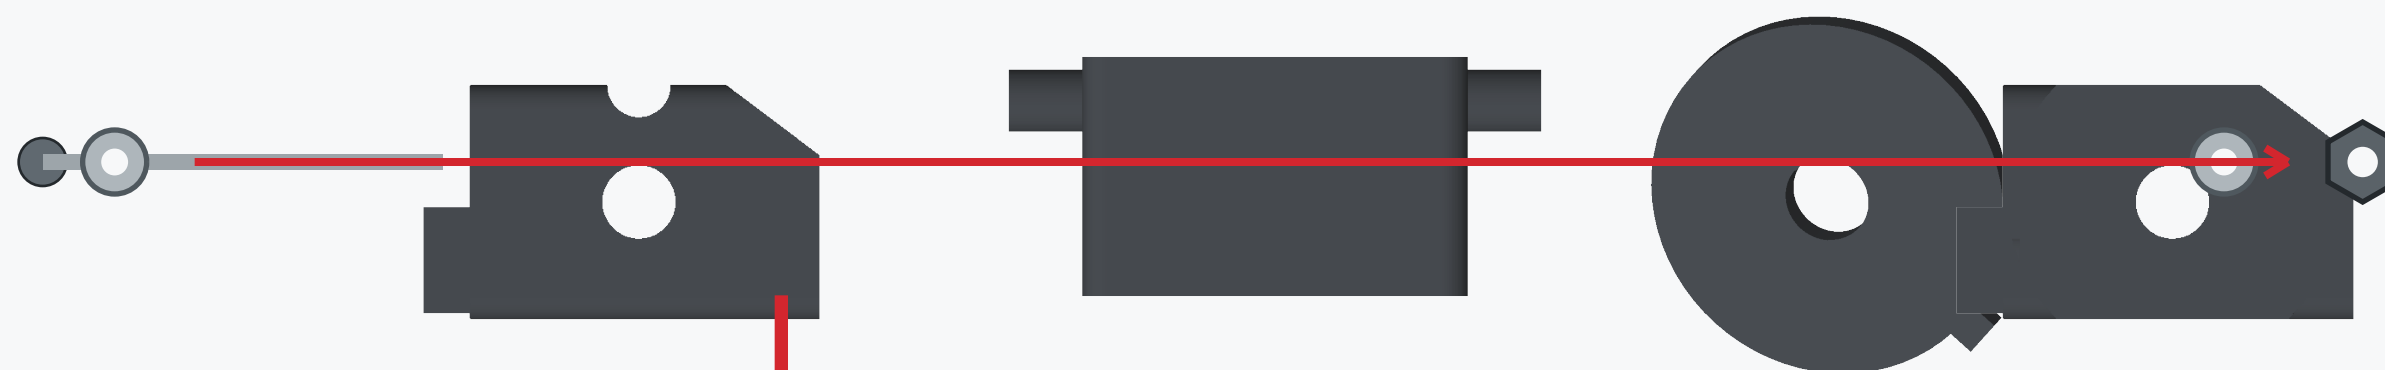

M4 x 8 BALL PLUNGER

LEFT EAR

CLAMP BODY

DETENT DISK

RIGHT EAR



1. ALIGN

Place the stand/ears around the clamp.
Keep the disk between clamp and right ear.

2. RETAIN

Install the verified M4 x 60 hardware.
Remove axial play without pinching rotation.

3. ADJUST

Advance the plunger in small increments.
Require positive clicks without binding.

FINAL CHECK Cycle full travel; confirm free rotation, secure hardware and no contact with radio controls.