


Install inserts first; then retain each stub with its own M4 pivot hardware.


LEFT - PLAIN PIVOT

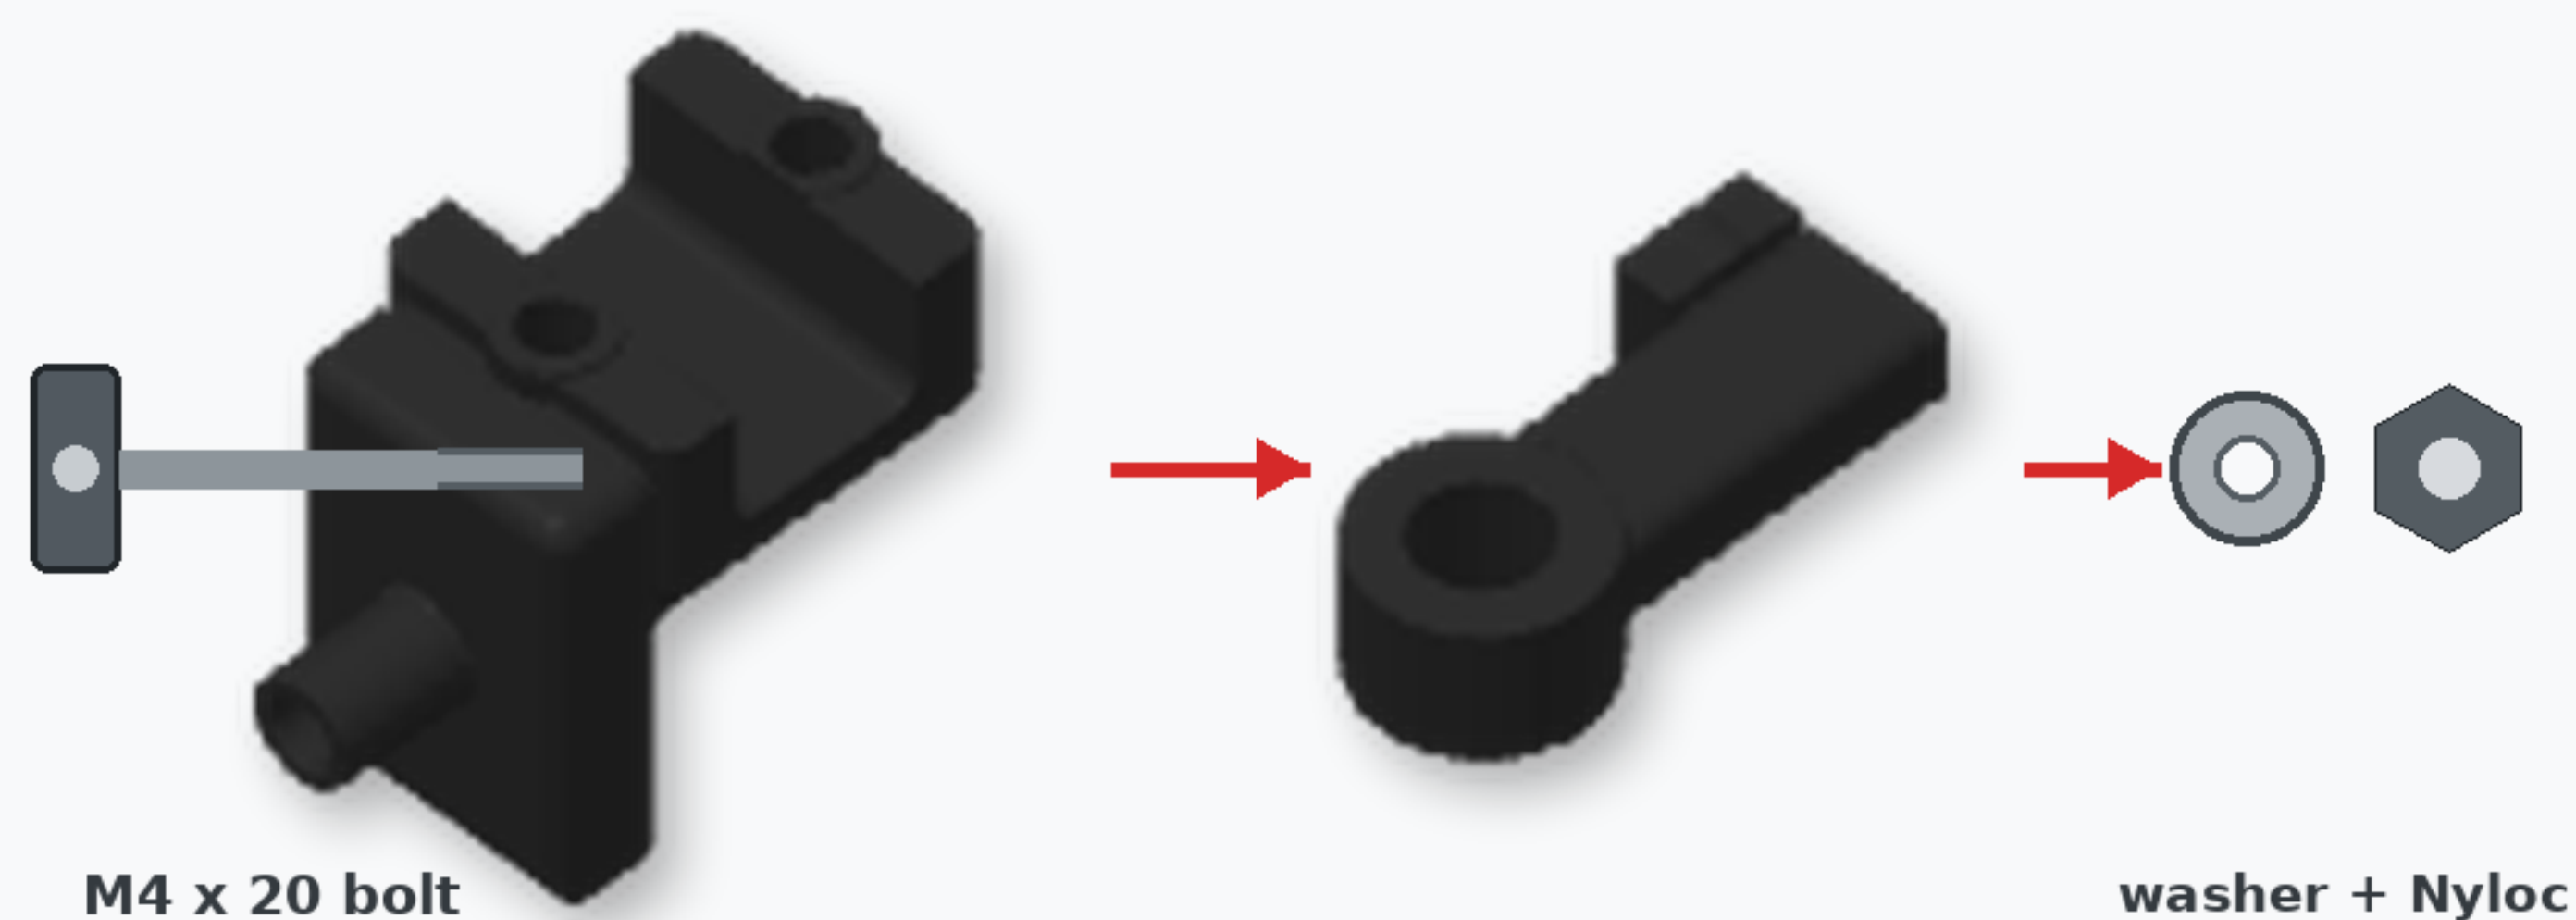

LEFT ASSEMBLY

1. Slide the plain stub over the case sleeve.
2. Pass the M4 x 20 bolt through case, sleeve and stub.
3. Add washer and Nyloc; tighten without pinching rotation.

RIGHT - DETENT PIVOT

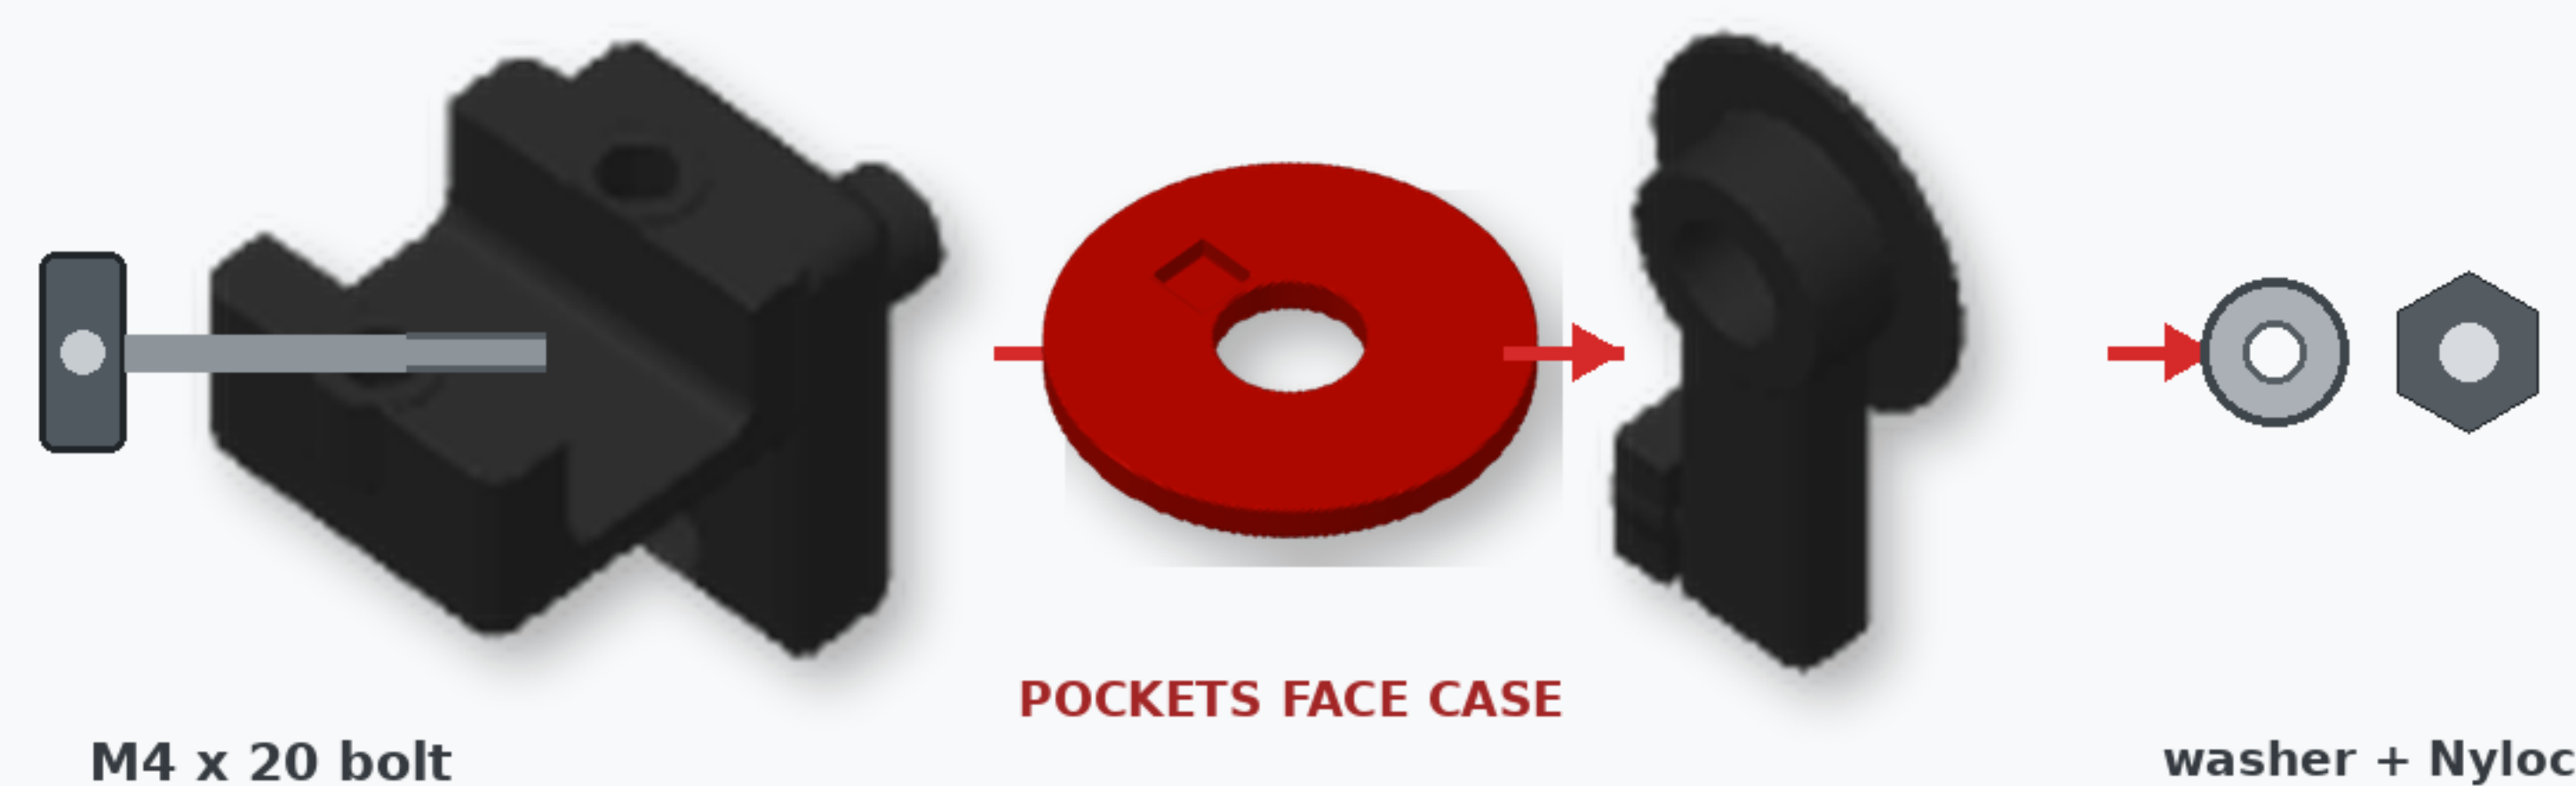

RIGHT ASSEMBLY


1. Key the replaceable ring onto the detent stub.
2. Seat ring and stub over the right-case sleeve.
3. Add M4 x 20 bolt, washer and Nyloc; verify free rotation.

CHECK The sleeve shoulder carries clamp load. Both stubs must rotate freely with no axial looseness.

2 Attach the Assemblies to the Handle

iX14 STAND V2

Viewed from the front of the radio: L on the left, R on the right.

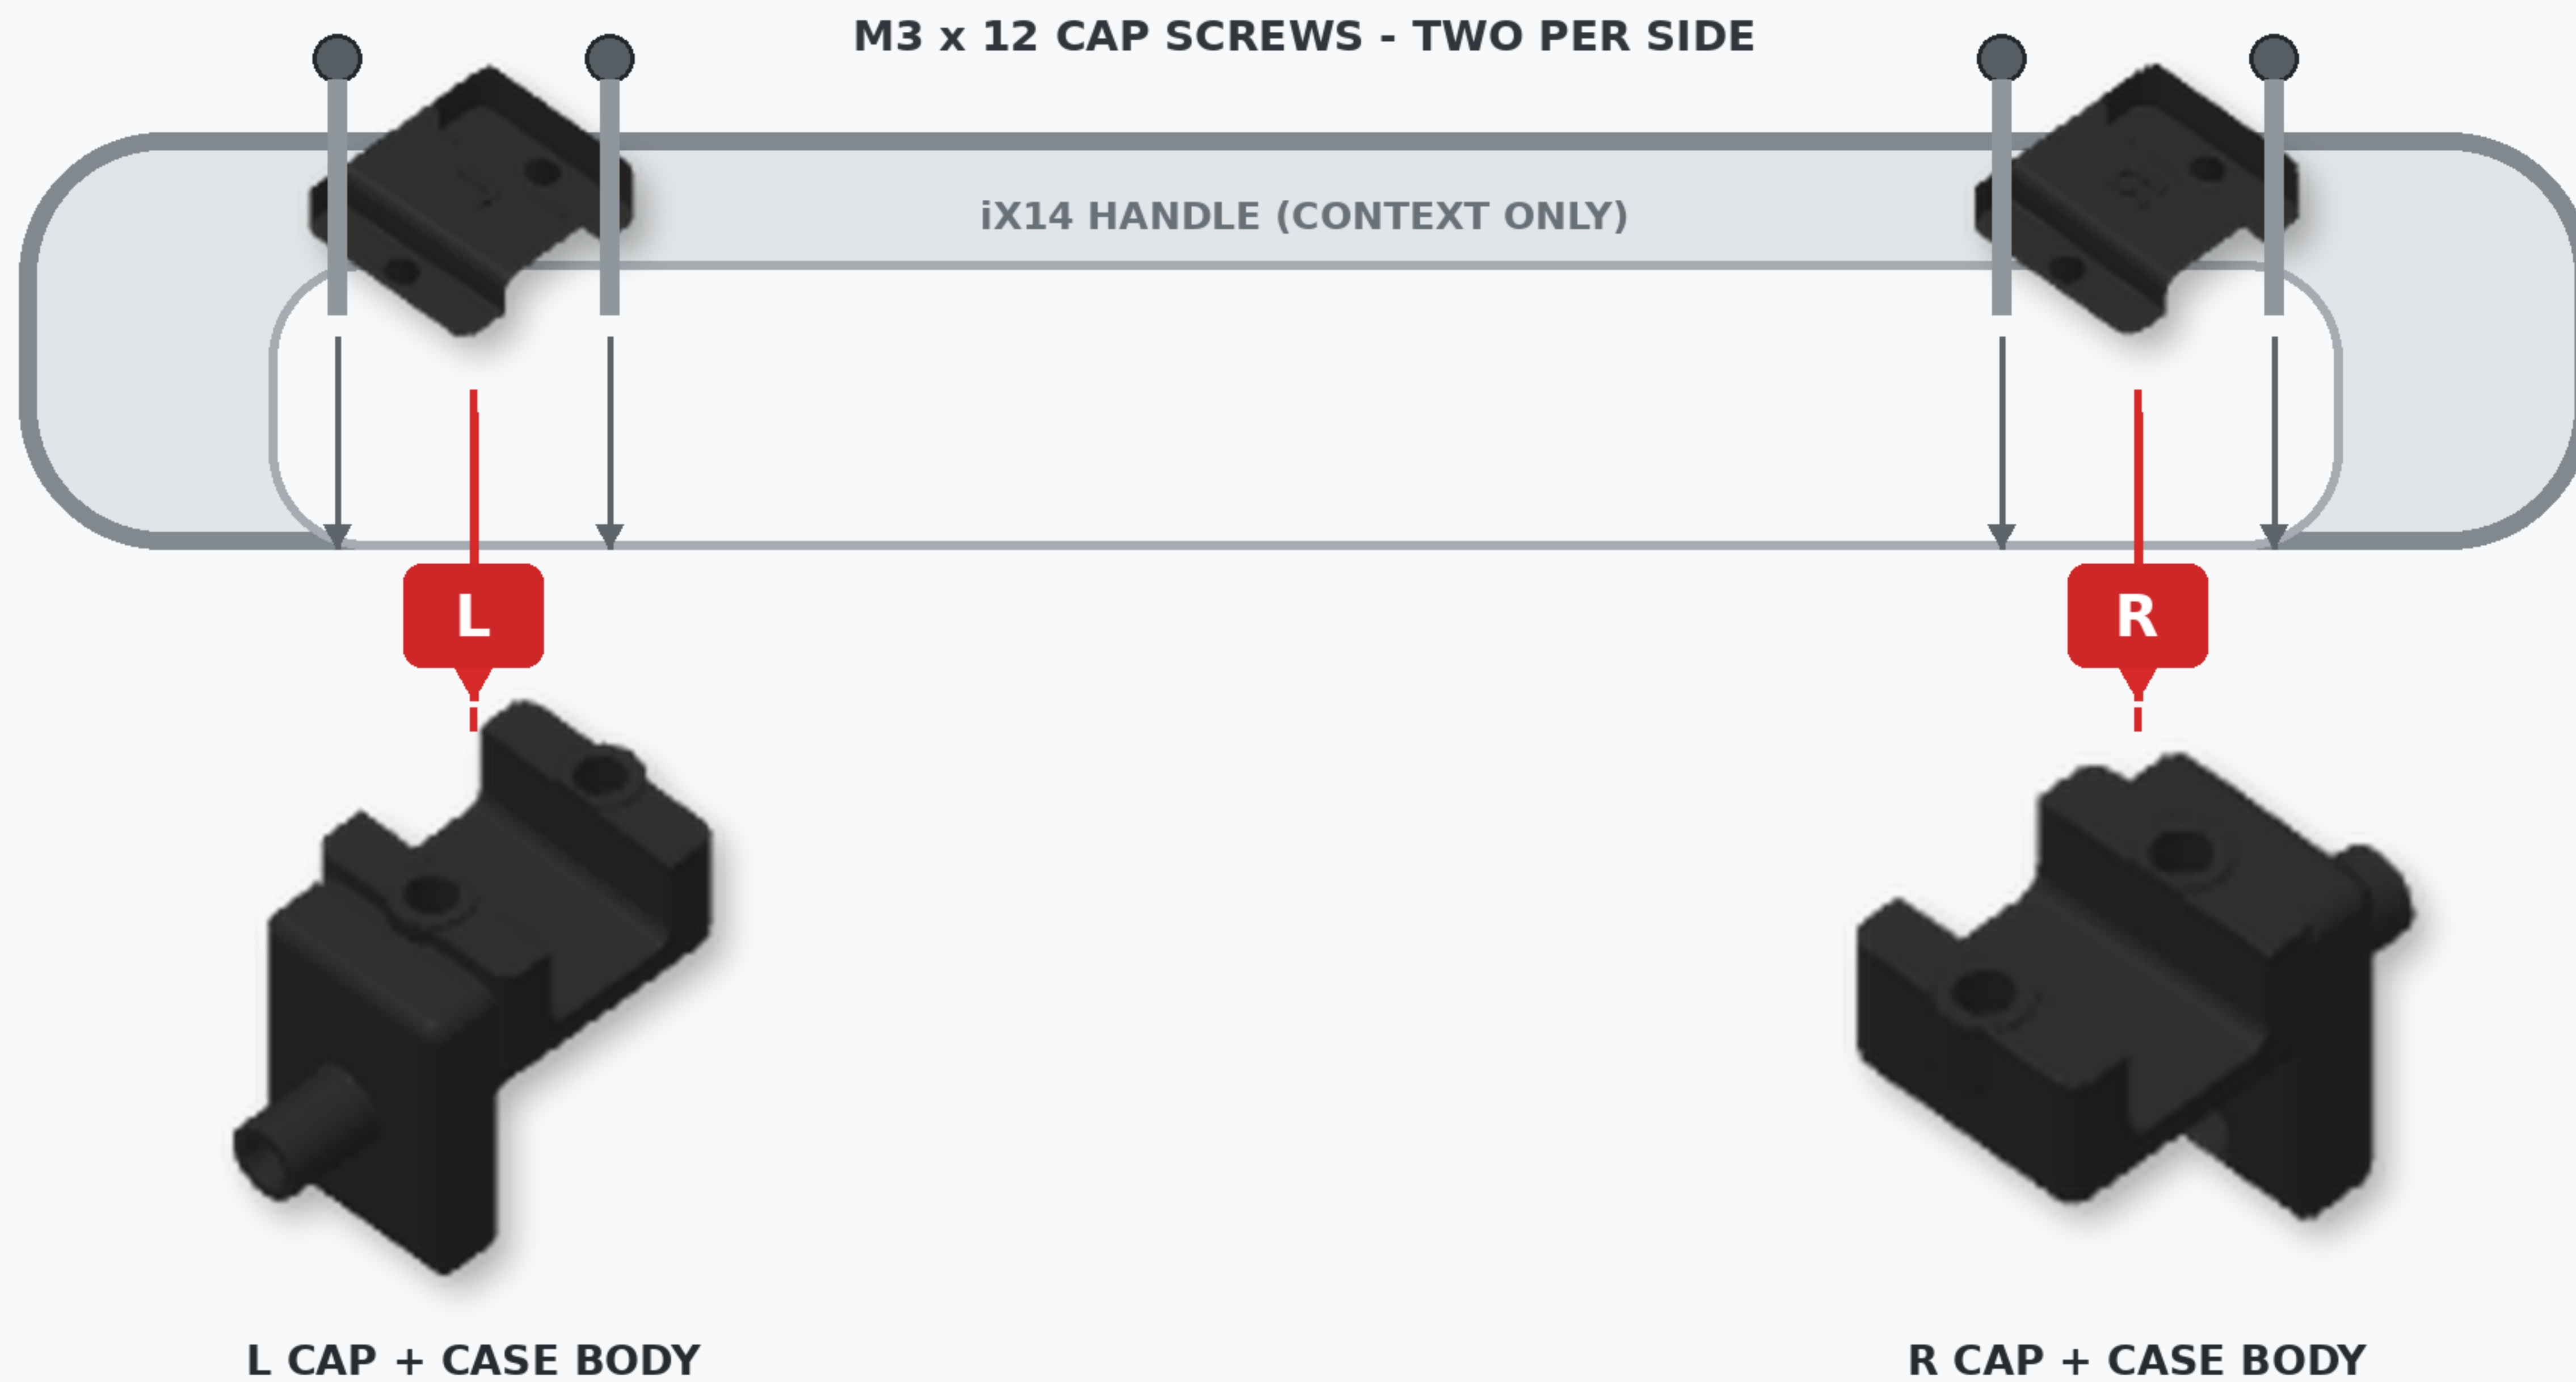

INSTALL LOOSELY

Push both case assemblies toward the radio body.
Snug the four cap screws only enough to hold position.
Leave lateral movement for final self-alignment.

CAP HARDWARE

Use 4 x M3 x 12 screws total.
Washers are not required under the cap screws.
Do not overtighten against the radio handle.

ALIGNMENT The stand becomes the alignment fixture in Step 3; final tightening happens after it is attached.

3 Attach, Square and Tighten the Stand

iX14 STAND V2

The square blocks carry load; the M3 screws retain the keyed stand connection.

LEFT PIVOT STUB

RIGHT DETENT STUB



2 x M3 x 8 SCREWS + 2 x M3 WASHERS



1. SEAT

Fully seat both square stub blocks in the matching stand sockets.

2. SQUARE

Use the stand to bring both pivot assemblies parallel and square.

3. TIGHTEN

Tighten cap screws evenly, then tighten both stand screws.

FINAL CHECK Cycle the stand through full travel. Confirm free pivots, secure blocks and no contact with radio controls.