


Install the inserts first; retain each stub with its M4 pivot hardware.

LEFT — PLAIN PIVOT

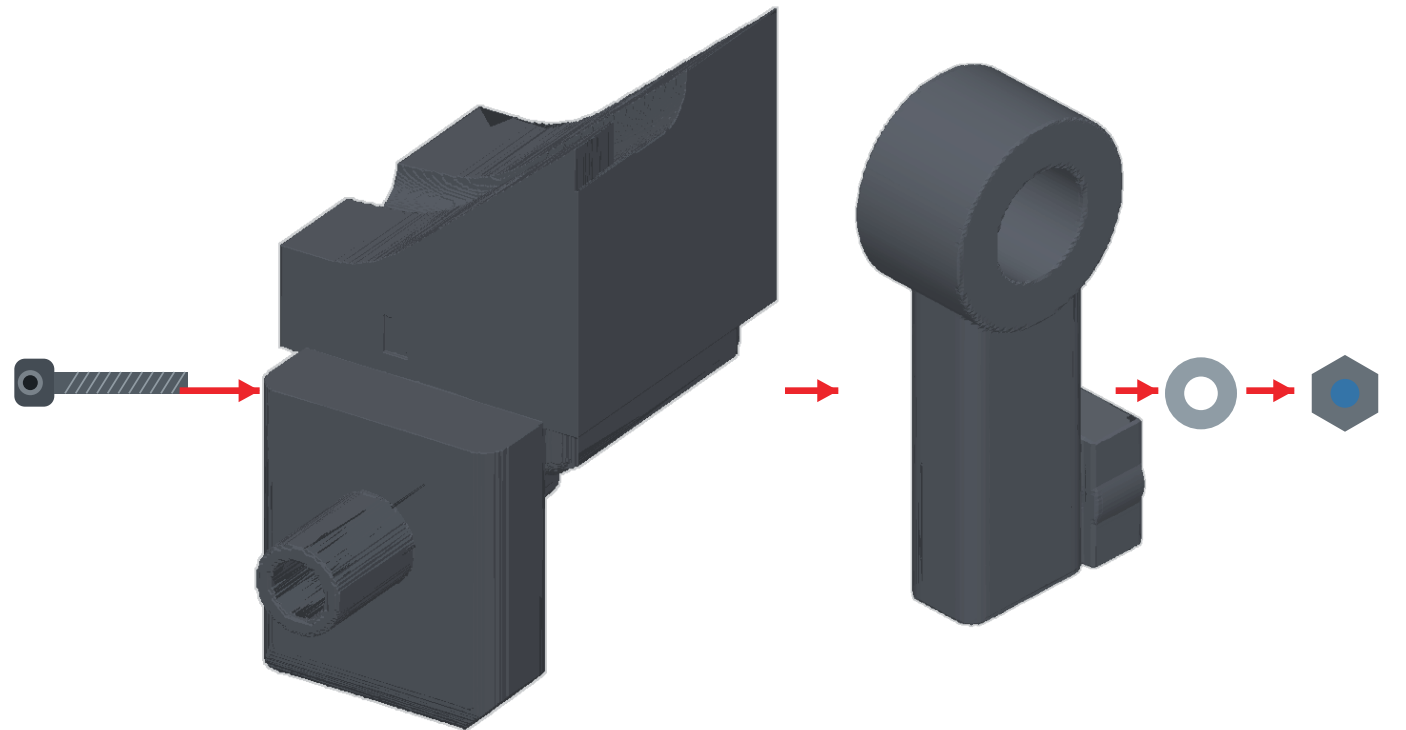

M4 × 20 bolt

L case body


plain stub

washer + Nyloc

LEFT ASSEMBLY

Seat the plain stub on the left case sleeve. Pass an M4 × 20 bolt through the pivot; fit a washer and Nyloc nut.

RIGHT — DETENT PIVOT

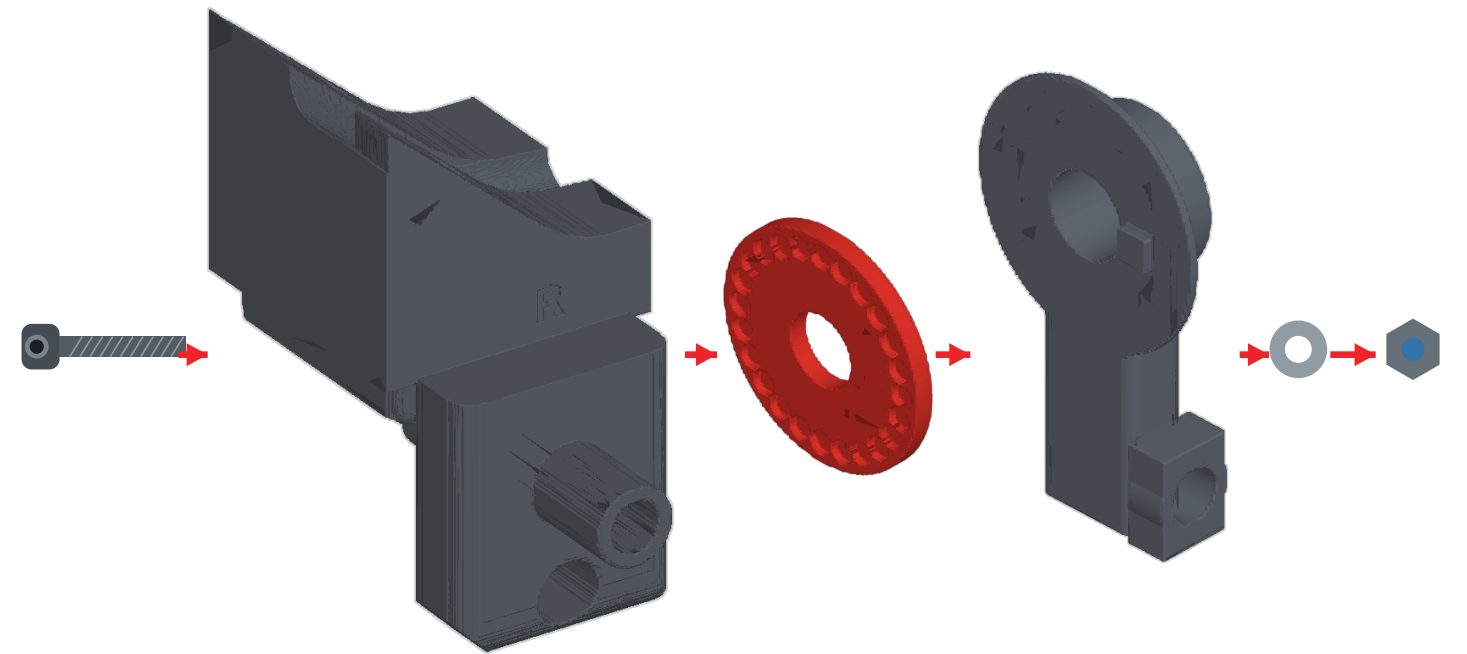

M4 × 20 bolt

R case

ring

detent stub

washer + Nyloc

POCKETS FACE CASE


RIGHT ASSEMBLY

Key the red ring to the right stub with its pockets toward the case plunger. Add the M4 × 20 bolt, washer and Nyloc nut.

CHECK Tighten the pivot hardware firmly. The sleeve shoulders retain the stubs while both pivots still rotate freely.

Viewed from the front of the radio: L on the left, R on the right.

4 × M3 × 10 CAP SCREWS — TWO PER SIDE

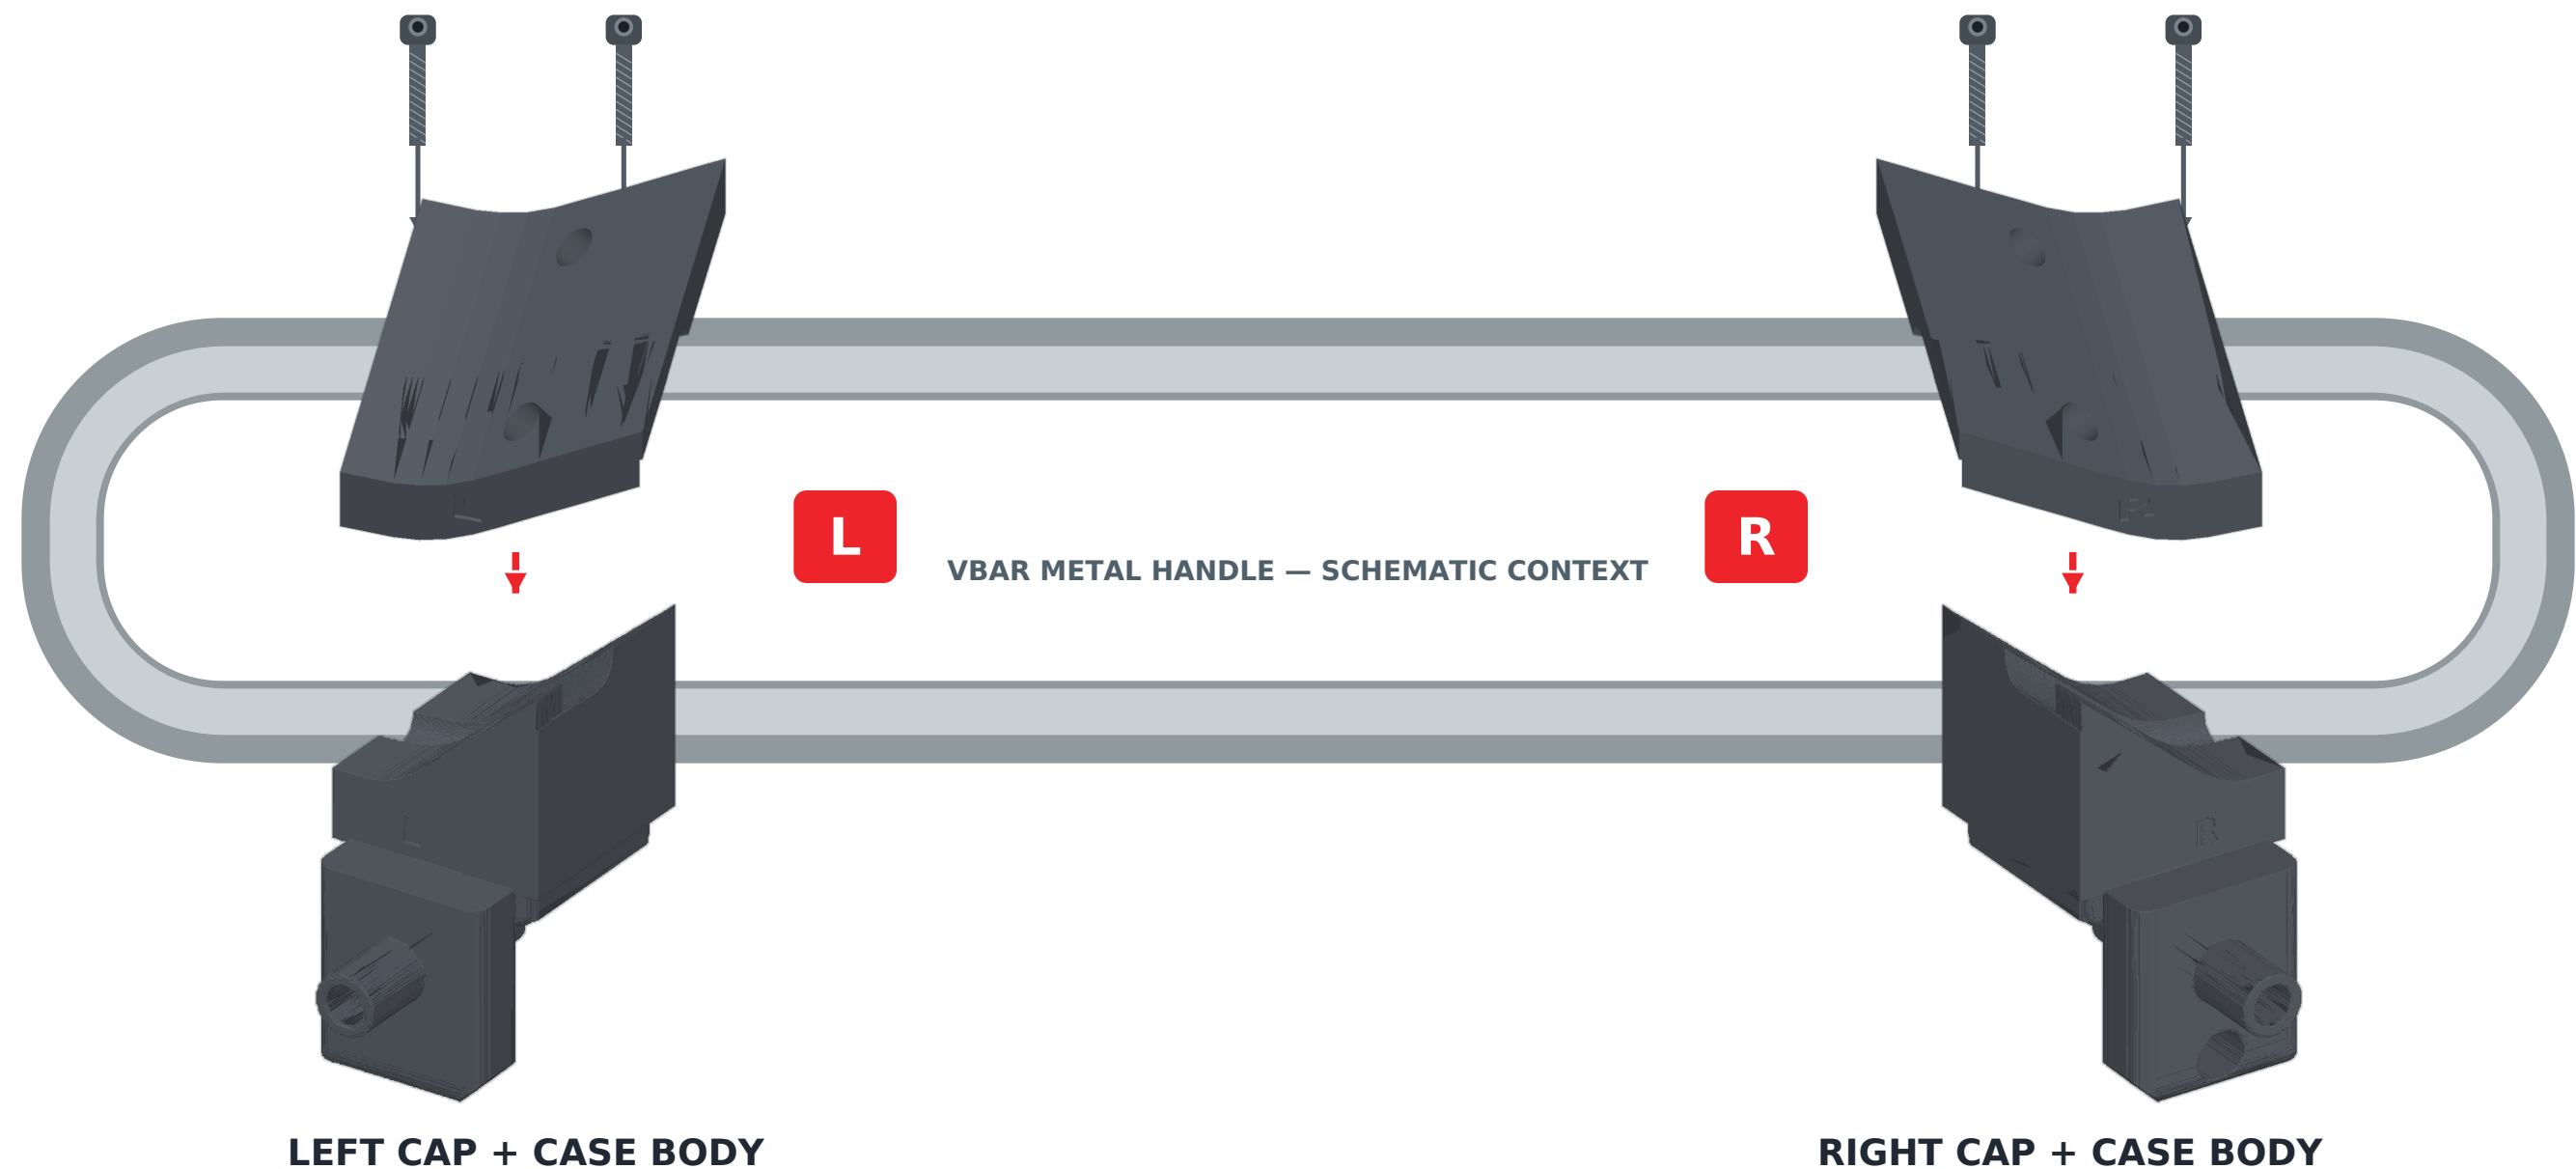

FIT THE CURVED HANDLE

Add a thin strip of double-sided tape on top of the handle at each clamp. Match L cap to L body and R cap to R body; the etched letters face inward.


INSTALL LOOSE

Use four M3 × 10 screws total, without washers. Snug evenly to hold position; leave movement for the stand to square the clamps. A visible cap/body gap is normal.

ALIGNMENT

The keyed stand/header fixes the two sides in Step 3. Finish clamp tightening only after both header mounts are seated.

Seat the keyed header, square the clamps, then set the right detent.

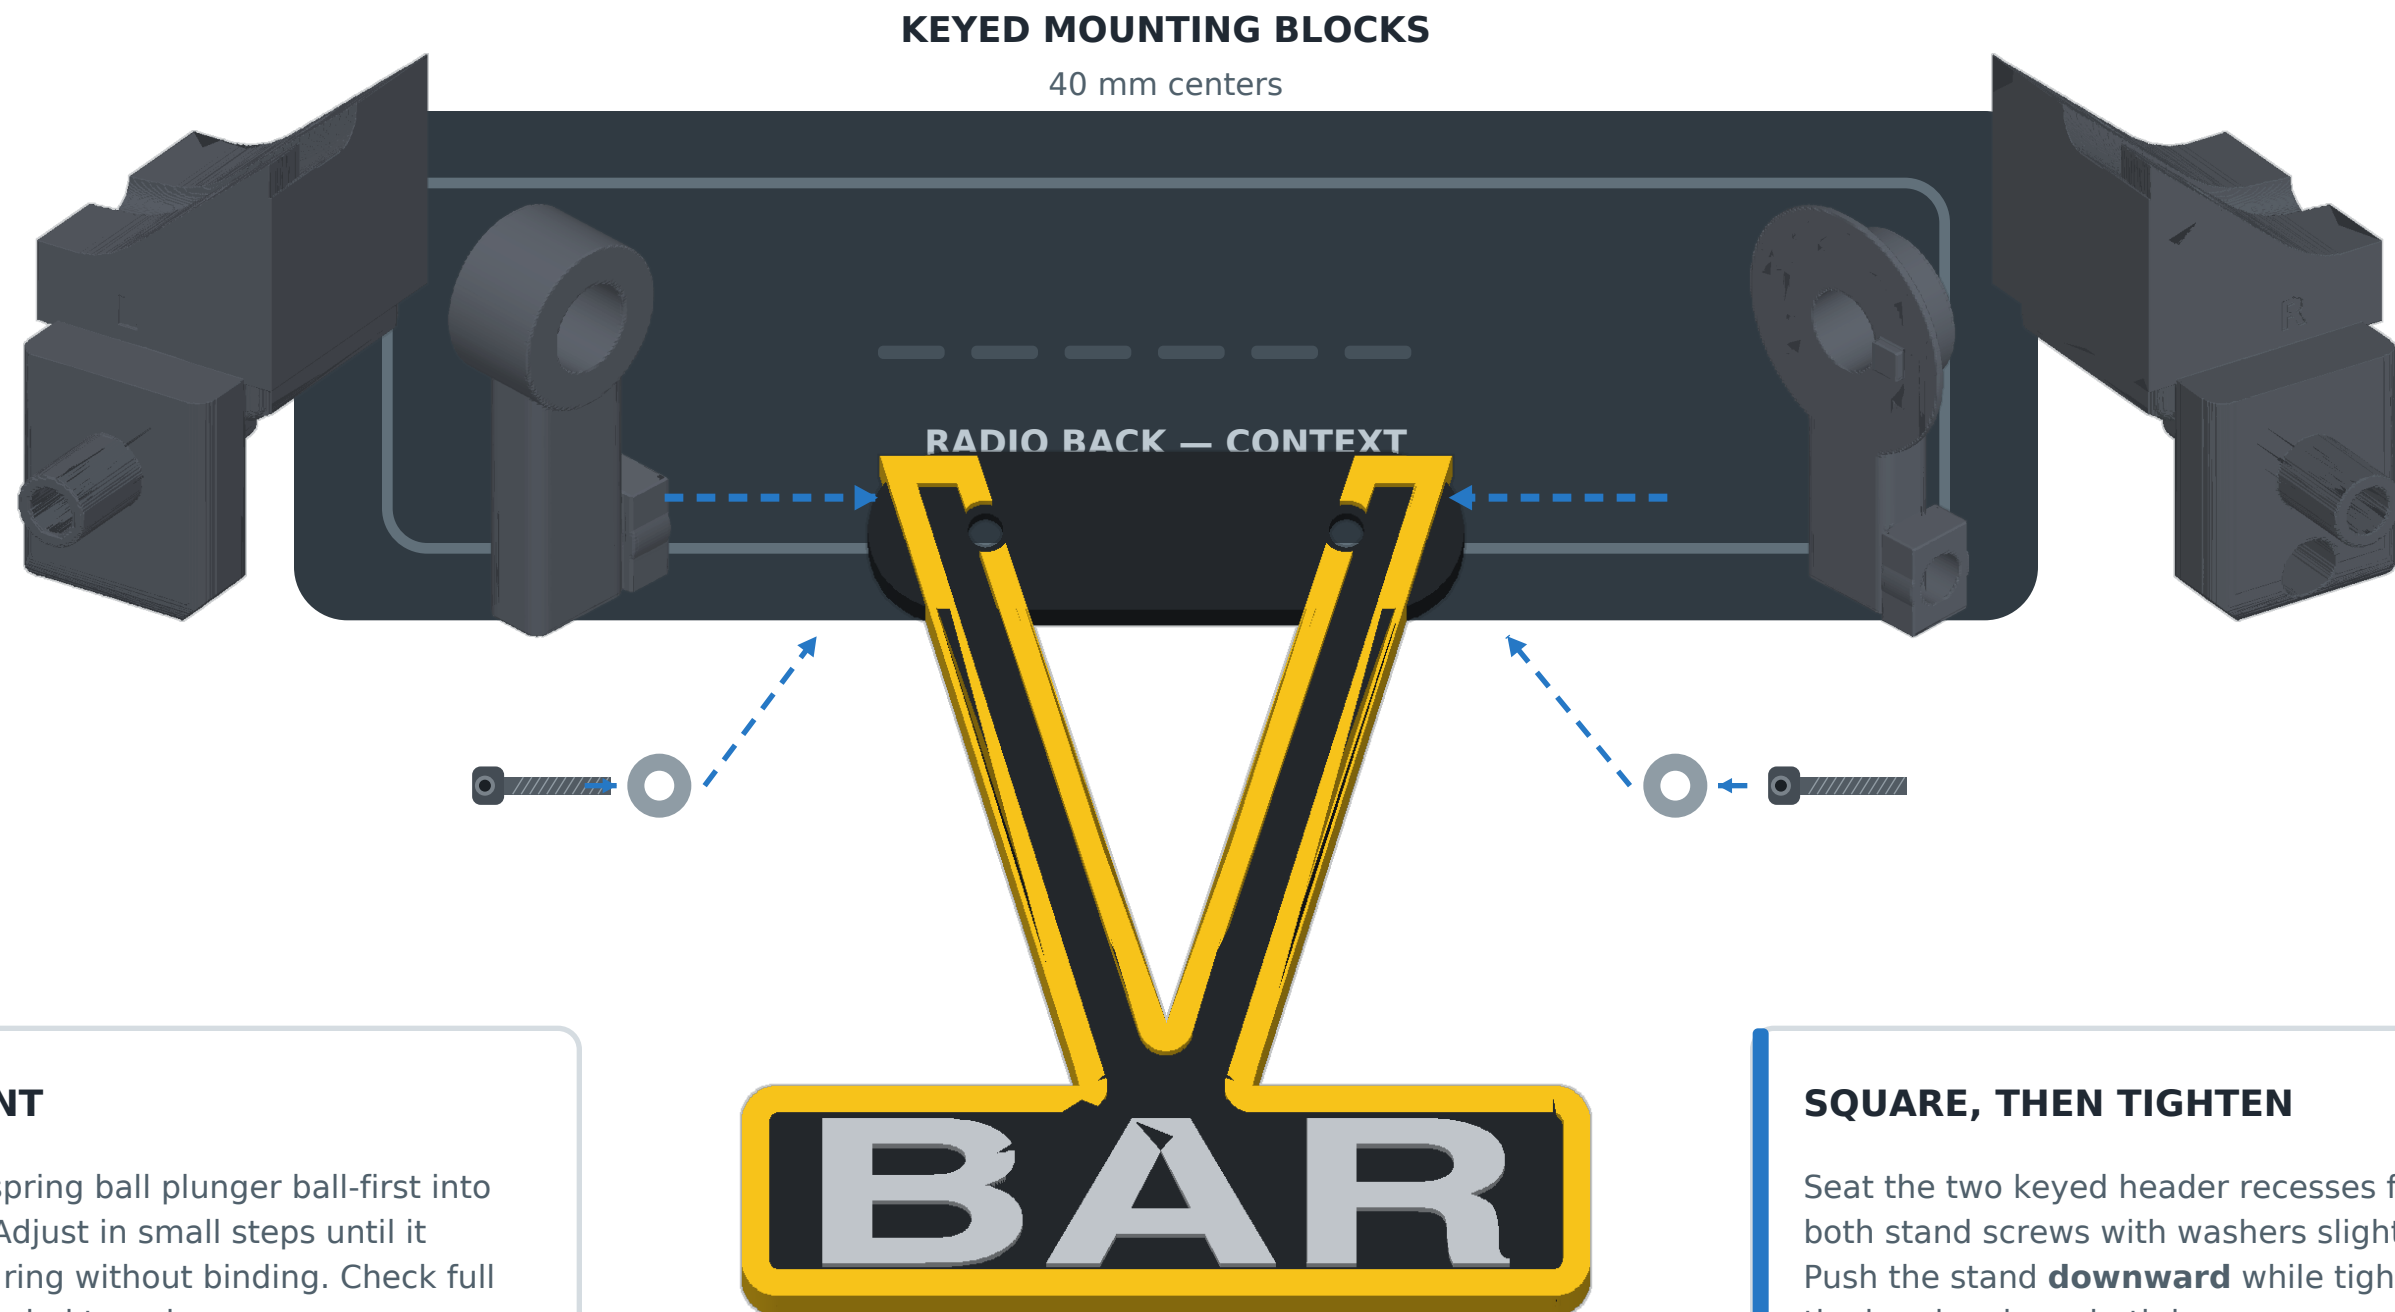

RIGHT DETENT

Thread the M4 spring ball plunger ball-first into the right body. Adjust in small steps until it indexes the red ring without binding. Check full folded and extended travel.

SQUARE, THEN TIGHTEN

Seat the two keyed header recesses fully. Start both stand screws with washers slightly loose. Push the stand **downward** while tightening so the header clears both lower case corners. Then tighten the four cap screws evenly.

V/BAR STAND + INTEGRAL HEADER

2 × M3 × 8 BUTTON-HEAD + M3 WASHER

CLEARANCE

Cycle the stand through its full range. Keep the header clear of both lower case corners and the radio body.