



PlugSure CSMS v1.5.0 Operator Console User Manual

Step-by-step guide for the operator's staff: sites, chargers, remote control, load management, tariffs, sessions, cards, firmware, billing and troubleshooting

Product	PlugSure CSMS — Enterprise Operator Console
Release	v1.5.0 (v1.5.0 added Console branding ; v1.4.1 added Suspend / Resume ; v1.4.2 fixed Scan from live charger , the sidebar version and Start on suspended chargers; v1.4.3 fixed the user menu icons; v1.4.4 made Suspend apply to the driver app too, and fixed Resume and Scan)
Audience	Operations leads, site hosts, field technicians and finance staff
Screenshots	Taken from a running console with simulated chargers (OCPP 1.6-J): v1.4.1, with v1.4.2 for Scan from live charger and v1.4.3 for the user menu. Names, cards and figures are demonstration data.
Companion documents	Deployment Guide (installation), API documentation at /api-docs.html
Date	2 October 2026

Contents

1. Getting started
Sign in · first password · layout · roles
2. Dashboard
3. Sites
Create a site · computed capacity card
4. Charge points
List and filters · add and commission · the charger drawer · per-gun remote control · Suspend / Resume and Decommission / Reinstate
5. Load management and the PLN contract clamp
6. Tariffs
Create a plan · price ceiling check · assign to a site
7. Sessions & Revenue
Find a session · tax receipt · review flag
8. RFID & Access
Issue · block · push the local list
9. Firmware & Diagnostics
10. Refunds, Billing, Statements and Fleet billing
11. Roaming (OCPI)
12. Users & Roles
Invite · change, disable or reset · console branding (v1.5.0)
13. Audit log and alerts
14. Troubleshooting for operators
15. Appendix: status tags and known limitations

How to read this manual

- Menu items, buttons, tabs and field names are printed in **bold**, exactly as they appear on screen.
- Numbered steps are the order to click in. "Open **Charge points**" means: click **Charge points** in the left-hand sidebar.
- What you can see depends on your role (section 1.4). If a button described here is missing, your role does not include that action; the server would refuse it anyway.
- The console never asks you to run scripts or SQL. Every change you make is recorded in the **Audit log** under your name.

Demonstration data. The screenshots come from a test installation: the organisation *Nusantara Charge Nusantara*, the sites *Summarecon Mall Bekasi — P2 Basement* and *Ruko Grand Galaxy — Bekasi Selatan*, two simulated Autel chargers and one Star Charger wallbox. Your own installation shows your own names and numbers. Times are shown in WIB (Asia/Jakarta). Most screenshots were taken on v1.4.1, whose sidebar footer still read v1.3.0 ; from v1.4.2 it shows the installed release.

1. Getting started

1.1 Sign in

1. Open the console address your administrator gave you (for example `https://console.example.co.id/`) in Chrome, Edge, Firefox or Safari.
2. Type your **Email** and **Password**.
3. Click **Sign in**. The console opens on the **Dashboard**.

Figure 1. The sign-in page.

- **Forgotten your password?** There is no self-service reset. Ask a Super Administrator to reset it from **Users & Roles** (section 12); you receive a new one-time password.
- After repeated failed attempts an account is **locked** for a while; the administrator sees a **locked** tag on it.
- If you are idle for too long you see *"Your session has ended. Please sign in again."* Sign in again; nothing you saved is lost.

1.2 First sign-in: choose your own password

New accounts, and accounts whose password was reset, start with a **one-time password**. The console will not open until you replace it.

1. Sign in with your email and the one-time password. The **Choose a new password** dialog opens.
2. In **One-time password**, type the one-time password again.
3. Type a **New password** of at least 12 characters, mixing upper and lower case, digits or symbols, and repeat it in **Repeat new password**.
4. Click **Save and continue**. You see *Password changed* and the console opens. (**Sign out** leaves without changing anything.)

Choose a new password

Your administrator issued a one-time password. Set your own before continuing.

One-time password

New password

At least 12 characters, mixing upper and lower case, digits or symbols.

Repeat new password

[Sign out](#)
[Save and continue](#)

Ops Team

ops@plugsure.com

Super Administrator

🔑 Change password

⚙️ Theme: system

➡️ Sign out

Figure 3. The user menu (click your name, top right).

Figure 2. First sign-in: the one-time password must be replaced.

To change your password later: click your name at the top right, choose **Change password**, enter the **Current password** and the new one twice, then **Save password**. The same menu has **Theme** (cycles system → light → dark) and **Sign out**. A one-time password that is not used in time stops working; ask for a new reset.

1.3 The console layout

PlugSure
ENTERPRISE CSMS

OPERATE

- Dashboard
- Charge points
- Connections
- Onboarding
- Plug & Charge
- Availability

ASSETS & ENERGY

- Sites
- Load management

COMMERCIAL

- Tariffs & Billing
- Sessions & Revenue
- Promotions & plans
- RFID & Access
- Refunds
- Billing
- Statements
- Fleet billing
- Owners
- Roaming
- Driver app

MAINTENANCE

- Firmware & Diagnostics
- OCPP log
- Hardware quirks

Dashboard

Good evening, Ops

Nusantara Charge Nusantara — network status right now.

CHARGERS ONLINE

2 / 2

no station faults

CHARGING NOW

1

3 connectors installed

ENERGY TODAY

37.4 kWh

3 sessions · 1 in progress

REVENUE TODAY

Rp 53.633

gross, incl. PBJT & PPN

CRITICAL ALERTS

1

1 warnings (7 days)

Connector status

3 connectors

Charging 1 Available 2

Open fleet

Last 14 days

Revenue Energy Sessions

Rp 53.633

14-day total

Open alerts

OCPP log

RAISED	SEVERITY	MESSAGE	
2m ago	warning	Session dde90391-c7ee-4570-b03e-7f744aa39097 was not billed: IMPLAUSIBLE_ENERGY. session.needs_review	Acknowledge Resolve
7m ago	critical	AUTEL-DC60-SMB-002 connector 2: tera ulang lapsed (valid through 2026-09-19). Commercial sessions blocked. compliance.tera_lapsed	Acknowledge Resolve

Sites needing attention

All sites

SITE	WHY
	Every site is healthy.

Figure 4. The console shell. Numbers refer to the table below.

#	Area	What it does
1	Sidebar	All modules your role may open, grouped as Operate , Assets & Energy , Commercial , Maintenance and Governance . The red number on Dashboard is the count of critical alerts.
2	Menu button	Collapses the sidebar to icons (remembered in your browser). On a phone it opens the sidebar.
3	Page title	The module you are in.
4	Search	Finds a charger, site or RFID card by identity, name, SPKLU ID or UID. Press / anywhere to jump into it; use the arrow keys and Enter to open a result.
5	live	A green dot means the live event stream is connected: lists and charger tiles update by themselves. A grey dot means updates have paused; reload the page.
6	Your name and role	Opens the user menu (password, theme, sign out).
7	Page header	Title, explanation and the page's main buttons (here Add charge point and Sites).

Sidebar groups (Super Administrator view):

Group	Modules
Operate	Dashboard · Charge points · Connections · Onboarding · Plug & Charge · Availability
Assets & Energy	Sites · Load management
Commercial	Tariffs & Billing · Sessions & Revenue · Promotions & plans · RFID & Access · Refunds · Billing · Statements · Fleet billing · Owners · Roaming · Driver app
Maintenance	Firmware & Diagnostics · OCPP log · Hardware quirks
Governance	Integrations · Compliance · Audit log · Users & Roles · Alert routing · Webhooks · Developers

Most pages open a **drawer** from the right when you click a row: a panel with tabs for that charger, site, session or tariff. Close it with the **x**, by clicking outside it, or with **Esc**. Dialogs work the same way. A drawer has its own address (for example `#/chargers/AUTEL-DC60-SMB-002`), so you can bookmark it or send it to a colleague.

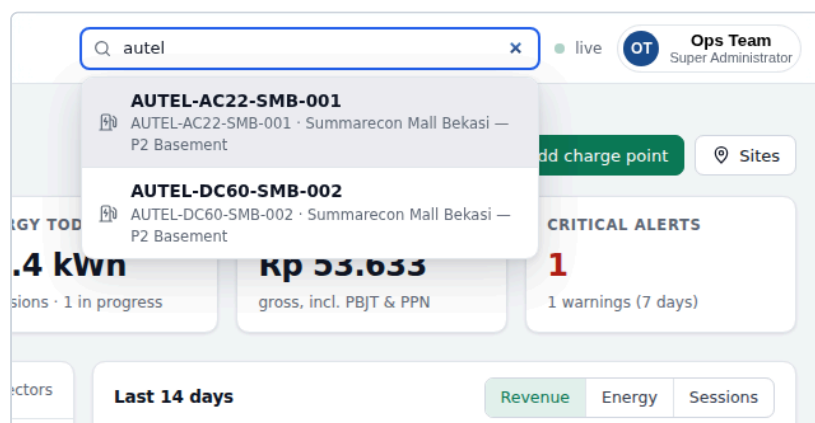


Figure 5. Global search: typing "autel" finds both Autel chargers.

1.4 Roles and what each can do

Every user holds exactly one console role. The server checks the permission on every request, so a hidden button is not just cosmetic: the action is refused. The descriptions below are the ones the console shows in **Users & Roles**.

Role	What it is for
Super Administrator	Everything in this organisation, including user management.
CPO Operations Manager	Runs the network: fleet, remote commands, hardware, tariffs and load management. Can view users.
Site Host / Landlord site-scoped	Sees only the sites they host: live status, revenue and power. No commands.
Field Technician	Monitors the fleet, runs diagnostic commands and test sessions, edits charger configuration.
Financial Auditor	Read-only fleet visibility with full session, invoice and audit export.
Site Owner (portal) owner portal	A business that owns sites you operate: sees only its own chargers, sessions, availability and monthly statement with its share. Read-only; follows the owner's sites automatically.
Fleet customer (portal) fleet portal	Staff of a company you bill for fleet cards: sees only that fleet account's invoices, credit notes, this month's charging and its cards, and can block a lost card.

Role	Fleet Monitoring	Remote Commands	Add/Edit Hardware	Tariffs & Billing	DLM Power Ceilings	User Management
Super Administrator	Full	Full	Full	Full	Full	Full
CPO Operations Manager	Full	Full	Full	Full	Full	Read Only
Site Host / Landlord	Site Only	None	None	View Revenue	Read Only	None
Field Technician	Full	Full (Test Only)	Edit Config	None	Read Only	None
Financial Auditor	Read Only	None	None	Full Export	Read Only	None

Full (Test Only): diagnostic commands work normally, but a remote start is accepted only with a *Maintenance Technician* or *VIP / Internal Testing* card, so a technician can prove a charger works without starting a billable customer session. **Edit Config:** OCPP configuration keys and diagnostics, but not register, suspend or decommission hardware. The full matrix with these explanations is on **Users & Roles → Role permissions** (Figure in section 12).

2. Dashboard

The Dashboard is the first page after sign-in: the state of the whole network right now. It refreshes by itself every 30 seconds and whenever a charger reports something.

On a brand-new installation without sites, the Dashboard shows **Set up your network in three steps**: create a site, onboard a charger, create and assign a tariff. Sections 3, 4.2 and 6 walk through each.

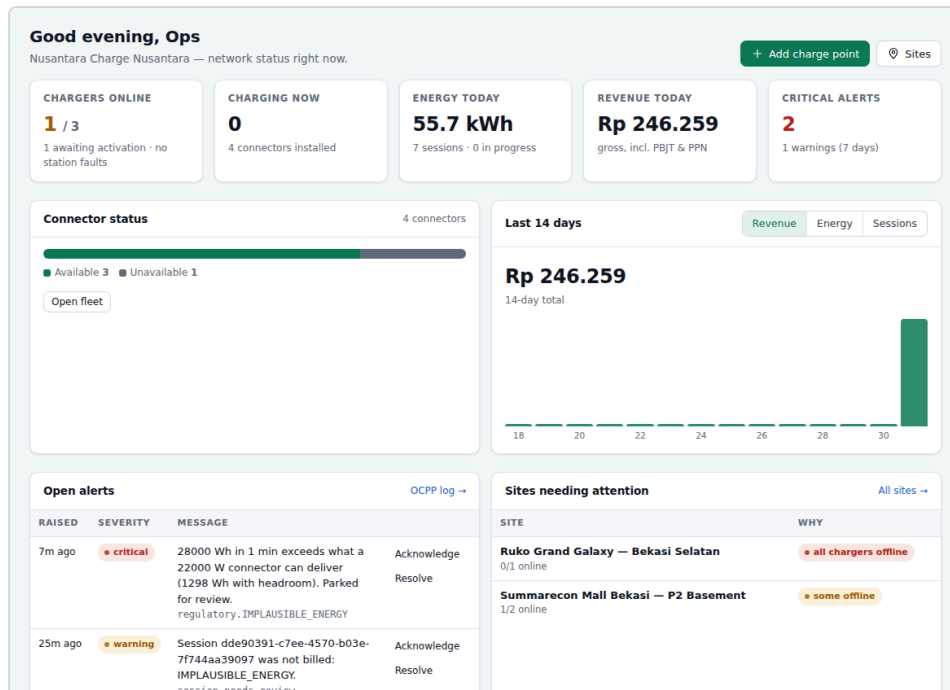


Figure 6. Dashboard with one charger offline, one awaiting activation and two open alerts.

Part	How to read it
Chargers online	Connected chargers out of all chargers, plus how many are awaiting activation and how many have a station fault. Amber when not all are online.
Charging now	Connectors in the <i>Charging</i> state, out of all installed connectors.
Energy today / Revenue today	Today's sessions (in progress included) and gross revenue <i>including</i> PBJT and PPN. Needs the session permission; other roles see faulted connectors and open alerts instead.
Critical alerts	Critical alerts of the last 7 days, with the warning count underneath.
Connector status	A bar of all connectors by state (Charging, Available, Preparing, Faulted, Unavailable...). Open fleet goes to Charge points; a ... faulted button opens the list filtered to faulted chargers.
Last 14 days	Daily bars; switch between Revenue , Energy and Sessions .
Open alerts	The latest unresolved alerts. Acknowledge means "someone is on it" and stops escalation to the next contact (section 13). Resolve closes the alert.
Sites needing attention	Sites with all or some chargers offline, faulted connectors, an active curtailment or a malformed SPKLU ID. Click a row to open the site.

3. Sites

A **site** is one electrical connection to PLN: one meter, one subscribed capacity (kVA), one SPKLU registration. Every charger belongs to a site, and the site's subscription is the ceiling load management never exceeds.

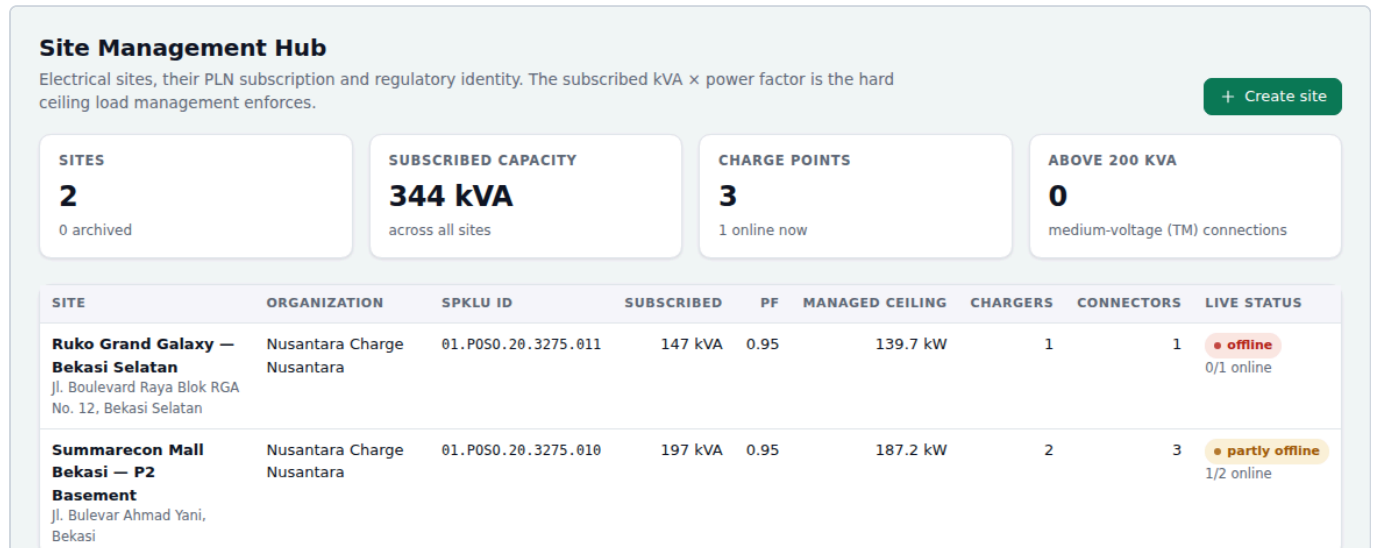


Figure 7. Sites (page title *Site Management Hub*): subscribed kVA, power factor, managed ceiling and live status per site.

3.1 Create a site

1. Open **Sites** and click **Create site**. The **Create electrical site** dialog opens.
2. **General information**: enter the **Site name**, **Street address**, **City** and **Postal code**, the 4-digit **Regency / city code** (BPS code, e.g. 3275 for Kota Bekasi — it drives PBJT and must match the SPKLU ID) and the **Time zone** (WIB, WITA or WIT). Enter **Latitude/Longitude** or click on the map (**Use my location** works on a phone at the site).
3. **PLN grid connection**: choose the **Grid tariff group** (for example *L/TR — Layanan Khusus Tegangan Rendah*), type the **Subscribed capacity** in kVA from the PLN contract, the **Power factor** (e.g. 0.95) and the **Incoming supply** (3-phase 400 V or 1-phase 230 V). The computed card appears as you type (3.2).
4. **Indonesian regulatory & SPKLU compliance**: the **Official SPKLU ID** (format XX.SCHEME.YY.ZZZZ.NNN), the **Business scheme**, the **PBJT-TL local tax** in basis points (500 bps = 5%; 1000 bps = 10% is the maximum) and the SLO certificate details.
5. Optional sections: **Monitoring** (**Offline alert after** N minutes for sites with weak signal), **Driver queue**, **Reservations** (reservation fee), **Signed meter data (OCMF)** and **Bidirectional charging (V2G / V2B)**.
6. Click **Create site**. The details are validated on save; an invalid site cannot be stored, and the field in error is highlighted.

Create electrical site

Grid connection and regulatory details are validated on save; an invalid site cannot be stored.

© OpenStreetMap

PLN grid connection

Grid tariff group

L/TR — Layanan Khusus Tegan

Subscribed capacity

147

kVA

Power factor

0.95

Incoming supply

3-phase (400 V)

ACTIVE POWER CEILING

139.7 kW

147 kVA × 0.95 PF — the DLM hard cap

REKENING MINIMUM

5,880 kWh

40 h × 147 kVA per month, payable whether used or not

VOLTAGE CLASS

TR (low)

Under the 200 kVA TR/TM cliff

Indonesian regulatory & SPKLU compliance (Permen ESDM 1/2023)

Official SPKLU ID

01.POS0.20.3275.011

XX.SCHEME.YY.ZZZZ.NNN

Business scheme

POS0

P = provider, R = retailer · O = owned, L = leased · SO = self-operated, PO = partner-operated

PBJT-TL local tax

500

bps

= 5.00%. Set by the kabupaten/kota; 1000 bps = 10% maximum.

SLO certificate number

SLO/2025/JKT/00412

SLO issuing agency (LIT)

SLO issue date

SLO expiry date

Figure 8. Create electrical site: 147 kVA at PF 0.95 gives a 139.7 kW active power ceiling.

3.2 The computed capacity card

The three tiles under **PLN grid connection** are calculated from what you typed; they are not entered separately.

Tile	Formula	Meaning
Active power ceiling	kVA × PF	The hard cap for all chargers at the site together ("the DLM hard cap"). 147 kVA × 0.95 = 139.7 kW.
Rekening minimum	40 h × kVA per month	The minimum energy PLN bills each month whether used or not (5,880 kWh for 147 kVA).
Voltage class	above or below 200 kVA	TR (low) under the 200 kVA TR/TM cliff; TM (medium) above it, which means a transformer, cubicle switchgear and medium-voltage metering.

PlugSure CSMS v1.5.0 — Operator Console User Manual

9 / 57

3.3 The site drawer

Click a site row to open its drawer. **Overview** repeats the capacity card and shows **Grid connection**, **Regulatory** (with SLO validity and days left) and the site's **Charge points**. The buttons at the top are **Edit site**, **Load management** (section 5) and **Add charge point here** (section 4.2, with the site pre-selected). The **Driver queue** tab lists drivers waiting in the app when the queue is switched on for the site.

Summarecon Mall Bekasi — P2 Basement

Jl. Bulevar Ahmad Yani, Bekasi · 01.P050.20.3275.010

Overview

Driver queue

Edit site

Load management

Add charge point here

ACTIVE POWER CEILING

187.1 kW

197 kVA × 0.95 PF — the DLM hard cap

REKENING MINIMUM

7,880 kWh

40 h × 197 kVA per month, payable whether used or not

VOLTAGE CLASS

TR (low)

Under the 200 kVA TR/TM cliff

Grid connection

Tariff group

L/TR

Subscribed

197.00 kVA · PF 0.950

Supply

3-phase 400 V

Managed ceiling

187.2 kW

Coordinates

-6.2246, 106.9998

Time zone

Asia/Jakarta

Regulatory

SPKLU ID

01.P050.20.3275.010

Scheme

POSO

Regency/city

3275

PBJ-TL

5.00%

SLO

SLO/2025/JKT/00412

SLO validity

14 Mar 2025 → 13 Mar 2030

1258d left

Charge points

CHARGE POINT	MODEL	STATE	CONNECTORS
AUTEL-AC22-SMB-001 AUTEL-AC22-SMB-001	Autel MaxiCharger AC Wallbox	online	1
AUTEL-DC60-SMB-002 AUTEL-DC60-SMB-002	Autel MaxiCharger DC Compact	online	2

Figure 9. Site drawer, Overview tab.

PlugSure CSMS v1.5.0 — Operator Console User Manual

10 / 57

4. Charge points

4.1 The charger list, filters and states

Open **Charge points**. Four tiles summarise the fleet: **Online**, **Charging**, **Faulted** (connectors reporting a fault) and **Blocked by metrology** (connectors whose tera has lapsed or is pending calibration).

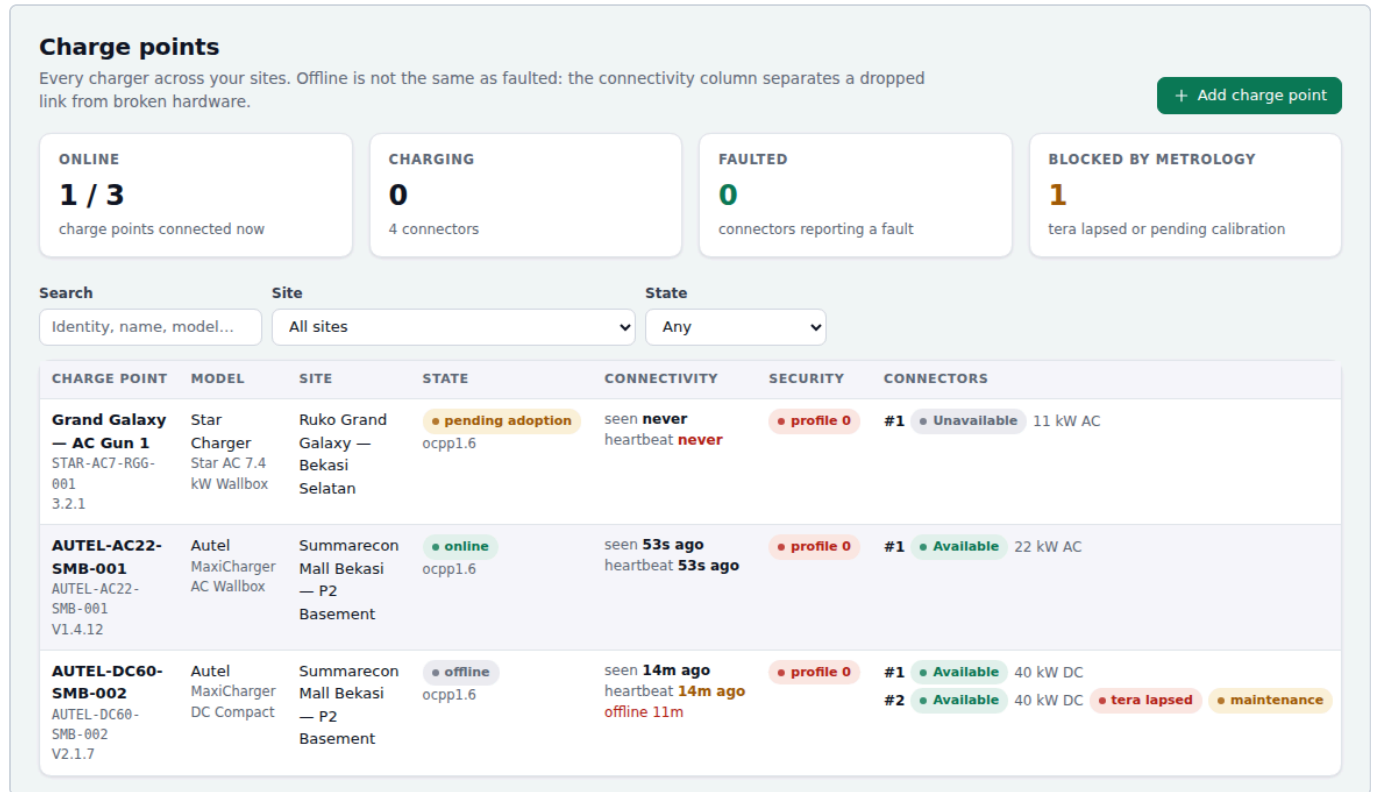


Figure 10. Charge points: state, connectivity, security profile and each gun's status.

Column	What it tells you
State	online / offline is whether the charger's WebSocket is connected; pending adoption , suspended (connected · suspended while still connected), faulted and decommissioned are its service state. The protocol (ocpp1.6, ocpp2.0.1...) is underneath.
Connectivity	When the charger was last <i>seen</i> and its last <i>heartbeat</i> (amber after 10 minutes, red after 15), and "offline ..." for how long it has been gone. Offline is not the same as faulted: a dropped mobile link is not broken hardware.
Security	profile 2 and key set is the production baseline; profile 0 means no authentication; rotate key appears when the key rotation reminder is due.
Connectors	Each gun: number, status, power and current type, energy of a running session, and tera lapsed / maintenance tags.
Buttons	On a pending charger: Activate . On an online charger: the ► Remote start and ⏻ Reboot shortcuts.

To filter the list:

1. Type in **Search** (identity, name, model, vendor or serial).
2. Choose a **Site**.
3. Choose a **State**: **Any**, **Online**, **Offline**, **Charging**, **Faulted**, **Pending adoption**, **Suspended** or **Decommissioned**. Decommissioned chargers are hidden unless you choose that state.
4. Click a row to open the charger drawer (4.3).

Charge points
Every charger across your sites. Offline is not the same as faulted: the connectivity column separates a dropped link from broken hardware.

ONLINE
2 / 3
charge points connected now

CHARGING
1
4 connectors

FAULTED
0
connectors reporting a fault

BLOCKED BY METROLOGY
1
tera lapsed or pending calibration

+ Add charge point

Search Identity, name, model... **Site** All sites **State** Suspended

CHARGE POINT	MODEL	SITE	STATE	CONNECTIVITY	SECURITY	CONNECTORS
AUTEL-AC22-SMB-001 AUTEL-AC22-SMB-001 V1.4.12	Autel MaxiCharger AC Wallbox	Summarecon Mall Bekasi — P2 Basement	connected · suspended ocpp1.6	seen 1m ago heartbeat 1m ago	profile 0	#1 Available 22 kW AC

Figure 11. State filter set to **Suspended** (new in v1.4.1).

4.2 Add and commission a charger

The **Add charge point** wizard registers the charger, issues its credentials, activates it and then watches it connect. Open it from **Charge points**, **Onboarding** or the Dashboard (**Add charge point**), or from a site drawer (**Add charge point here**). You need the charger's serial, its OCPP identity and the site. The **Onboarding** page lists chargers registered in the last 90 days and where each one is (Figure under step 5).

Step 1 — Identity & hardware

1. Enter the **Station name / alias** drivers and staff will see.
2. Enter the **OCPP identity**: the last part of the charger's WebSocket URL, exactly as configured on the unit (letters, digits, dash and underscore). The wizard refuses an identity that is already registered.
3. Choose the **Protocol stack** (**OCPP 1.6-J**, **OCPP 2.0.1** or **OCPP 2.1**). If the help text turns amber, the gateway is not configured for that version; ask your administrator.
4. Fill **Hardware manufacturer**, **Model name**, **Hardware serial number** (the camera button scans the barcode or QR code on the rating plate) and **Initial firmware version**. Click **Next**.

Add charge point

Register a new charger end to end — identity, site, credentials and connectors — then watch it connect. No scripts, no SQL.

1

2

3

4

5

Identity & hardware

Location & site

Security & credentials

EVSEs & connectors

Review & commissioning

Station identity & hardware profile

Station name / alias
Grand Galaxy — AC Gun 1

OCPP identity
STAR-AC7-RGG-001
The last segment of the charger's WebSocket URL. Letters, digits, dash and underscore.

Protocol stack

OCPP 1.6-J

OCPP 2.0.1

OCPP 2.1

The gateway accepts this protocol.

Hardware manufacturer
Star Charger

Model name
Star AC 7.4 kW Wallbox

Hardware serial number
SC74W2608123

Initial firmware version
3.2.1
Updated automatically from the charger's BootNotification.

Back

Cancel

Next

Figure 12. Step 1 of the wizard.

Step 2 — Location & site

1. Choose the **Electrical site**. Its subscription appears: **Subscribed kVA**, **Managed ceiling**, the chargers already there and the voltage class. (**Quick add site** creates a site without leaving the wizard.)
2. Click **Next**.

Add charge point

Register a new charger end to end — identity, site, credentials and connectors — then watch it connect. No scripts, no SQL.

1

2

3

4

5

Identity & hardware

Location & site

Security & credentials

EVSEs & connectors

Review & commissioning

Location & site assignment

Electrical site
Ruko Grand Galaxy — Bekasi Selatan

+ Quick add site

SUBSCRIBED
147 kVA
PF 0.95 · L/TR

MANAGED CEILING
139.7 kW
connected kVA × PF

CHARGERS
0
0 connectors

VOLTAGE CLASS
TR
under the 200 kVA cliff

Load management keeps every charger at this site inside the managed ceiling; adding nameplate power beyond it is safe, it is shared.

Back

Cancel

Next

Figure 13. Step 2: the site's PLN subscription decides how much power the charger may draw.

Step 3 — Security & credentials (Security Profile 2)

1. Click **Profile 2 — TLS + key** (selected by default). Production chargers use Profile 2 or Profile 3; **Profile 1 — Unsecured** is for isolated test benches only and the console warns you.
2. Under **Authorization key**, keep **Auto-generate cryptographic key** (recommended), or choose **Enter my own** and type 16–40 letters and digits.
3. Choose the **Key rotation reminder** (every 30, 90, 180 or 365 days, or no reminder).
4. Optional: tick **Then move it to Profile 3 automatically** if the charger supports the OCPP security extension; after its first connection PlugSure requests a certificate, installs it and switches the charger to mutual TLS.
5. Click **Next**.

Add charge point
Register a new charger end to end — identity, site, credentials and connectors — then watch it connect. No scripts, no SQL.

Identity & hardware Location & site **Security & credentials** EVSEs & connectors Review & commissioning

Security profile & credential provisioning
ISO 27001: production chargers use Profile 2 (TLS + per-unit key) or Profile 3 (mutual TLS). The gateway currently requires at least Profile 0.

Profile 1 — Unsecured
HTTP Basic over plain ws://
insecure

Profile 2 — TLS + key
Basic authentication over wss:// with a pre-shared key
recommended

Profile 3 — Mutual TLS
Client X.509 certificate, no password
recommended

Authorization key
Auto-generate cryptographic key Enter my own

Key rotation reminder
Every 90 days

The key is generated when you commission (step 5) and shown once with a QR code and a .json commissioning file for the field technician.

☐ **Then move it to Profile 3 automatically.** After its first connection PlugSure asks the charger for a certificate request, signs it with its certificate authority, installs it (CertificateSigned) and switches the charger to mutual TLS. The key never leaves the charger.
Needs a charger with the OCPP security extension (1.6 Security Whitepaper / 2.0.1). On 2.0.1 the certificate is installed; the profile is then raised with the charger's network profile.

Back Cancel Next

Figure 14. Step 3: Profile 2 with an auto-generated authorization key.

Step 4 — EVSEs & connectors

1. Set the **Number of guns (EVSEs)** with **–/+**. On OCPP 1.6 each gun is its own connectorId: gun 1 is connectorId 1, gun 2 is connectorId 2.
2. For each connector click the **Standard / plug type** (CCS2 Combo, Type 2 socket or tethered, CHAdeMO, GB/T) and fill **Current type**, **Nameplate power**, **Rated voltage** and **Max current**.
3. Under **Metrology compliance (Indonesian tera)** choose the **Accuracy class** and **Tera certification**, and enter the **Tera expiry date** (required for a *Verified* meter; warnings start 60 days before it). A meter *Pending calibration* cannot sell energy.
4. Click **Review**.

Add charge point

Register a new charger end to end — identity, site, credentials and connectors — then watch it connect. No scripts, no SQL.

✓

✓

✓

4

5

Identity & hardware
Location & site
Security & credentials
EVSEs & connectors
Review & commissioning

EVSE & connector architecture

Number of guns (EVSEs) On OCPP 1.6 every gun is its own connectorid, so a dual-gun charger has two EVSEs here — gun 1 is connectorid 1, gun 2 is connectorid 2.

-
1
+

EVSE 1 · OCPP connectorid 1

Connector 1

Standard / plug type

CCS2 Combo DC

Type 2 (Mennekes) socket AC

Type 2 (Mennekes) tethered AC

CHAdeMO DC

GB/T DC

GB/T AC

Current type AC (3-phase)

Nameplate power 11 kW

Rated voltage 400 V

Max current 16 A

Metrology compliance (Indonesian tera)

Accuracy class Class 1.0

Tera certification Verified

Tera expiry date 08/31/2027

Last tera date (optional) 09/01/2026

A warning is raised 30 days before expiry.

Meter serial (optional) MID-AC-55310977

Meter public key (optional) hex, base64 or PEM

For meters that sign their readings (OCMF). From the meter's label or type approval; signed readings are verified against it.

Type approval no. (optional)

Back
Cancel
Review

Figure 15. Step 4: one Type 2 socket, 11 kW three-phase, tera verified until 31 Aug 2027.

Step 5 — Review & commissioning

1. Check the summary, then click **Register & commission**. The wizard reports each step with **done**: registered (pending adoption), authorization key issued, security profile enforced, activated.
2. The **Commissioning export** shows the **Central system URL**, **Charge point ID**, the **Authorization key** and the security profile, with a QR code. **The key is shown once** — PlugSure keeps only its hash. Click **Copy key** or **Download .json** for the field technician.
3. On the charger (its web page or commissioning app) the technician enters the central system URL (`wss://.../ocpp/` plus the identity in production), the identity, and the key as the OCPP `AuthorizationKey`, then restarts it or re-saves its OCPP settings.
4. Leave the page open: the panel at the bottom changes from **Waiting for the charger to connect...** to **connected**, and a toast says *"... connected and adopted"*. Click **Open ...** to go to the charger, or **Onboard another at this site**.

Add charge point

Register a new charger end to end — identity, site, credentials and connectors — then watch it connect. No scripts, no SQL.

✓ Identity & hardware
✓ Location & site
✓ Security & credentials
✓ EVSEs & connectors
5 Review & commissioning

Review & commissioning test

Station	Grand Galaxy — AC Gun 1	EVSE 1	sType2 · AC3 · 11.0 kW	tera verified
OCPP identity	STAR-AC7-RGG-001			
Protocol	OCPP 1.6-J			
Hardware	Star Charger Star AC 7.4 kW Wallbox			
Serial	SC74W2608123			
Site	Ruko Grand Galaxy — Bekasi Selatan			
Security	Profile 2 · generated key · rotate every 90 days			
Topology	1 EVSE(s), 1 connector(s), 11.0 kW nameplate			

- done Registered STAR-AC7-RGG-001 (pending adoption)
- done Authorization key issued
- done Security profile 2 enforced

Commissioning export

Load this into the charger's commissioning app, or configure it by hand. **The key is shown once** — PlugSure keeps only its hash.

Central system URL	ws://127.0.0.1/ocpp/STAR-AC7-RGG-001
Charge point ID	STAR-AC7-RGG-001
Authorization key	9b2674b3381776e09a742888f2572e03a53d9c18
Security profile	2



- done Activated — the charger may transact once it connects

Waiting for the charger to connect...
no WebSocket yet · 0 boots

Waiting for the BootNotification. Power-cycle the charger or re-save its OCPP settings to make it connect now.

Figure 16. Commissioning result: key shown once with QR code, then the wizard waits for the charger.

Set the key on the charger before it connects. A Profile 2 charger must connect over `wss://` (TLS) with Basic authentication: user name = the identity, password = the key. If the charger connects over plain `ws://` it is refused with **TLS required**; with a wrong key, with **auth failed**. Both show on the **Onboarding** and **Connections** pages (section 14.1).

Onboarding

Connect new chargers to PlugSure: enter the hardware details, and the wizard registers the charger, issues its credentials — an authorization key, or a client certificate issued automatically by PlugSure's certificate authority — and watches it connect.

In progress
Certificates
Certificate authority

REGISTERED (90 DAYS)	CONNECTED	WAITING TO CONNECT	CERTIFICATES IN PROGRESS
3	2	0 1 refused at handshake	0

CHARGER	HARDWARE	SECURITY	STAGE	LAST SEEN	REGISTERED
Grand Galaxy — AC Gun 1 STAR-AC7-RGG-001 · Ruko Grand Galaxy — Bekasi Selatan	Star Charger Star AC 7.4 kW Wallbox SC74W2608123	Profile 2 authorization key	refused at handshake rejected_tls_required — Security profile 2 requires TLS	never	01 Oct 2026
AUTEL-DC60-SMB-002 AUTEL-DC60-SMB-002 · Summarecon Mall Bekasi — P2 Basement	Autel MaxiCharger DC Compact AUTEL-DC60-SMB-002	Profile 0 no credential	connected	online	01 Oct 2026

Figure 17. Onboarding → In progress: the new charger was **refused at handshake** because it connected without TLS.

4.3 The charger drawer

Click a charger in the list (or a search result) to open its drawer. The header shows the name, identity, site, and tags for state, protocol and security profile.

Tab	What you do there	Who sees it
Overview	Gun tiles (status, power, tera status and due date, session in progress, error codes, maintenance reason), Hardware profile (with Edit), Connectivity (WebSocket, last seen, heartbeat, boots, OCPP URL), OCPP frames , Suspend... , Decommission...	Everyone with charger access; Suspend/Decommission need hardware rights.
Remote control	Per-gun and whole-station commands (4.4).	Roles with remote commands.
Configuration	Fetch from charger reads the OCPP configuration keys live; filter by category or search; change a Read-Write value and click Save . A Reboot required banner appears if a change only takes effect after a restart.	Operations, Field Technician.
Device model	OCPP 2.0.1 / 2.1 chargers only: Request report , components and variables, monitors. A 1.6 charger shows a note pointing to Configuration .	As Configuration.
Security	Enforced profile, Rotate key (with "Old key is compromised — revoke it immediately"), Commissioning export (without key) , client certificate binding (Profile 3), and the Profile 0-3 buttons. Raising the profile is refused until the matching credential exists.	View for all; changes need hardware rights.
Connectors	Edit plug type, nameplate power and metrology (tera) data; Save connectors . Connectors are never deleted, because sessions refer to them.	Edit needs hardware rights; others see a read-only table.
Sessions	The last 50 sessions on this charger. Click one to open its tax receipt.	Roles with session access.

AUTEL-DC60-SMB-002
AUTEL-DC60-SMB-002 · Summarecon Mall Bekasi — P2 Basement

online
ocpp1.6
profile 0

Overview
Remote control
Configuration
Device model
Security
Connectors
Sessions

Gun 1
Available
cCCS2

40.0 kW DC

tera due soon due 15 Nov 2026

Gun 2
Available
cChaDeMo

40.0 kW DC

tera lapsed due 19 Sept 2026

Hardware profile
Edit

Vendor: Autel
Model: MaxiCharger DC Compact
Serial: AUTEL-DC60-SMB-002
Firmware: V2.1.7
Protocol: ocpp1.6
Site: Summarecon Mall Bekasi — P2 Basement

Connectivity

WebSocket: connected
Last seen: 01 Oct 2026, 20:42 (2m ago)
Last heartbeat: 01 Oct 2026, 20:42
Offline since: —
Boots: 2
Commissioned: —
OCPP URL: ws://127.0.0.1/ocpp/AUTEL-DC60-SMB-002

OCPP frames

Suspend... Decommission...

Figure 18. Overview tab of a dual-gun DC charger: gun 2's tera has lapsed.

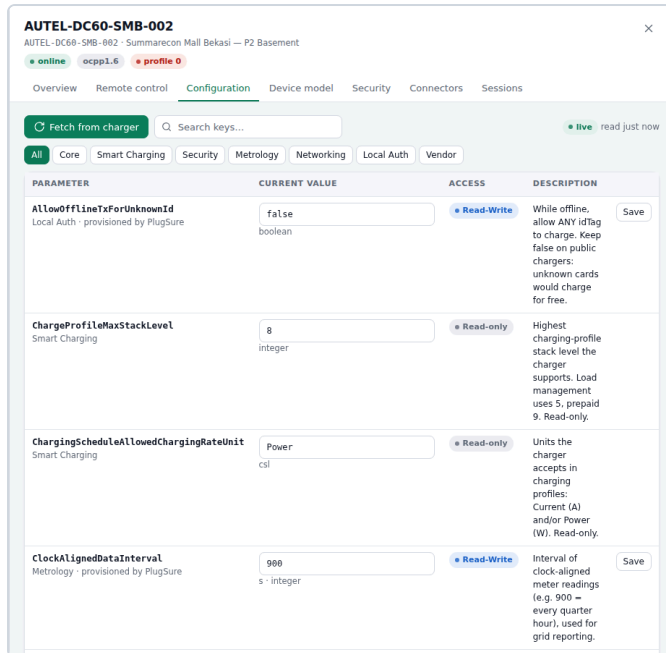


Figure 19. Configuration: keys read live from the charger.

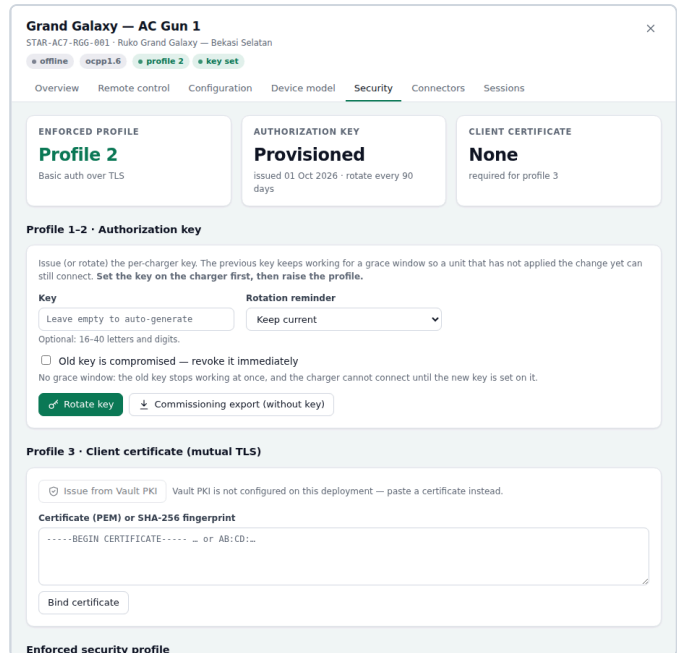


Figure 20. Security: Profile 2 with a provisioned key.

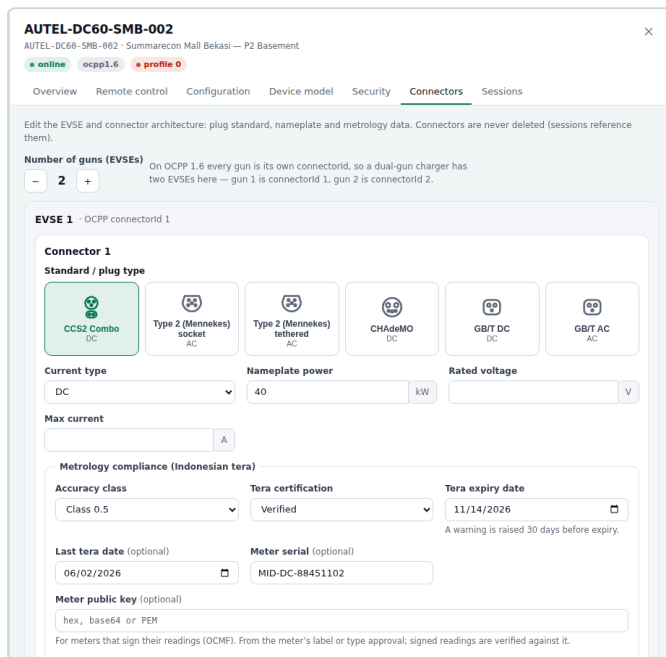


Figure 21. Connectors: plug, power and tera data per gun.

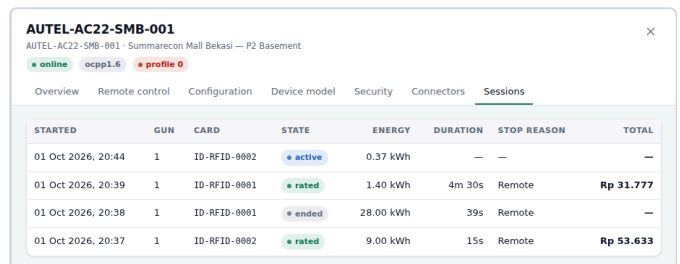


Figure 22. Sessions on this charger.

4.4 Remote control: each gun separately

Open the charger drawer and click the **Remote control** tab. It has two parts:

- **Per connector** — one card per gun with its status and session. **Every gun is controlled separately**: a button on the Gun 2 card acts on gun 2 only, and the session on gun 1 carries on.
- **Station** — commands for the whole charger: **Reboot hardware...**, **Trigger message...**, **Clear authorization cache**, **Set whole station Inoperative...** and **Set whole station Operative**.

If the charger is offline a banner says so: commands travel over the charger's WebSocket and fail until it reconnects. Every command is recorded in the audit log with your name.

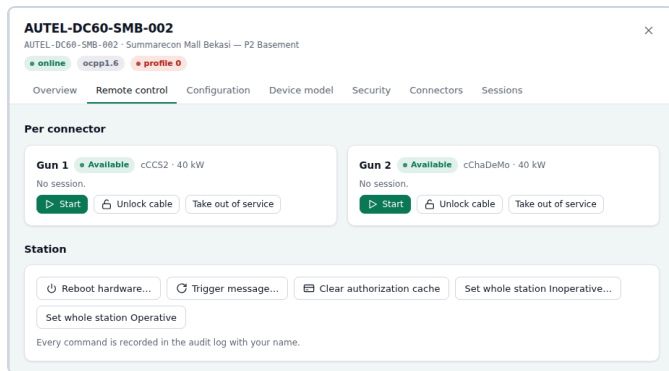


Figure 23. Both guns idle: each card has **Start**.

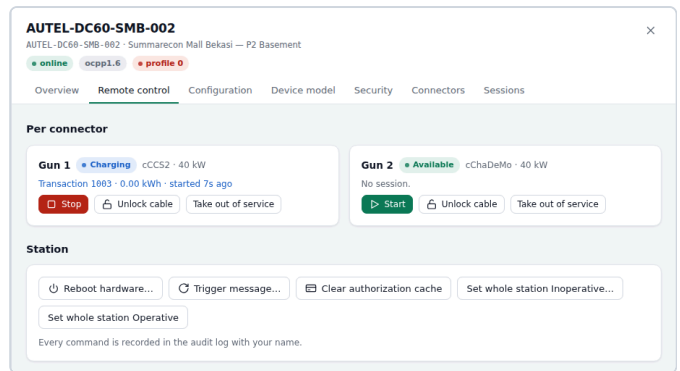


Figure 24. Gun 1 charging (**Stop**), gun 2 still free (**Start**).

Gun button	OCPP message	What happens
Start	RemoteStartTransaction	Shown when the gun has no session. Opens Remote start for that gun.
Stop	RemoteStopTransaction	Shown instead of Start while the gun has a session. Ends that gun's session; the driver pays for the energy delivered so far.
Unlock cable	UnlockConnector	Releases the mechanical lock of a stuck CCS2 / Type 2 plug on that gun. Any session on that gun ends.
Take out of service / Make operative	ChangeAvailability (Inoperative / Operative)	Takes only that gun out of service, with a mandatory maintenance reason; it refuses new sessions until made operative again. The other guns keep working.

Start a session on one gun

1. On the gun's card click **Start**. The **Remote start — ...** dialog opens with that gun pre-selected under **Connector**.
2. In **RFID tag / driver account**, type part of a card UID or holder name and pick an active card. The session is billed to that card. (A Field Technician may only use a Maintenance Technician or VIP / Internal Testing card.)
3. Choose a **Preset limit: Full charge, Energy (kWh), Duration (min)** or **Amount (IDR)**, and enter the limit. The platform stops the session itself when the limit is reached.
4. Click **Start session**. A toast says *"Charger accepted the remote start"* (or what the charger answered). The driver must plug in within the charger's connection timeout.

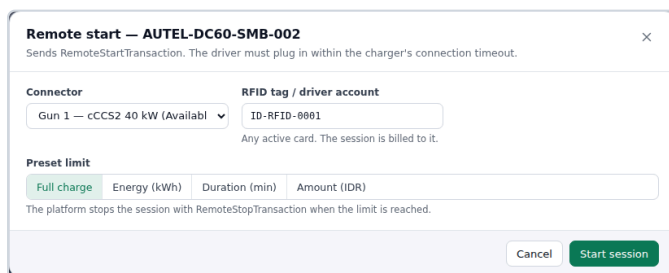


Figure 25. Remote start on gun 1 with card ID-RFID-0001.

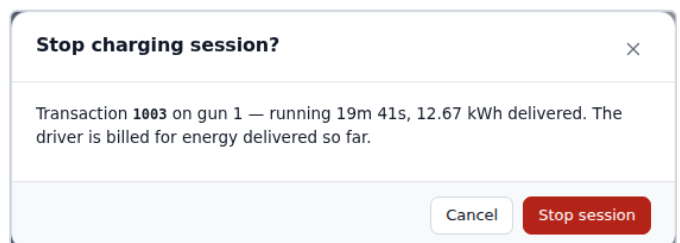


Figure 26. **Stop** confirms the transaction, duration and energy first.

Take one gun out of service

1. On the gun's card click **Take out of service**.
2. Enter the **Maintenance reason** (required; shown on the connector and in the audit log), e.g. "Tera ulang lapsed — awaiting Metrology re-verification".
3. Click **Set Inoperative**. The gun card shows *Out of service: ...* and its button becomes **Make operative**. To return it, click **Make operative** and then **Set Operative**.

Take gun 2 out of service

Sends ChangeAvailability. An Inoperative connector refuses new sessions until it is made Operative again.

Maintenance reason

Tera ulang lapsed — awaiting Metrology re-verification

Required. Shown on the connector and recorded in the audit log.

Cancel Set Inoperative

Figure 27. Taking gun 2 out of service.

AUTEL-DC60-SMB-002

AUTEL-DC60-SMB-002 - Summarecon Mall Bekasi — P2 Basement

Overview Remote control Configuration Device model Security Connectors Sessions

Per connector

Gun 1 • Charging • CCS2 • 40 kW
Transaction 1003 • 0.00 kWh • started 15s ago
Stop Unlock cable Take out of service

Gun 2 • Available • cChaDeMo • 40 kW
No session.
Out of service: Tera ulang lapsed — awaiting Metrology re-verification
Start Unlock cable Make operative

Station

Reboot hardware... Trigger message... Clear authorization cache Set whole station Inoperative...

Set whole station Operative

Every command is recorded in the audit log with your name.

Figure 28. Gun 2 out of service while gun 1 keeps charging.

Release cable on gun 2?

Sends UnlockConnector to release the mechanical interlock for a driver whose CCS2 / Type 2 plug is stuck. Any session on this connector ends.

Cancel Unlock cable

Figure 29. Unlock cable on gun 2.

Take gun all out of service

Sends ChangeAvailability. An Inoperative connector refuses new sessions until it is made Operative again.

Maintenance reason

Gun 2 cable jacket damaged — awaiting replacement

Required. Shown on the connector and recorded in the audit log.

Cancel Set Inoperative

Figure 30. Set whole station Inoperative... asks for a reason and applies to every gun.

Whole-station commands (the **Station** card):

Button	What happens
Reboot hardware...	Two steps. Step 1: choose Soft reset (restarts the software; sessions are stopped gracefully first) or Hard reset (full power cycle; sessions end abruptly). Click Continue . Step 2 confirms; a hard reset requires typing <code>REBOOT</code> . The charger goes offline while it restarts.
Trigger message...	Asks the charger to re-send a message now: StatusNotification , MeterValues , BootNotification , Heartbeat , DiagnosticsStatusNotification or FirmwareStatusNotification , for the Whole station or one gun. Useful for a silent or stuck unit.
Clear authorization cache	Flushes the RFID cache in the charger's memory. The Local Authorization List pushed from RFID & Access is not affected.
Set whole station Inoperative... / Operative	Like Take out of service , but for every gun at once (connector 0).

Reboot AUTEL-DC60-SMB-002 ×

Step 1 of 2 — choose the kind of reset.

Soft reset
Restarts the charger's software. Ongoing sessions are stopped gracefully first.

Hard reset
Full power-cycle reboot. Use when the software is unresponsive. Sessions end abruptly.

Cancel Continue

Figure 31. Reboot, step 1 of 2.

Confirm hard reset ×

Step 2 of 2 — the charger **AUTEL-DC60-SMB-002** will go offline while it restarts and any active session will be cut.

Type REBOOT to confirm

Cancel Hard reset now

Figure 32. Hard reset, step 2: type REBOOT to confirm.

Trigger diagnostic message ×

Sends TriggerMessage — the charger re-sends the chosen message now. Useful for a silent or stuck unit.

Message

Connector

Cancel Send

Figure 33. Trigger diagnostic message.

Clear authorization cache? ×

Sends ClearCache — flushes the RFID cache stored in the charger's memory. The Local Authorization List (pushed from RFID & Access) is not affected.

Cancel Clear cache

Figure 34. Clear authorization cache.

4.5 Suspend / Resume and Decommission / Reinstall

Both take a charger out of use. Choose by whether it is coming back soon.

	Suspend (v1.4.1)	Decommission
Use it for	A temporary stop: site closed for works, a dispute with the landlord, waiting for a part.	A charger that leaves the fleet: removed, replaced or sold.
Credentials	Kept. The charger stays connected.	Revoked: authorization key and certificate binding. Its connection is refused at the handshake.
Sessions	New sessions are refused (the charger is answered <i>Pending</i> at boot, new cards <i>Invalid</i>). A session already running finishes and is billed normally. In the driver app the charger stays on the map as <i>temporarily out of service</i> and cannot be paid for, reserved or offered from the queue. Live reservations on it are cancelled with their fee waived or refunded, and queue offers go back to waiting (from v1.4.4).	No new sessions. Past sessions and invoices are kept.
Confirmation	Optional reason, recorded in the audit log.	Type the charger's identity to confirm.
Undo	Resume — nothing to do on the charger. A connected unit shows <i>online</i> at once and is asked to boot again; one that is not connected shows <i>offline</i> from the moment of resume, so the suspension does not count as downtime.	Reinstate — returns it as <i>pending adoption</i> with security reset; you must issue new credentials, set them on the charger and activate it.
Not possible when	The charger is pending adoption, already suspended, or decommissioned.	Already decommissioned.

Suspend a charger

1. Open **Charge points** and click the charger. Stay on **Overview**.
2. Click **Suspend...** (bottom right).
3. Optionally enter a **Reason**, e.g. "Site closed for electrical works".
4. Click **Suspend**. A **Suspended.** banner appears with a **Resume** button; the header tag becomes **connected · suspended**, and the charger appears under the **Suspended** state filter. While it is suspended, **Start** is not offered in the charger list or on the **Remote control** tab; **Stop** and **Unlock cable** stay available for a session already running.

Suspend this charge point?

New sessions are refused until you resume it. A session already running finishes and is billed normally. Its credentials are kept, so resuming needs nothing on the charger.

Reason (optional)

Site closed for electrical works (PLN panel upgrade)

Recorded in the audit log.

Cancel Suspend

Figure 35. Suspend this charge point?

AUTEL-AC22-SMB-001
AUTEL-AC22-SMB-001 · Summarecon Mall Bekasi — P2 Basement

connected · **suspended** · ocpp1.6 · profile 0

Overview Remote control Configuration Device model Security Connectors Sessions

Suspended. It keeps its credentials and stays connected, but new sessions are refused until it is resumed. **Resume**

Gun 1 Available
22.0 kW AC · 3Ø
tera verified due 29 May 2027

Hardware profile Edit

Vendor	Autel
Model	MaxiCharger AC Wallbox
Serial	AUTEL-AC22-SMB-001
Firmware	V1.4.12
Protocol	ocpp1.6
Site	Summarecon Mall Bekasi — P2 Basement

Connectivity

WebSocket **connected**

Last seen 01 Oct 2026, 21:15 (1m ago)

Last heartbeat 01 Oct 2026, 21:15

Offline since —

Boots 6

Commissioned —

OCPP URL ws://127.0.0.1/ocpp/AUTEL-AC22-SMB-001

OCPP frames Decommission...

Figure 36. Suspended: credentials kept, new sessions refused.

Resume: open the charger and click **Resume** in the yellow banner. A toast says *Resumed* and **Suspend...** is offered again. A charger that is still connected shows *online* straight away; one that is not shows *offline* until it reconnects, with its outage counted from the resume.

Decommission a charger

1. Open the charger's **Overview** and click **Decommission...** (in red).
2. Read the warning, type the charger's identity exactly in the box, and click **Decommission**.
3. The drawer shows a red **Decommissioned** banner with the date and a **Reinstate** button.

Decommission this charge point?

It stops being able to connect: its authorization key and certificate binding are revoked. Sessions and invoices are kept.

Type STAR-AC7-RGG-001 to confirm

STAR-AC7-RGG-001

Cancel Decommission

Figure 37. Decommission requires typing the identity.

Grand Galaxy — AC Gun 1
STAR-AC7-RGG-001 · Ruko Grand Galaxy — Bekasi Selatan

decommissioned · ocpp1.6 · profile 2 · no credential

Overview Remote control Configuration Device model Security Connectors Sessions

Decommissioned 01 Oct 2026. Its credentials were revoked. **Reinstate**

Gun 1 Unavailable
11.0 kW AC · 3Ø
tera verified due 31 Aug 2027

Hardware profile Edit

Vendor	Star Charger
Model	Star AC 7.4 kW Wallbox
Serial	SC74W2608123
Firmware	3.2.1
Protocol	ocpp1.6
Site	Ruko Grand Galaxy — Bekasi Selatan

Connectivity

WebSocket **not connected**

Last seen — (never)

Last heartbeat —

Offline since —

Boots 0

Commissioned 01 Oct 2026

OCPP URL ws://127.0.0.1/ocpp/STAR-AC7-RGG-001

OCPP frames **Decommissioned**

Figure 38. Decommissioned: credentials revoked.

Reinstate: click **Reinstate**. The toast reads *Reinstated as pending adoption — issue new credentials*. Then go to the **Security** tab, **Issue key**, set it on the charger, raise the profile to 2, and click **Activate now** in the **Pending adoption** banner.

Grand Galaxy — AC Gun 1

STAR-AC7-RGG-001 · Ruko Grand Galaxy — Bekasi Selatan

pending adoption

ocpp1.6

profile 0

Overview

Remote control

Configuration

Device model

Security

Connectors

Sessions

Pending adoption. This charger is registered but not yet allowed to transact.

Activate now

Gun 1

Unavallable

sType2

11.0 kW

AC · 3Ø

tera verified

due 31 Aug 2027

Hardware profile

Edit

Vendor

Star Charger

Model

Star AC 7.4 kW Wallbox

Serial

SC74W2608123

Firmware

3.2.1

Protocol

ocpp1.6

Site

Ruko Grand Galaxy — Bekasi Selatan

Connectivity

WebSocket

not connected

Last seen

— (never)

Last heartbeat

—

Offline since

—

Boots

0

Commissioned

01 Oct 2026

OCPP URL

ws://127.0.0.1/ocpp/STAR-AC7-RGG-001

OCPP frames

Decommission...

Figure 39. After Reinstatement: pending adoption, security back at profile 0.

5. Load management and the PLN contract clamp

Load management shares one site's PLN subscription between its chargers. The hard ceiling is subscribed kVA × power factor: above it the breaker trips and PLN bills for over-limit draw. The console will not let you set anything higher.

1. Open **Load management** (or click **Load management** in a site drawer). Choose the site in the selector at the top right.
2. Read the tiles: **Subscribed capacity**, **Subscription ceiling** (kVA × PF, the hard cap), **Allocated now** (with active sessions and usable power) and **Installed nameplate** (it may exceed the subscription — load management makes that safe).
3. In **Site power ceiling**, drag the slider or type a value in **Set ceiling** (kW). The ▼ mark shows the contract limit.
4. Choose the **Allocation strategy**: **Fair share** (every session equal) or **Priority tiers** (ranked connectors first, e.g. fleet buses before retail cars).
5. Click **Save ceiling & strategy**. The toast reads *Ceiling saved and dispatched*: the new limits are sent to the chargers at once.

Dynamic Load Management

Share the site's PLN subscription between chargers. The hard ceiling is the subscribed kVA × power factor; above it the breaker trips and the site is billed for over-limit draw.

Summarecon Mall Bekasi — P2 Basement ▼

SUBSCRIBED CAPACITY
197 kVA
PF 0.95 · TR (under the 200 kVA cliff)

SUBSCRIPTION CEILING
187.2 kW
connected kVA × PF — the hard cap

ALLOCATED NOW
62.0 kW
2 active sessions · usable 167.2 kW

INSTALLED NAMEPLATE
102.0 kW
within subscription

Site power ceiling
187.2 kW
managed ceiling

Set ceiling

187.2 kW

▼ 187.2 kW contract limit

0 kW — 215 kW

Allocation strategy

Fair share · Priority tiers

Priority tiers rank connectors (e.g. fleet buses before retail cars); fair share treats every session equally.

Save ceiling & strategy

Genset / emergency curtailment

☐ **Grid supply — normal operation**
Switch on during a grid outage or while the site runs on its emergency diesel generator.

Switching on immediately dispatches 0 kW station ceilings (ChargePointMaxProfile) to every connected charger at this site; switching off restores the allocation plan.

Auxiliary reserve buffer
Power held back from charging for the site's own loads, so chargers never compete with the lights and the tills.

Station lighting

POS terminals & kiosks

CCTV & network

Air conditioning

Other building load

20.0 kW reserved · 167.2 kW left for charging

Save reserve

A single reserve of 20.0 kW is configured; entering a breakdown replaces it.

Connector priority
drag to rank

☐ Ranks apply only under the **Priority tiers** strategy.

1. AUTEL-AC22-SMB-001 · gun 1
sType2 · 22.0 kW

2. AUTEL-DC60-SMB-002 · gun 1
cCCS2 · 40.0 kW

3. AUTEL-DC60-SMB-002 · gun 2
cChDeMo · 40.0 kW

Save ranking · Top of the list is served first and shed last.

Allocation plan
Fair-share water-filling with a minimum-viable floor: sessions below the floor are shed rather than starved. The charger's own RS485 load balancing remains the layer that guarantees the breaker during a WAN outage.

☐ Provision fallback profiles

CHARGE POINT	GUN	TYPE	PRIORITY	STATE	NAMEPLATE	ALLOCATED	SENT AS
AUTEL-AC22-SMB-001	1	AC · 3Ø	0	drawing	22.0 kW	22.0 kW	31.9 A
AUTEL-DC60-SMB-002	1	DC · 3Ø	0	drawing	40.0 kW	40.0 kW	40000 W
AUTEL-DC60-SMB-002	2	DC · 3Ø	0	idle	40.0 kW	0.0 kW	0 W

Figure 40. Dynamic Load Management for Summarecon Mall Bekasi: $197 \text{ kVA} \times 0.95 = 187.2 \text{ kW}$, two sessions drawing.

The PLN contract clamp. If you type or drag a value above $kVA \times PF$, the field flashes red and the console shows *"Exceeds ... kVA PLN contract limit. Clamped to prevent breaker trip."*, then snaps the value back to exactly the contract limit. The server refuses a higher value too, so it cannot be stored by any other route. If the tag **stored value clamped** appears in the card header, an older stored ceiling was higher than the subscription and the lower value is in force.

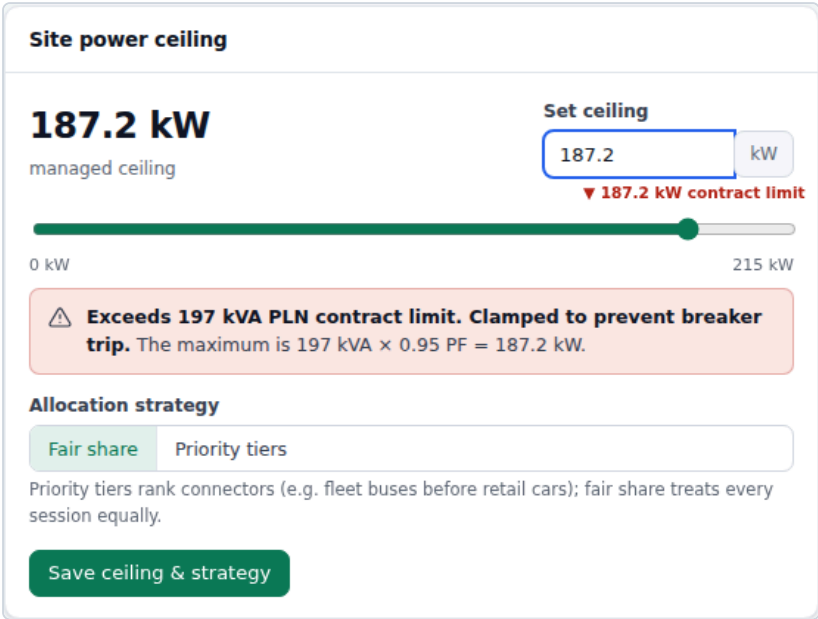


Figure 41. Typing 240 kW on a 197 kVA site: clamped to 187.2 kW.

Card	Use
Genset / emergency curtailment	Switch on during a grid outage or while the site runs on its diesel generator. After you confirm (Curtail now), every connected charger at the site is held at 0 kW; switching off (Restore) restores the allocation plan.
Auxiliary reserve buffer	Power held back for the site's own loads (lighting, POS, CCTV, air conditioning, other). Save reserve . The card shows what is left for charging.
Connector priority	Drag guns into order and Save ranking . Applies only under Priority tiers ; the top is served first and shed last.
Allocation plan	Each gun's nameplate, allocated power and the limit sent to the charger (A or W). Apply plan to chargers resends it; Provision fallback profiles installs the conservative default every gun falls back to if the CSMS is unreachable.

6. Tariffs

Tariffs & Billing (page title *Tariff Plans*) holds what drivers pay per kWh, per session and per idle minute. Every plan is checked against the PLN formula ceiling and the Kepmen ESDM 182.K/2023 service-fee caps before it can be saved or assigned. A plan prices nothing until it is assigned.

Tariff Plans

What drivers pay per kWh, per session and per idle minute. Every plan is checked against the PLN formula ceiling and the Kepmen ESDM 182.K/2023 service-fee caps before it can be saved or assigned.

[+ Create tariff plan](#)

ACTIVE PLANS
2
0 archived

UNASSIGNED PLANS
0
active but pricing nothing

ENERGY CEILING
Rp 2.467,50
per kWh · PLN base Rp 1.645 × N max 1.5

SERVICE-FEE CAPS
Rp 25.000 / Rp 57.000
per session · fast ≤50 kW / ultrafast >50 kW

Active Archived All

2 plans

PLAN NAME	ASSIGNED TO	BASE RATE (IDR/KWH)	SERVICE FEE	IDLE FEE	TAX MODE	STATUS
Public AC Standard — Grand Galaxy Time-of-use (WBP / LWBP) · Retail drivers on AC Type 2 sockets	Ruko Grand Galaxy — Bekasi Selatan AC	WBP Rp 2.450 LWBP Rp 2.200	Rp 25.000 service Rp 25.000 + admin Rp 0	Rp 1.000/min after 15 min grace · max Rp 60.000	PPN on + PBJT-TL at each site's rate	active
Public DC — layanan khusus N=1.5 Flat energy rate	All sites AC+DC	Rp 2.467,50 per kWh	Rp 25.000 service Rp 21.000 + admin Rp 4.000	Rp 1.000/min after 15 min grace · max Rp 90.000	PPN on + PBJT-TL at each site's rate	active

Figure 42. Tariff Plans: assignment, energy rates, service and idle fees, tax mode.

6.1 Create a tariff plan

1. Open **Tariffs & Billing** and click **Create tariff plan**.
2. **1 · Plan profile**: **Plan name**, optional **Description**, the **PLN scheme** (how the site buys electricity: *Layanan khusus* ($N \times \text{base}$), *Curah / bulk* ($Q \times \text{base}$) or *No PLN scheme declared*), the **PLN base rate** (IDR/kWh, published quarterly by PLN) and the **Multiplier (N or Q)**. The **PLN formula rate** and the **Legal energy ceiling** appear underneath.
3. **2 · Energy pricing model**: **Flat energy rate**, **Time-of-use (WBP / LWBP)** (peak 17:00–22:00 WIB and off-peak prices) or **Tiered by kWh**.
4. **3 · Service & convenience surcharges**: **Designed for** (connector class), **Service fee (biaya layanan)** and **Admin fee** per session. Both fees count towards the same cap.
5. **4 · Idle parking penalty** (optional): tick it, then set the **Grace period**, **Penalty rate** (IDR/min) and **Maximum billable idle minutes** (required).
6. **5 · Tax & statutory**: **Charge PPN (VAT)** on or off. PBJT-TL is not part of the tariff; it comes from each site. QRIS MDR is always absorbed by the CPO.
7. Watch the **Live invoice preview** on the right; change **Energy delivered**, **Sample time**, **Site PBJT-TL** and **Idle after charging** to try cases.
8. Click **Save tariff plan**. The console then asks **Assign now?** (6.3).

6.2 The price ceiling check

The kWh price may not exceed the legal ceiling: PLN base × N max under layanan khusus (Rp 1.645 × 1.5 = **Rp 2.467,50/kWh** in the example). The ceiling applies to the **peak** price and to every tier, not to an average. A price above it is marked in red as you type, listed under **Save-time validation** as a **violation** (ENERGY_CEILING_EXCEEDED), and the plan cannot be saved or billed. Correct the price and the flag disappears.

Create tariff plan

Regulatory ceilings are checked live and again by the server on save. An illegal plan cannot be stored.

Description (optional)

Retail drivers on AC Type 2 sockets

PLN scheme

Layanan khusus (N × base)

How the site buys electricity from PLN. It sets the legal ceiling on your kWh price.

PLN base rate

1645

IDR/kWh

Published quarterly by PLN (Q3-2026: Rp 1.645).

Multiplier (N or Q)

1.5

Layanan khusus N: 1.0–1.5. Curah Q: 0.8–3.

PLN FORMULA RATE

Rp 2.467,50

Rp 1.645 × N 1.5

LEGAL ENERGY CEILING

Rp 2.467,50

layanan khusus: base × N max 1.5

2 • Energy pricing model

Flat energy rate

Time-of-use (WBP / LWBP)

Tiered by kWh

Peak (WBP) 17:00–22:00 WIB

2850

IDR/kWh

Waktu Beban Puncak, PLN’s evening peak block.

Rejected: Rp 2.850/kWh is 1.16× the legal ceiling of Rp 2.467,50/kWh (layanan khusus: base × N max 1.5). A price above the ceiling cannot be saved or billed.

Off-peak (LWBP) 22:00–17:00 WIB

2200

IDR/kWh

Luar Waktu Beban Puncak: every other hour.

The WBP window is set platform-wide, not per tariff. The ceiling applies to the **peak** price too, not to an average. A Rp 2.850/kWh peak price, for example, is 1.16× the Rp 2.467,50 ceiling and would be rejected.

Live invoice preview

Energy delivered

20

kWh

Sample time

Peak (WBP 17:00–22:00)

Site PBJT-TL

500

bps

Idle after charging

20

min

= 5.00% (max 10%)

LINE	AMOUNT
Energy (WBP) 20 kWh × Rp 2.850	Rp 57.000
Idle fee (after 15 min grace) 5 min × Rp 1.000	Rp 5.000
Service fee (biaya layanan) 1 session × Rp 25.000	Rp 25.000
Subtotal	Rp 87.000
PBJT-TL 5.00% on Rp 57.000 (electricity)	Rp 2.850
DPP nilai lain PPN base shown on the faktur pajak	Rp 82.363
PPN 12% of DPP	Rp 9.884
Total payable	Rp 99.734

medium

45-min session · all-in Rp 4.986,70/kWh

violation

ENERGY_CEILING_EXCEEDED — Energy rate Rp 2.850/kWh exceeds the layanan khusus ceiling (Rp 2.467,50/kWh (1.16×))

Save-time validation · medium (>7-22 kW) connector

Cancel

Save tariff plan

Figure 43. A Rp 2.850 peak price is 1.16× the legal ceiling: rejected.

Create tariff plan

Regulatory ceilings are checked live and again by the server on save. An illegal plan cannot be stored.

1 · Plan profile

Plan name

Public AC Standard — Grand Galaxy

Description (optional)

Retail drivers on AC Type 2 sockets

PLN scheme

Layanan khusus (N × base)

PLN base rate

1645

IDR/kWh

How the site buys electricity from PLN. It sets the legal ceiling on your kWh price.

Published quarterly by PLN (Q3-2026: Rp 1.645).

Multiplier (N or Q)

1.5

Layanan khusus N: 1.0–1.5. Curah Q: 0.8–3.

PLN FORMULA RATE

Rp 2.467,50

Rp 1.645 × N 1.5

LEGAL ENERGY CEILING

Rp 2.467,50

layanan khusus: base × N max 1.5

2 · Energy pricing model

Flat energy rate

Time-of-use (WBP / LWBP)

Tiered by kWh

Peak (WBP) 17:00–22:00 WIB

2450

IDR/kWh

Off-peak (LWBP) 22:00–17:00 WIB

2200

IDR/kWh

Waktu Beban Puncak, PLN's evening peak block.

Luar Waktu Beban Puncak: every other hour.

The WBP window is set platform-wide, not per tariff. The ceiling applies to the **peak** price too, not to an average. A Rp 2.850/kWh peak price, for example, is 1.16× the Rp 2.467,50 ceiling

Live invoice preview

Energy delivered

20

kWh

Sample time

Peak (WBP 17:00–22:)

Site PBJT-TL

500

bps

Idle after charging

20

min

= 5.00% (max 10%)

LINE	AMOUNT
Energy (WBP) 20 kWh × Rp 2.450	Rp 49.000
Idle fee (after 15 min grace) 5 min × Rp 1.000	Rp 5.000
Service fee (biaya layanan) 1 session × Rp 25.000	Rp 25.000
Subtotal	Rp 79.000
PBJT-TL 5.00% on Rp 49.000 (electricity)	Rp 2.450
DPP nilai lain PPN base shown on the faktur pajak	Rp 74.663
PPN 12% of DPP	Rp 8.960
Total payable	Rp 90.410

• medium

45-min session · all-in Rp 4.520,50/kWh

Save-time validation · medium (>7–22 kW) connector

✓ No regulatory issues. This plan can be saved.

Cancel

Save tariff plan

Figure 44. Peak lowered to Rp 2.450/kWh: within the ceiling. The preview shows PBJT-TL, DPP nilai lain and PPN.

Service fee caps (Kepmen ESDM 182.K/2023): the per-session service fee plus admin fee is capped for **fast** (>22–50 kW) and **ultrafast** (>50 kW) charging; slow and medium AC have no cap. Because the cap follows each connector's nameplate power, it is checked again when you assign the plan.

6.3 Assign a plan to a site

- After saving, click **Assign now** in the **Tariff plan saved** dialog — or open the plan from the list and click **Assign**.
- Choose the **Scope: All sites, Specific site** or **Single connector**, and pick the site (or charger and connector).
- Optionally restrict **Applies to (AC connectors only / DC connectors only)** and set a **Priority** (tie-breaker within the same scope).
- Click **Assign tariff**. If the plan is illegal for a connector in that scope (for example its service fee is above the cap for a 50 kW charger) the assignment is refused with the reason.

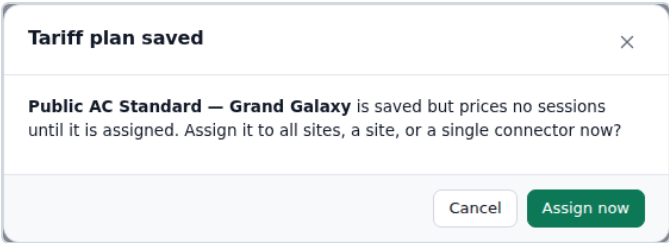


Figure 45. After saving: assign now?

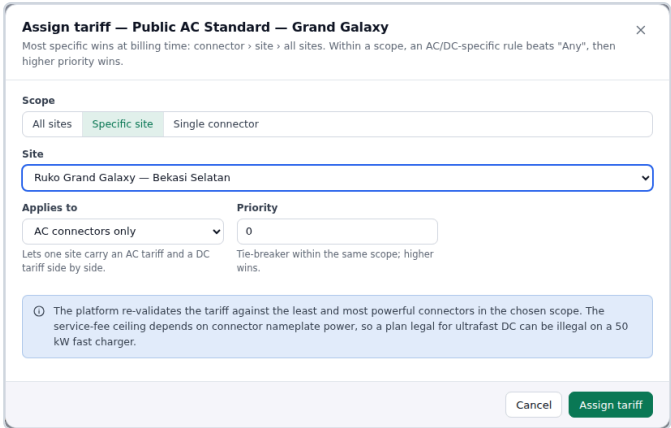


Figure 46. Assign to Ruko Grand Galaxy, AC connectors only.

At billing time the most specific assignment wins: **connector > site > all sites**; within one scope an AC-only or DC-only rule beats "Any", then the higher priority. The tariff in force when a session **starts** is used, so changes never re-price past sessions. Without any assignment, sessions bill at the regulated default (layanan khusus at N max, energy only).

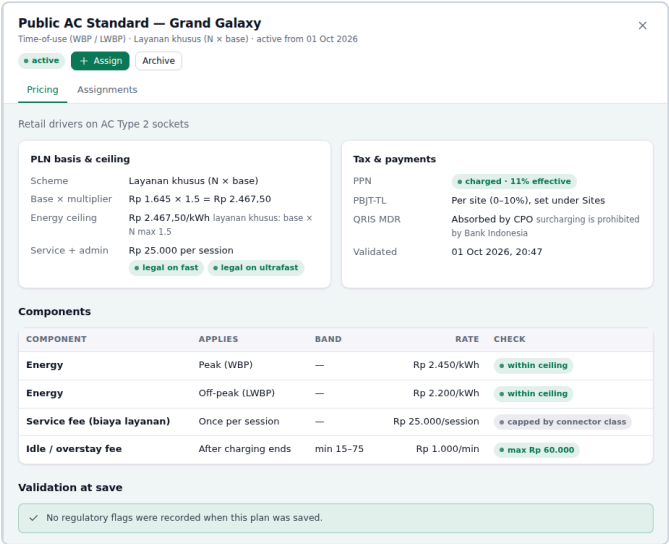


Figure 47. Tariff plan drawer, **Pricing**: each component checked against the ceiling.

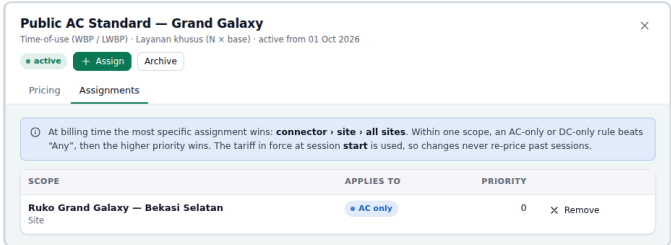



Figure 48. **Assignments** tab; **Remove** stops using the plan there.

7. Sessions & Revenue

Every charging session with its meter readings and the tax breakdown frozen in its charge detail record (CDR).

7.1 Find a session

1. Open **Sessions & Revenue**. The last 7 days are shown, newest first.
2. Narrow with **From / To**, **Site**, **Station ID**, **Connector** (AC, DC or plug type), **Payment** (e.g. **Needs review**) and **State** (**Active (charging)**, **Ended — not rated**, **Rated (CDR issued)**, **Settled**, **Disputed**). Filters apply as you type.
3. Or type a session ID, card idTag or transaction ID in **Search**.
4. Click a row to open the session drawer. **Reset** restores the defaults; **Export CSV** (roles with export rights) downloads up to 50,000 matching rows.

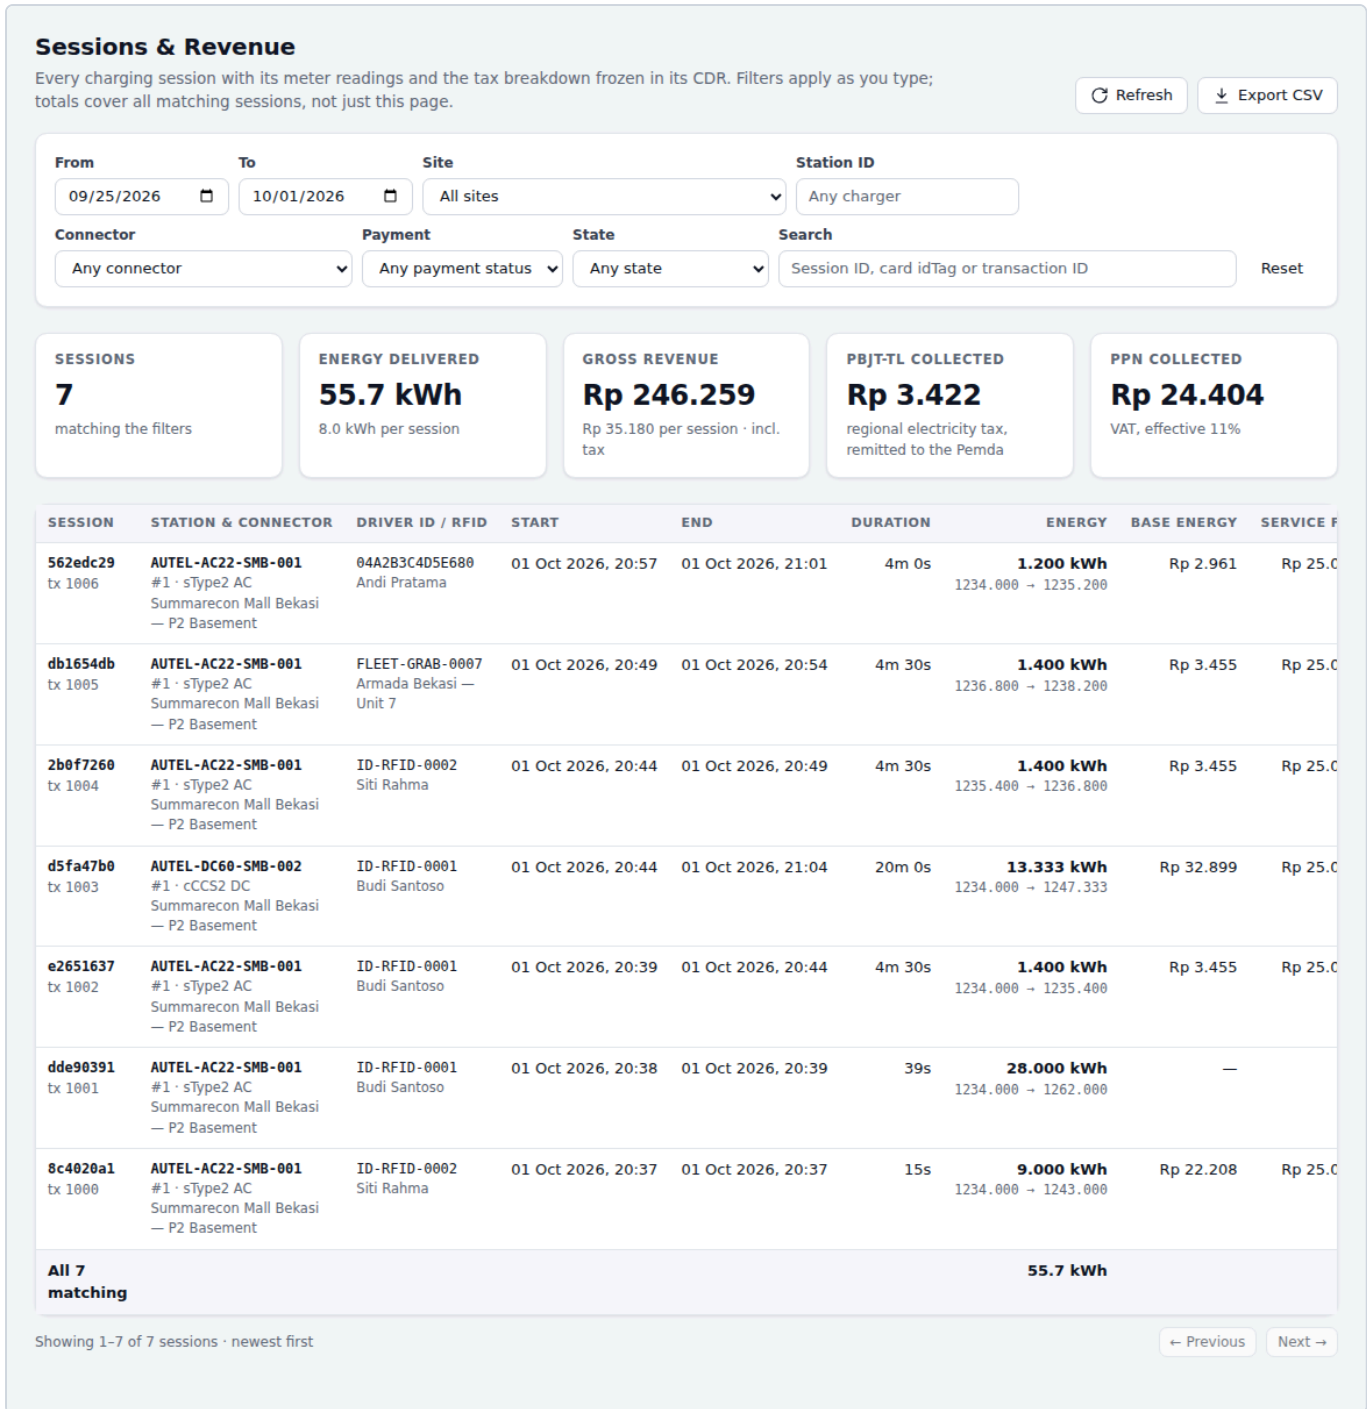

Line	Meaning
Subtotal	Energy + service fee + admin and idle/time fees.
+ PBJT-TL x%	Regional tax on electricity, at the site's rate, on the electricity part.
DPP nilai lain	The PPN tax base (11/12 of the price). Shown on the invoice, <i>not</i> added to the total.
+ PPN 12% × DPP	VAT; effectively 11% of the price (UU HPP).
Total charged to driver	What the driver pays. The payment gateway MDR is an estimate of the CPO's cost, not charged to the driver.

Session e2651637

AUTEL-AC22-SMB-001 · connector #1 · Summarecon Mall Bekasi — P2 Basement

rated
Invoiced

[Summary & billing](#)
[Metering](#)
[Signed meter data](#)
[Car \(ISO 15118\)](#)

[Tax receipt](#)
[Copy session ID](#)

Session

Session ID	e2651637-f23d-4d2f-bbd0-f132aa7ab4cb
Transaction ID	1002
Charger	AUTEL-AC22-SMB-001 · #1
Connector	sType2 AC
Site	Summarecon Mall Bekasi — P2 Basement
Card / idTag	ID-RFID-0001 · Budi Santoso
Payment	postpaid · Invoiced
Started	01 Oct 2026, 20:39
Ended	01 Oct 2026, 20:44
Duration	4m 30s · 1 min idle
Meter	1234.000 → 1235.400 kWh
Delivered	1.400 kWh
Stop reason	Remote Stopped remotely from the app or this console

Tax stack (frozen CDR)

Subtotal	Rp 28.455
Energy + fast-charging service fee + idle/time fees	
+ PBJT-TL 5.00%	Rp 173
Regional tax on electricity, set by the regency/city	
DPP nilai lain	Rp 26.242
PPN tax base — shown on the invoice, not added to the total	
+ PPN 12% × DPP	Rp 3.149
VAT, effective 11% of the price (UU HPP)	
Total charged to driver	Rp 31.777

Payment gateway MDR (estimate): **Rp 0** — the CPO's cost, deducted at settlement. It is not charged to the driver.

CDR lines

DESCRIPTION	QTY	UNIT RATE	AMOUNT
Energy (WBP) energy	1.4 kWh	Rp 2.468	Rp 3.455
Service fee (biaya layanan) session	1 session	Rp 21.000	Rp 21.000
Admin fee admin	1 session	Rp 4.000	Rp 4.000

Figure 50. A rated session: tax stack and CDR lines.

Open the tax receipt

1. In the session drawer click **Tax receipt** (or **Receipt** in the list row, or click a row on a charger's Sessions tab).
2. The receipt opens in a new browser tab: *Tanda Terima Pengisian Daya / Charging Receipt*, with site, SPKLU ID, charger, session, meter readings and card, the CDR lines, **PBJT-TL**, **DPP nilai lain (11/12 × harga)**, **PPN 12% × DPP (efektif 11%, UU HPP)** and **Total dibayar / Total**.
3. Click **Print / Save as PDF** to give it to the driver.

Tanda Terima Pengisian Daya / Charging Receipt

No. PS-E2651637
1 Okt 2026, 20.44

Nusantara Charge Nusantara · NPWP 01.234.567.8-091.000 · PKP

Lokasi / SiteSummarecon Mall Bekasi — P2 Basement — Jl. Bulevar Ahmad Yani, Bekasi

ID SPKLU01.POSO.20.3275.010

ChargerAUTEL-AC22-SMB-001 · connector 1 (sType2)

Sesi / Sessione2651637-f23d-4d2f-bbd0-f132aa7ab4cb · tx 1002

Mulai / Start1 Okt 2026, 20.39

Selesai / End1 Okt 2026, 20.44

Meter1234.000 → 1235.400 kWh (terkirim / delivered **1.400 kWh**)

Kartu / CardID-RFID-0001

URAIAN / ITEM	QTY	HARGA / RATE	JUMLAH
Energy (WBP)	1.4 kWh	Rp 2.468	Rp 3.455
Service fee (biaya layanan)	1 session	Rp 21.000	Rp 21.000
Admin fee	1 session	Rp 4.000	Rp 4.000
Subtotal			Rp 28.455
PBJT-TL (Pajak Barang dan Jasa Tertentu — Tenaga Listrik) 5.0%			Rp 173
DPP nilai lain (11/12 × harga)			Rp 26.242
PPN 12% × DPP (efektif 11%, UU HPP)			Rp 3.149
Total dibayar / Total			Rp 31.777

Harga energi tunduk pada batas tarif layanan khusus PLN; biaya layanan tunduk pada Kepmen ESDM 182.K/TL.04/MEM.S/2023. Dokumen ini dihasilkan oleh sistem dan sah tanpa tanda tangan.

Print / Save as PDF

Figure 51. The bilingual tax receipt.

The **Metering** tab charts energy and power from the meter values; **Signed meter data** shows OCMF verification for meters that sign their readings; **Car (ISO 15118)** shows what the car asked for when the charger reports it.

7.3 Sessions flagged for review (`needs_review`)

When the rating engine finds a serious problem it **parks** the session instead of billing it: no CDR or invoice is issued, so the driver has not been charged. The payment column shows

Needs review, an alert `session.needs_review` is raised on the Dashboard, and the drawer shows a red **Needs review** banner with the reason code. Typical reasons:

Reason	What it means
IMPLAUSIBLE_ENERGY	More energy than the connector could physically deliver in that time: a wrong meter register, a unit mix-up, a meter fault or a wrong charger clock.
UNAUTHORISED_TOKEN	The card presented during the transaction was refused.
ORPHANED_SESSION / STUCK_SESSION	The charger never reported a proper end of the session.
PREPAID_OVERRUN	A prepaid session used more than was paid.
ENERGY_CEILING_EXCEEDED and other regulatory codes	The tariff would bill above a legal ceiling.

Work a review

1. In **Sessions & Revenue** set **Payment** to **Needs review**.
2. Open the session. Read the reason, the meter readings and the **Regulatory checks** table at the bottom; check the charger's OCPP log for that time.
3. If the cause was the tariff, correct the tariff and click **Re-rate**. If it rates, the toast reads *Session rated — CDR issued*.
4. If the engine still declines, it explains why and offers **Force bill as rated....** Use it only when you are sure the data is right: you must type **FORCE**, the driver is billed with the current tariff, and the override is recorded in the audit log under your name.

Sessions & Revenue

Every charging session with its meter readings and the tax breakdown frozen in its CDR. Filters apply as you type; totals cover all matching sessions, not just this page.

From

09/25/2026

To

10/01/2026

Site

All sites

Station ID

Any charger

Connector

Any connector

Payment

Needs review

State

Any state

Search

Session ID, card idTag or transaction ID

Reset

SESSIONS

1

matching the filters

ENERGY DELIVERED

28.0 kWh

28.0 kWh per session

GROSS REVENUE

Rp 0

Rp 0 per session - incl. tax

PBJ/TTL COLLECTED

Rp 0

regional electricity tax, remitted to the Pemda

PPN COLLECTED

Rp 0

VAT, effective 11%

SESSION	STATION & CONNECTOR	DRIVER ID / RFID	START	END	DURATION	ENERGY	BASE ENERGY	SERVICE F
dde90391 tx 1001	AUTEL-AC22-SMB-001 #1 - sType2 AC Summarecon Mall Bekasi — P2 Basement	ID-RFID-0001 Budi Santoso	01 Oct 2026, 20:38	01 Oct 2026, 20:39	39s	28.000 kWh 1234.888 ~ 1262.888	—	
All 1 matching						28.0 kWh		

Figure 52. Payment filter **Needs review**.

Session dde90391

AUTEL-AC22-SMB-001 · connector #1 · Summarecon Mall Bekasi — P2 Basement

ended · unrated

Needs review

Summary & billing

Metering

Signed meter data

Car (ISO 15118)

Tax receipt

Copy session ID

Re-rate

Needs review.

IMPLAUSIBLE_ENERGY

The session is parked: no CDR or invoice has been issued, so the driver has not been billed.

The rating engine declined to price this session.

IMPLAUSIBLE_ENERGY

The tariff assigned to this connector cannot price this session. Correct the tariff and retry, or POST ("force": true) to bill it as rated anyway — that is recorded in the audit log.

Force bill as rated.

Session

Session ID

Transaction ID

Charger

Connector

Site

Card / idTag

Payment

Started

Ended

Duration

Meter

Delivered

Stop reason

dde90391-c7ee-4570-b03e-7f744aa39097

1001

AUTEL-AC22-SMB-001 · #1

sType2 AC

Summarecon Mall Bekasi — P2 Basement

ID-RFID-0001 · Budi Santoso

postpaid · Needs review

01 Oct 2026, 20:38

01 Oct 2026, 20:39

39s

1234.888 ~ 1262.888 kWh

28.000 kWh

Remote

Stopped remotely from the app or this console

Tax stack (frozen CDR)

No CDR has been issued for this session, so there is no tax breakdown yet.

CDR lines

DESCRIPTION

QTY

UNIT RATE

AMOUNT

Figure 53. Re-rate declined for **IMPLAUSIBLE_ENERGY**: 28 kWh in 39 s on a 22 kW gun.

8. RFID & Access

Every RFID card that can start a charge: who holds it, what it may draw, and whether chargers accept it. Changes apply at the next tap on an online charger; offline chargers learn them only when the local list is pushed.

RFID & Access Control

Every RFID card that can start a charge: who holds it, what it may draw, and whether chargers accept it. Changes apply at the next tap on an online charger.

[+ Issue new RFID tag](#)

TOTAL CARDS
6
 6 in chargers' local lists

ACTIVE
4
 accepted and not past expiry

BLOCKED / STOLEN
2
 refused at every online charger

LIFETIME ENERGY
56 kWh
 7 sessions on registered cards

Search

Status

Account type

CARD UID	CARDHOLDER	ACCOUNT TYPE	EXPIRY	STATUS	LIMITS	LIFETIME ENERGY	LAST USED
ID-RFID-0002 in local list	Siti Rahma	VIP / Internal Testing	none	Blocked / Stolen	no cap	10.4 kWh 2 sessions	20m ago 01 Oct 2026, 20:44
04A2B3C4D5E680 in local list	Andi Pratama +62 813 2200 4517	Corporate Fleet PT Logistik Nusantara	none	Active	Spend Rp 31.201 / Rp 2.000.000	1.2 kWh 1 sessions	7m ago 01 Oct 2026, 20:57
TECH-0001 in local list	Field Technician (test card)	Maintenance Technician	none	Active	no cap	0.0 kWh 0 sessions	never
ID-RFID-BLOCKED in local list	Lost card (reported stolen)	Retail Driver	none	Blocked / Stolen	no cap	0.0 kWh 0 sessions	never
FLEET-GRAB-0007 in local list	Armada Bekasi — Unit 7	Corporate Fleet PT Armada Bekasi Raya	none	Active	no cap	1.4 kWh 1 sessions	15m ago 01 Oct 2026, 20:49
ID-RFID-0001 in local list	Budi Santoso	Retail Driver	none	Active	no cap	42.7 kWh 3 sessions	20m ago 01 Oct 2026, 20:44

Local Authorization List — hardware synchronisation

Pushing the list (OCPP SendLocalList, full update) writes every card marked **Allow offline charging** — with its status and expiry — into the charger's own flash memory. If the charger then loses its WAN link to the CSMS, authorised drivers can still start charging and blocked cards are still refused. Push after issuing or blocking cards and after commissioning a charger. Offline chargers are skipped; push again when they reconnect.

Figure 54. RFID & Access Control: cards with status, limits and lifetime use; the Local Authorization List card at the bottom.

8.1 Issue a card

1. Open **RFID & Access** and click **Issue new RFID tag**.
2. Under **Card UID**, keep **Type the UID** and enter the hex idTag from the supplier's delivery list (up to 20 characters, no spaces) — or use **Scan from live charger** (see below).
3. Under **Cardholder & account**, enter the **Cardholder name**, optional **Mobile phone**, and the **Account type: Retail Driver, Corporate Fleet, VIP / Internal Testing** or **Maintenance Technician**. For a fleet card also enter the **Fleet / company name** (this creates the fleet account for Fleet billing) and an optional **App PIN**. Optional **Expiry date**.
4. Under **Limits & offline access**, set an optional lifetime **Energy limit** (kWh) or **Spending limit** (IDR, incl. tax), and tick **Allow offline charging** if the card must work when a charger has lost its link.
5. Click **Issue card**. The toasts confirm the card and remind you to push the local list (8.3).

Issue new RFID tag

Register a card so chargers accept it. It works at the next tap on any online charger.

Card UID

Type the UID Scan from live charger

Card UID (hex idTag)

04A2B3C4D5E680

The idTag the charger reads from the card — usually the hex serial on the supplier's delivery list. Up to 20 characters, no spaces. Hex is stored upper-case.

Cardholder & account

Cardholder name

Andi Pratama

Mobile phone (optional)

+62 813 2200 4517

Account type

Corporate Fleet

Fleet / company name

PT Logistik Nusantara

App PIN (optional)

Optional 4–8 digit PIN the fleet driver enters in the app. Stored hashed; it cannot be shown again.

Expiry date (optional)

mm/dd/yyyy

Leave blank for no expiry. Sent to chargers as the idTag expiry date.

Limits & offline access

Energy limit (optional)

No cap kWh

Cumulative over the card's lifetime. Once reached, the card is refused.

Spending limit (optional)

2000000 IDR

Cumulative, including tax. Once reached, the card is refused.

☒ **Allow offline charging**

Include this card in the chargers' local authorisation list so it still starts sessions when a charger cannot reach the CSMS.

Notes (optional)

Internal notes — delivery batch, vehicle plate...

Cancel

Issue card

Figure 55. Issuing a Corporate Fleet card with offline charging allowed.

Scan from live charger

1. In the issue dialog click **Scan from live charger**.
2. Tap the new card on any charger's RFID reader. The charger refuses the tap; that is expected.
3. Optionally pick the charger in the selector, then click **Refresh**. Cards presented in the last 30 minutes that are not registered appear in the list. Roaming partners' cards are not listed: they are billed to the partner, so they must not be registered locally.
4. Click **Use** next to the card: its UID is filled in. Complete the cardholder details and click **Issue card**.

Issue new RFID tag ×

Register a card so chargers accept it. It works at the next tap on any online charger.

Card UID

Type the UID Scan from live charger

Card UID (hex idTag)

04A2B3C4D5E680

The idTag the charger reads from the card — usually the hex serial on the supplier's delivery list. Up to 20 characters, no spaces. Hex is stored upper-case.

Tap the new card on any charger's RFID reader, then press Refresh. Cards presented in the last 30 minutes that are not registered yet appear below — press **Use** to take its UID. The charger will refuse the tap; that is expected.

Taps at any charger ▼ Refresh

CARD UID	CHARGER	LAST TAP	TAPS
04A2B3C4D5E6F1	AUTEL-AC22-SMB-001	5s ago	1 Use

Cardholder & account

Cardholder name Budi Santoso

Mobile phone (optional) +62 812 3456 7890

Account type Retail Driver ▼

Expiry date (optional) mm/dd/yyyy 📅

Leave blank for no expiry. Sent to chargers as the idTag expiry date.

Limits & offline access

Cancel Issue card

Figure 56. Scan from live charger: an unregistered card tapped at AUTEL-AC22-SMB-001 a few seconds earlier, ready to **Use**.

8.2 Block a lost or stolen card

1. Open **RFID & Access**, find the card with **Search** (UID, cardholder, fleet or phone) and click it.
2. Click **Block card (lost/stolen)**, read the warning and click **Block card**. The status becomes **Blocked / Stolen**.
3. The console offers **Push the local list now?** Click **Choose a site...** and push (8.3). Online chargers refuse the card at the next tap straight away; offline chargers keep accepting it until they receive the list.

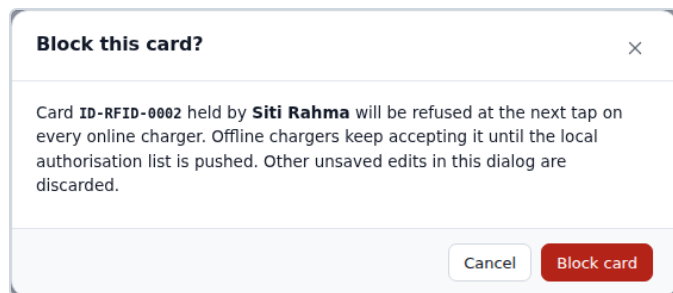


Figure 57. Block this card?

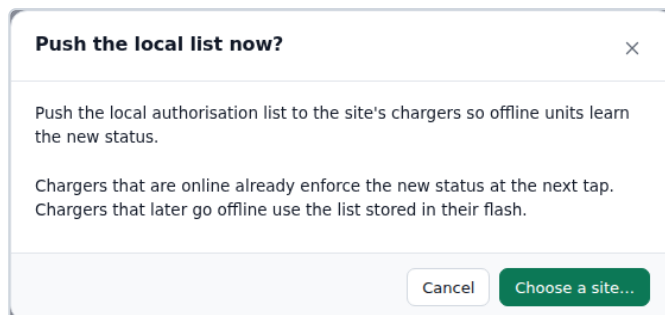


Figure 58. After blocking: push the local list.

To make a card usable again, open it and set **Status** back to **Active**, then save and push the list.

8.3 Push the Local Authorization List

Pushing (OCPP `SendLocalList`, full update) writes every card marked **Allow offline charging**, with its status and expiry, into the chargers' memory, so authorised drivers can still charge and blocked cards are still refused during a WAN outage. Push after issuing or blocking cards and after commissioning a charger.

1. Open **RFID & Access** and scroll to **Local Authorization List — hardware synchronisation**.
2. Click **Push to all chargers at site...** (or **Push to one charger...**).
3. Choose the **Site** and click **Push list**.
4. Read the result per charger: **accepted**, the charger's response, the new list version and the number of cards sent. Offline chargers are skipped; push again when they reconnect.

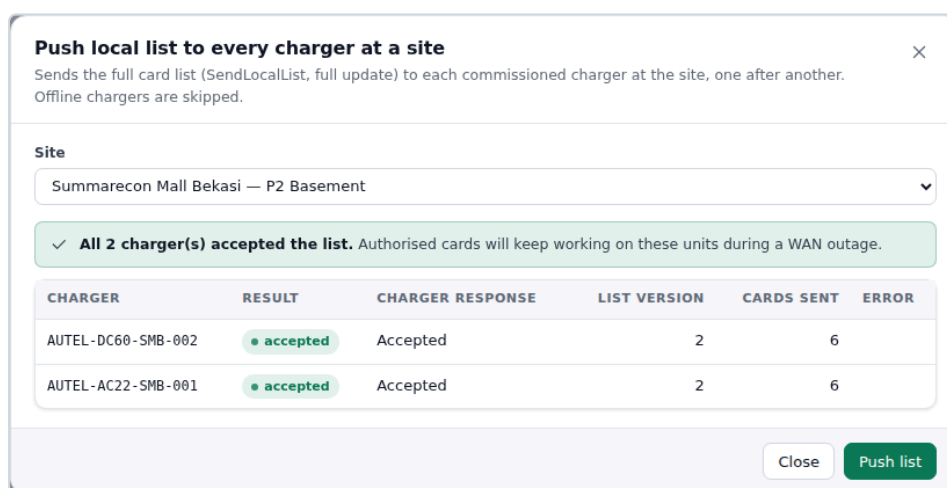


Figure 59. Both chargers at Summarecon Mall accepted list version 2.

9. Firmware & Diagnostics

Roll firmware out to chargers over the air (OCPP `UpdateFirmware`) and pull their logs remotely (`GetDiagnostics`). The page has three tabs: **Campaigns**, **Firmware repository** and **Diagnostic logs**.

9.1 Add a firmware image

1. Open **Firmware & Diagnostics** and click **Add firmware**.
2. Choose **Upload binary** (the server hashes the file and serves it to chargers through a one-time-token URL) or **HTTPS download URL** (chargers download from the vendor directly).
3. Enter the **Image name** and the **Version string** — exactly what the charger will report in `BootNotification` after the update, character for character; this is how the install is verified.
4. Enter the **Vendor** and the **Compatible hardware models** (comma separated). Campaigns refuse chargers whose model does not match: the wrong image can brick a unit.
5. Optionally paste the vendor's **SHA-256 checksum** (strongly recommended; an upload that does not match is rejected) and **Release notes**. Click **Add to repository**.

Add firmware image ×

Images in the repository can be rolled out to compatible chargers with a campaign.

Upload binary **HTTPS download URL**

Firmware file

Choose File MaxiCharger-DC-V2.1.8.bin

MaxiCharger-DC-V2.1.8.bin · 64.0 KB. The server computes the SHA-256 while it receives the file.

Image name **Version string** **Vendor (optional)**

MaxiCharger DC Compact main cor V2.1.8 Autel

Exactly what the charger reports as its firmware version in `BootNotification` after the update. PlugSure compares the two to **verify** the install, so copy it character for character.

Compatible hardware models

MaxiCharger DC Compact

Comma separated. Matched case-insensitively against the model each charger reports. Campaigns refuse chargers that do not match: flashing the wrong image can brick a unit. Leave blank only for vendor-wide images.

SHA-256 checksum (optional)

64 hex characters, from the vendor release notes

Strongly recommended. For uploads the server hashes the file and **rejects it** if it does not match. For URL images, "Verify checksum" downloads the file once and compares.

Release notes (optional)

Fixes CCS2 pre-charge timeout; improves CHAdeMO handshake retries

Cancel **Add to repository**

Figure 60. Add firmware image.

9.2 Run a FOTA campaign

1. Click **New campaign**.
2. **1 • Firmware image**: choose the **Image** and type a **Campaign name**. The compatible models and checksum status are shown.
3. **2 • Targets: Individual chargers** (tick them; incompatible models are greyed out), **Site group** or **Entire fleet**.
4. **3 • Execution window: Start immediately**, or **Maintenance window** with **Window opens / Window closes** in each site's own time zone (e.g. 01:00–05:00).
5. **4 • Retry policy: Maximum retries** (0–10) and **Retry interval**.
6. Click **Create campaign**. The **Live Deployment Tracker** opens.

New firmware campaign

Roll one image out to many chargers, inside a maintenance window, with automatic retries.

1 • Firmware image

Image MaxiCharger DC Compact mai **Campaign name** DC Compact V2.1.8 — Summarec

Compatible models: MaxiCharger DC Compact Checksum: verified

2 • Targets

Individual chargers Site group Entire fleet

Filter by identity, name, model or site Select all compatible shown Clear

☐	AUTEL-AC22-SMB-001 MaxiCharger AC Wallbox · Summarecon Mall Bekasi — P2 Basement · firmware V1.4.12	Incompatible model	online
☒	AUTEL-DC60-SMB-002 MaxiCharger DC Compact · Summarecon Mall Bekasi — P2 Basement · firmware V2.1.7		online
☐	STAR-AC7-R6G-001 · Grand Galaxy — AC Gun 1 Star AC 7.4 kW Wallbox · Ruko Grand Galaxy — Bekasi Selatan · firmware 3.2.1	Incompatible model	offline

1 charger targeted · 1 online now

3 • Execution window

Start immediately Maintenance window

Window opens 01:00 AM **Window closes** 05:00 AM

Chargers are only sent the update between these times, in each site's own time zone (WIB / WITA / WIT). A window may cross midnight, e.g. 23:00–02:00. An update already in progress when the window closes is allowed to finish; chargers not reached wait for the next night.

4 • Retry policy

Cancel Create campaign

Figure 61. New firmware campaign for the DC Compact, in a 01:00–05:00 window.

In the tracker each charger moves through **Initiated → Downloading / Downloaded → Installing / Installed → Verified**; it is **Verified** only when the charger reboots and reports the image's exact version. A charger is out of service while it installs, and most wait until no session is running. Failed jobs are retried automatically; after the last retry they are marked failed and can be retried from the tracker. **Cancel campaign** stops the queued chargers; chargers already downloading or installing cannot be stopped remotely and finish on their own.

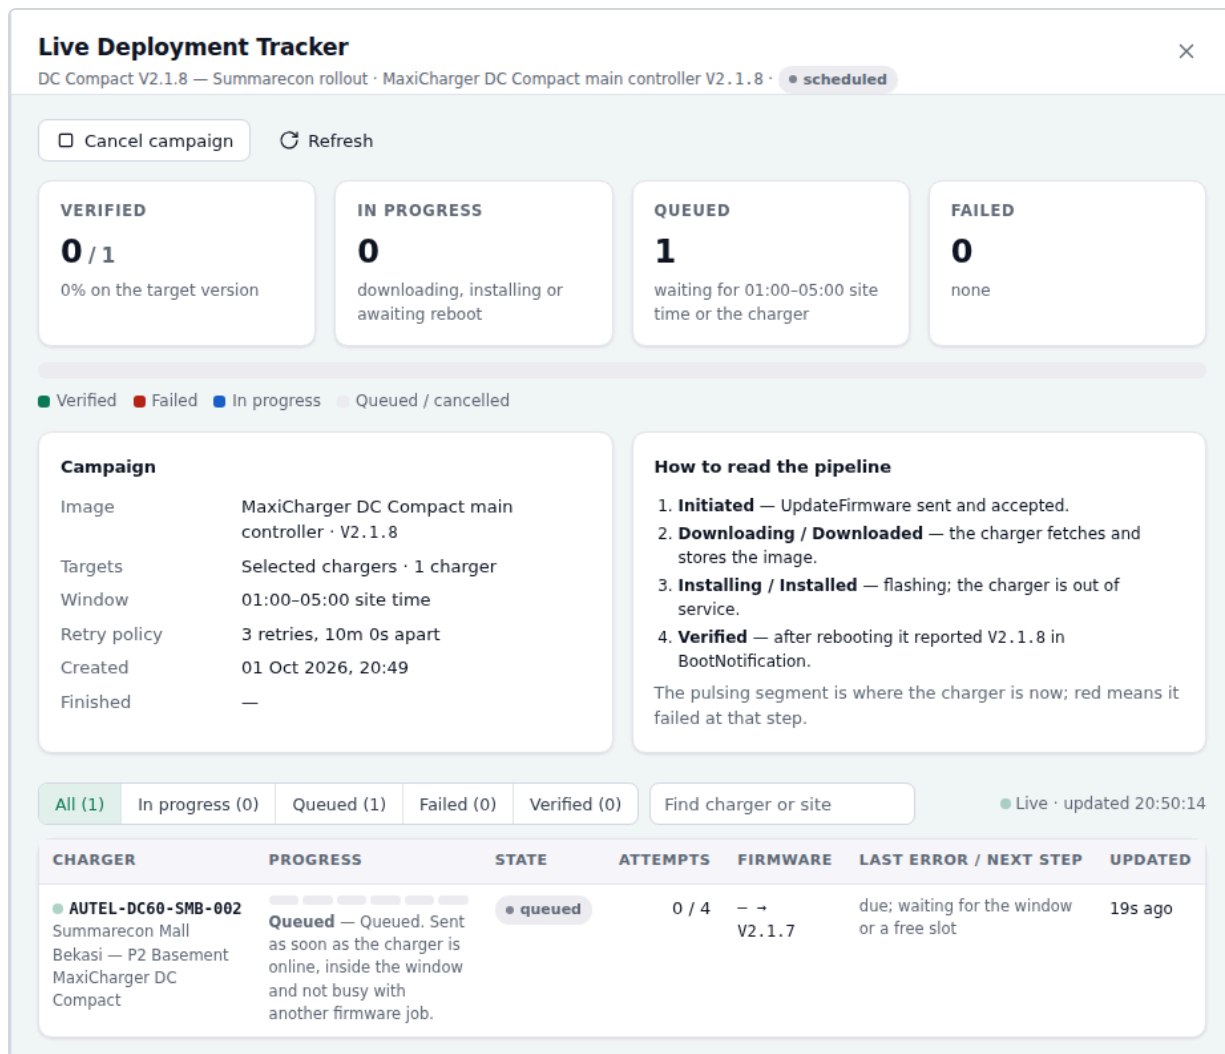


Figure 62. Live Deployment Tracker: one charger queued, waiting for the window.

9.3 Request diagnostic logs

1. Open the **Diagnostic logs** tab and choose the **Charge point** (it must be online).
2. Click **Request logs**. Choose the **Log period** (**Last hour**, **Last 24 h**, **Last 7 days**, **Everything**, or **From/To**).
3. Choose the **Upload target: PlugSure built-in receiver (recommended)**, or **Custom server** (FTP/FTPS/SFTP/HTTPS; the file is then not viewable here).
4. Click **Send request**. The status moves **Requested** → **Uploading** → **Uploaded** as the charger reports progress; click an uploaded row to open the log viewer or **Download file**.

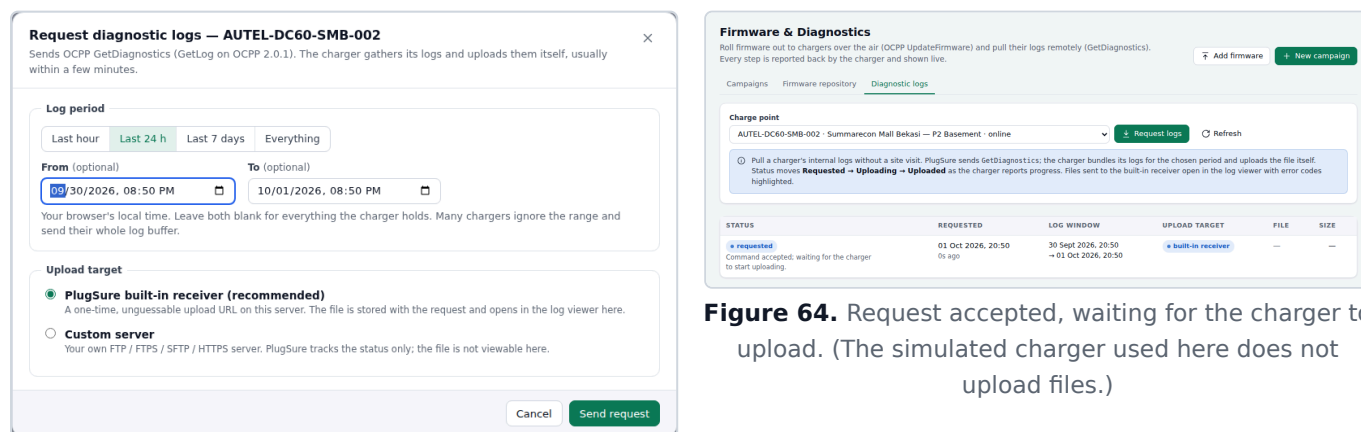


Figure 64. Request accepted, waiting for the charger to upload. (The simulated charger used here does not upload files.)

10. Refunds, Billing, Statements and Fleet billing

These pages are for finance staff. The essentials only:

Page	What it shows	What you do
Refunds	Money owed back to prepaid drivers (unused balance, or a payment whose charge never started), failed refunds, and a Holds and post-pay list of card holds and e-wallet charges.	Pay through the payment provider, or after a bank transfer use Record a bank-transfer refund with the transfer reference. Drivers see "refund in progress" until it is recorded.
Billing	Per site owner and Month : sessions, kWh, gross, PBJT + PPN, commission base, the owner's share and the operator's share. Sites with no owner are the operator's own.	Open an owner to see the Statement and Plan ; Finalise a month after it ends to freeze and number the statement. CSV downloads the table.
Statements	What the platform charges your organisation each month: commission, per-charger minimums, platform fees, PPN, and How it adds up . The current month is a draft.	CSV or Print / PDF ; finalised statements are listed underneath.
Fleet billing	Monthly invoices for the companies your fleet cards belong to, with PBJT-TL and PPN on DPP nilai lain. Tabs Invoices , Credit notes , Accounts , Settings .	Choose the Month ; from the 1st of the next month Issue all invoices (or one), e-mail, record payment, enter the Coretax faktur number, issue credit notes; e-Faktur XML for Coretax.

Before issuing a fleet invoice, fix the warnings shown on it: a fleet account without NPWP/NIK cannot get a faktur pajak, and one without a billing e-mail cannot be e-mailed. Fill both under **Fleet billing** → **Accounts**.

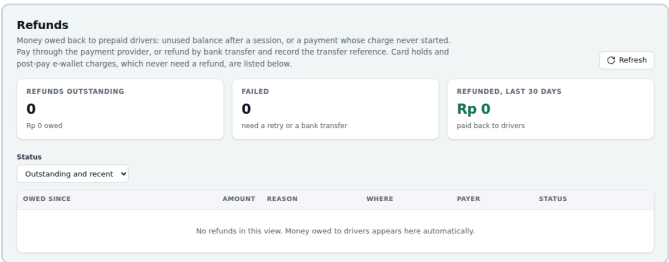


Figure 65. Refunds (nothing owed in the test data).

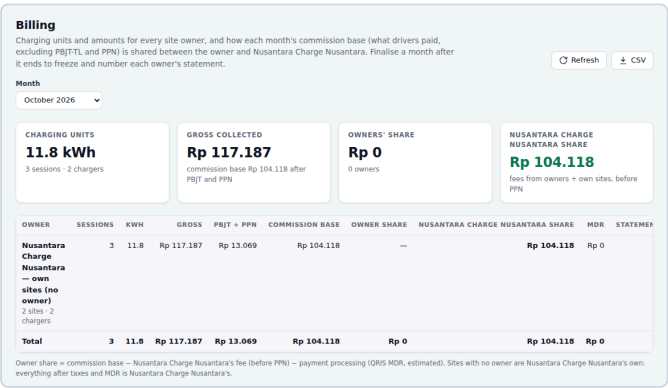


Figure 66. Billing for October 2026.

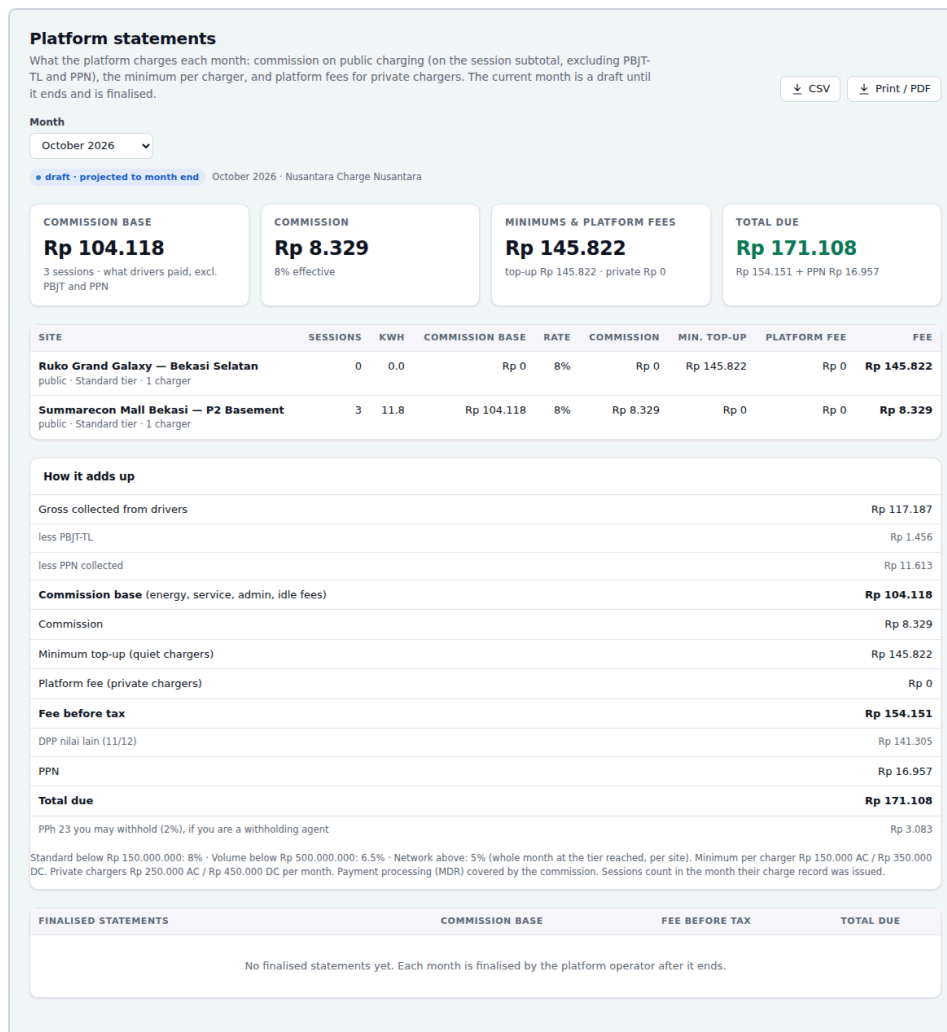


Figure 67. Platform statements: the draft for October 2026.

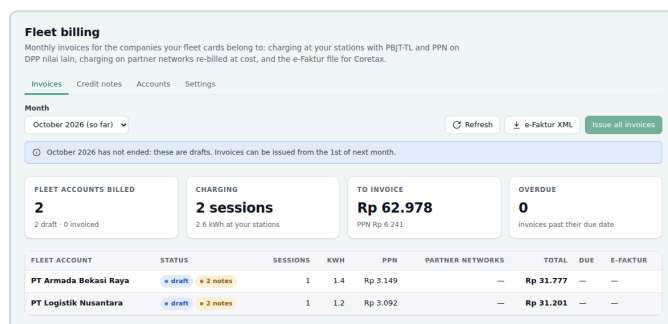


Figure 68. Fleet billing: October drafts (issuable from 1 November).

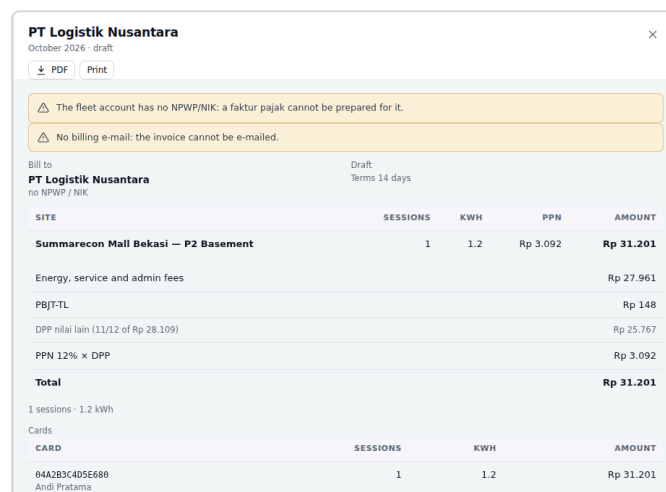


Figure 69. A draft fleet invoice with its warnings.

11. Roaming (OCPI)

Roaming lets drivers of other networks charge on your chargers, and your fleet cards charge on theirs (OCPI 2.2.1). Every roaming session produces a charge record: you bill the partner's provider for sessions on your chargers, and pay the other operator (and bill your card holder) for sessions on theirs.

1. Open **Roaming**. On first use click **Set roaming identity**: the **Country code** (ID), a three-character **Party ID** and the **Business name**. Choose the party ID once: partners cannot follow a change.
2. The identity card then shows your **Versions URL for partners** with a **Copy** button; give it to a partner along with the registration token.
3. **Partners** tab: **Add partner** (eMSP, CPO or roaming hub). Each partner shows status, last success, sessions and queued or failed messages; open one to see **Messages**, **Sent to partner** and **Driver tokens**.
4. **Shared sites** tab: click **Share** on a site to publish its chargers, plugs, live availability and tariffs to every connected partner.
5. **Roaming sessions**, **Cards abroad** and **Partner network** show the sessions and partner chargers.

Roaming identity

How partners and their drivers see this network. Partners cannot follow a change of party ID, so choose it once.

Country code

ID

ISO 3166 alpha-2: ID for Indonesia.

Party ID

NCN

Three letters or digits, unique among roaming operators. Shown in every EVSE id (ID*PLS*E...).

Business name

Nusantara Charge Nusantara

Website (optional)

https://...

Cancel

Save

Figure 70. Setting the roaming identity.

Roaming

Let drivers of other networks charge on your chargers, and your fleet cards charge on theirs (OCPI 2.2.1). Every session produces a charge record: you bill their provider for sessions here, and pay the other operator (and bill your card holder) for sessions there.

Nusantara Charge Nusantara ID*NCN

Edit

Versions URL for partners: http://127.0.0.1:9386/ocpi/versions

Copy

Partners

Shared sites

Roaming sessions

Cards abroad

Partner network

0 of 2 sites shared. A shared site's chargers, plugs, live availability and tariffs are sent to every connected partner; changes go out within a minute. Private sites cannot be shared.

SITE	EVSES	TARIFFS	STATUS	
Summarecon Mall Bekasi — P2 Basement Bekasi	3	1	not shared	Share
Ruko Grand Galaxy — Bekasi Selatan Bekasi	0	0	not shared	Share

Figure 71. Shared sites: none shared yet.

12. Users & Roles

Users & Roles has three tabs: **Users**, **Role permissions** (the matrix of section 1.4) and **API keys** for machine integrations. Every change is recorded in the audit log.

12.1 Invite a user and scope a Site Host to one site

1. Open **Users & Roles** and click **Invite user**.
2. Enter the **Full name**, **Email** (used to sign in; must be unique) and optional **Phone**.
3. Under **Role**, select **Site Host / Landlord**. The list **Sites this person hosts** appears.
4. Tick only the site this person hosts (for example *Ruko Grand Galaxy — Bekasi Selatan*). A Site Host must have at least one site.
5. Click **Create user**. The **Temporary password** dialog shows the one-time password **once**: click **Copy**, send it through a secure channel (not in the same e-mail as the address), then click **I have stored it safely**.
6. The user signs in and must choose their own password (section 1.2).

Invite user

The user receives a one-time password and must choose their own at first sign-in.

Rina Wulandari rina.wulandari@grandgalaxy.exam +62 812 7788 4410

Used to sign in. Must be unique.

Role

- ☐ **Super Administrator**
Everything in this organisation, including user management.
- ☐ **CPO Operations Manager**
Runs the network: fleet, remote commands, hardware, tariffs and load management. Can view users.
- ☒ **Site Host / Landlord** • site-scoped
Sees only the sites they host: live status, revenue and power. No commands.
- ☐ **Field Technician**
Monitors the fleet, runs diagnostic commands and test sessions, edits charger configuration.
- ☐ **Financial Auditor**
Read-only fleet visibility with full session, invoice and audit export.
- ☐ **Site Owner (portal)** • owner portal
A business that owns sites you operate: sees only its own chargers, sessions, availability and monthly statement with its share. Read-only; follows the owner's sites automatically.
- ☐ **Fleet customer (portal)** • fleet portal
Staff of a company you bill for fleet cards: sees only that fleet account's invoices, credit notes, this month's charging and its cards, and can block a lost card.

Sites this person hosts

- ☒ Ruko Grand Galaxy — Bekasi Selatan 01.P050.20.3275.011
- ☐ Summarecon Mall Bekasi — P2 Basement 01.P050.20.3275.010

A Site Host sees only these sites: their chargers, sessions, revenue and power. No commands.

Cancel Create user

Figure 72. Invite user: Site Host scoped to one site.

Temporary password

⚠ **Shown once.** Share this one-time password securely. It works for 72 hours; the user must choose a new one at first sign-in.

One-time password for rina.wulandari@grandgalaxy.example

C4jXQ-T5JU5-SBLU!7 Copy

I have stored it safely

Figure 73. The one-time password, shown once.

For a **Site Owner (portal)** user choose the **Site owner**; for a **Fleet customer (portal)** user choose the **Fleet account**. Those users see only their portal pages.

Users & Roles

Who can operate this network, and what each role may do. Every change here is recorded in the audit log.

Users

Role permissions

API keys

Search

Name, email or phone

Status

All

+ Invite user

USER	PHONE	ROLE	STATUS	LAST SIGN-IN
Ops Team you ops@plugsure.com	—	Super Administrator	● active	18s ago
Rina Wulandari rina.wulandari@grandgalaxy.example	+62 812 7788 4410	Site Host / Landlord Ruko Grand Galaxy — Bekasi Selatan	● active	24m ago

Figure 74. Users: the new Site Host with her site and **must change password** until first sign-in.

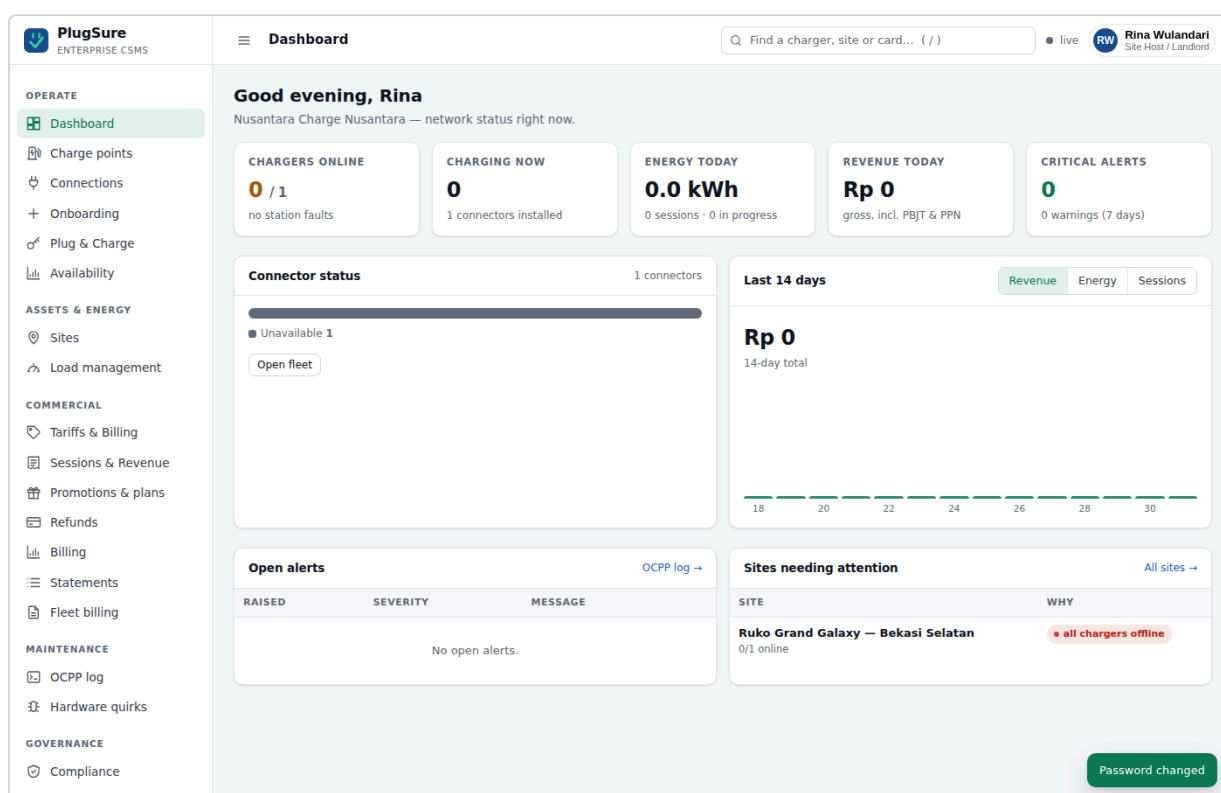


Figure 75. What the Site Host sees after signing in: only her site's charger, status and revenue; no command or hardware buttons.

12.2 Change, disable or reset a user

1. Click the user in the list. The **User — ...** dialog opens.
2. Change the name, phone, **Role** or hosted sites, and click **Save changes**.
3. **Disable user** signs the person out and blocks sign-in (history is kept); **Enable user** reverses it.
4. **Reset password** issues a new one-time password (shown once); the old password stops working immediately.

You cannot change your own role or status; ask another administrator. Tags in the list: **locked** after repeated failed sign-ins, **must change password**, **one-time password expired** (reset again).

Users & Roles

Who can operate this network, and what each role may do. Every change here is recorded in the audit log.

Users Role permissions API keys

The five console roles of the platform specification (Module 10). A user holds exactly one; permissions are enforced by the API on every request, not only hidden in the console.

ROLE	FLEET MONITORING	REMOTE COMMANDS	ADD/EDIT HARDWARE	TARIFFS & BILLING	DLM POWER CEILINGS	USER MANAGEMENT
Super Administrator your role Everything in this organisation, including user management.	Full	Full	Full	Full	Full	Full
CPO Operations Manager Runs the network: fleet, remote commands, hardware, tariffs and load management. Can view users.	Full	Full	Full	Full	Full	Read Only
Site Host / Landlord Sees only the sites they host: live status, revenue and power. No commands.	Site Only	None	None	View Revenue	Read Only	None
Field Technician Monitors the fleet, runs diagnostic commands and test sessions, edits charger configuration.	Full	Full (Test Only)	Edit Config	None	Read Only	None
Financial Auditor Read-only fleet visibility with full session, invoice and audit export.	Read Only	None	None	Full Export	Read Only	None

What each level means

- Full** Holds both the read and write permissions for the area. Every control is available.
- Read Only** Holds only the read permission. Write controls are hidden in the console and the API refuses writes with 403.
- Site Only** Same permissions as a read role, but the grant is scoped to the assigned sites (scope type "site"). Every list, export and API call is filtered to those sites; other sites do not exist for this user.
- View Revenue** session:read, payment:read and invoice:read at the hosted sites — their revenue share — with tariff:read but never tariff:write.
- Full (Test Only)** Holds charge_point:command but not session:write. Diagnostic commands (reset, unlock, availability, trigger) work normally; a remote start is accepted only with a Maintenance Technician or VIP/test card, so a technician can prove a charger works without starting a billable session for a customer.
- Edit Config** Holds charge_point:config: read and change OCPP configuration keys and pull diagnostics. Cannot register, adopt, suspend or decommission hardware (charge_point:write).
- Full Export** session:export on top of read access: bulk CSV export of sessions and invoices, plus the audit log.
- None** No permission for the area. The module is hidden from navigation and the API answers 403.

Which permissions each column checks

- Fleet Monitoring** site:read, charge_point:read — live status, connection log, OCPP log, quirks.
- Remote Commands** charge_point:command — remote start/stop, unlock, reset, availability, trigger message.
- Add/Edit Hardware** charge_point:write (register, adopt, suspend, decommission), charge_point:config (OCPP configuration keys, diagnostics), firmware:write.
- Tariffs & Billing** tariff:read/write, session:read/write, session:export, payment:*, invoice:.*
- DLM Power Ceilings** smartcharging:read to view site ceilings and curtailment; smartcharging:write to change them.
- User Management** user:read to view users; user:write to invite, change roles, disable and reset passwords.

Figure 76. Role permissions tab: the five console roles, what each level means and which permissions each column checks.

12.3 Console branding (v1.5.0)

Your own name, colours and logo in this console instead of PlugSure's, for everyone who signs in to your organisation: your staff, and your site owners and fleet customers in their portals. Open **Governance → Console branding**. Changing it needs a Super Administrator.

1. Enter the **Product name**, which replaces “PlugSure” in the sidebar, on the sign-in page and in the window title. Add a **Tagline** for under the name if you want one.
2. Choose a **Brand colour** and an **Accent colour**. The brand colour is used for the sign-in panel, avatars and the logo tile; the accent for buttons, links and highlights.
3. Click **Use my brand**. The console repaints at once. The swatches show each colour as it is actually used, with its contrast ratio. If a colour is too light or too dark to read, it is adjusted to reach 4.5:1 (WCAG AA) in each theme.
4. Under **Logo**, upload a square PNG of 64 to 2048 pixels (256 or more is best) up to 1 MB. It also becomes the browser-tab icon. Without a logo, your initials are shown on the brand colour.
5. Untick **Show “Powered by PlugSure”** if you do not want the credit under the version in the sidebar.

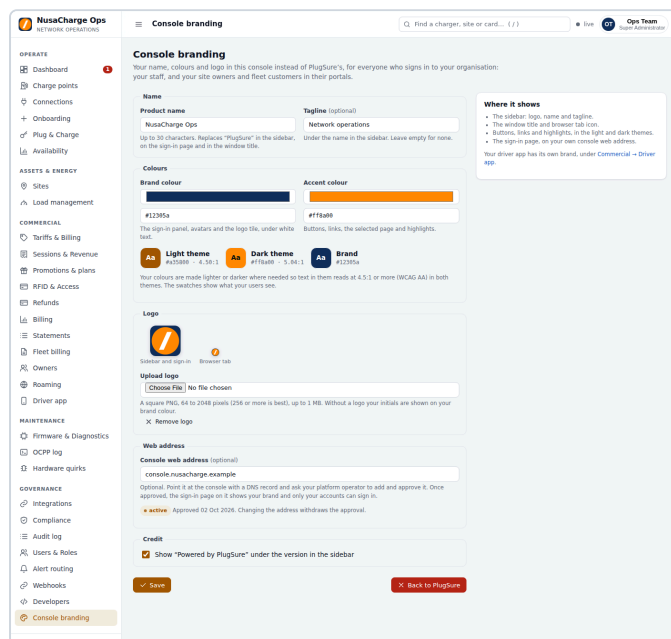


Figure 77. Governance → Console branding.

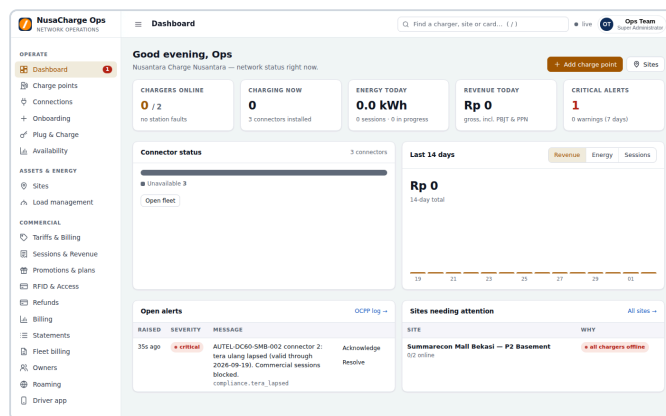


Figure 78. The console with an operator's brand.

Your own console web address (optional), such as console.yourcompany.co.id :

1. Enter it under **Console web address** and save. It shows **waiting for approval**. Until it is approved, the address shows the PlugSure sign-in page and restricts nobody.
2. Point the name at the console with a DNS record, and ask your platform operator to add it to the web server and approve it.
3. Once approved it shows **active**. The sign-in page on it then shows your brand, and only your organisation's accounts can sign in there. Anyone else is refused exactly as if the password were wrong.
4. Changing the address withdraws the approval. **Back to PlugSure** removes the brand, and the address then shows the PlugSure sign-in page again.

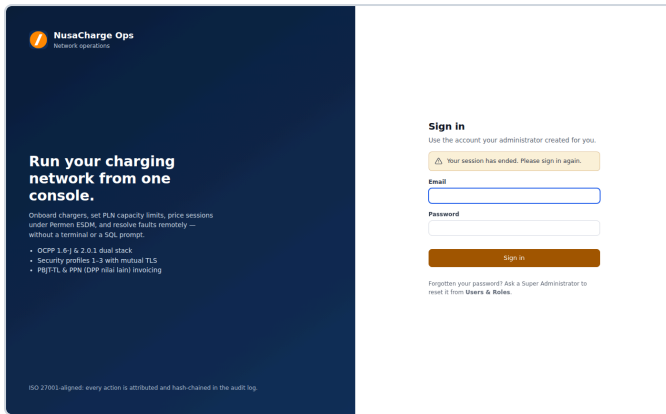


Figure 79. The sign-in page on the operator's approved address.

The driver app has its own brand, under **Commercial → Driver app**. The API reference and printable receipts are not changed by console branding.

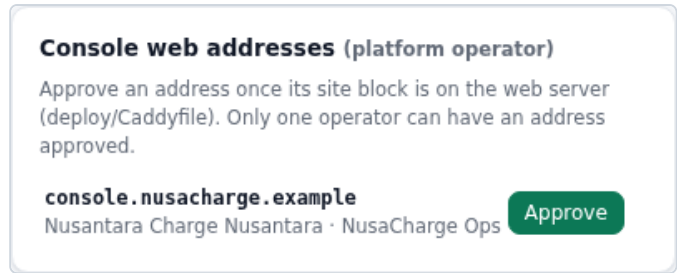


Figure 80. Platform operator only: **Console web addresses**, with **Approve** and **Withdraw**.

13. Audit log and alerts

13.1 Audit log

Every administrative action — sign-ins, remote commands, configuration changes, suspensions, tariff and user changes — is recorded with the user or API key that did it, and hash-chained so that any deletion or edit is detectable. The green banner **hash chain intact** confirms that no entry has been altered, removed or reordered.

1. Open **Audit log** (Governance). The latest 200 entries are shown, newest first.
2. Filter with **Action contains** (e.g. `charge_point.suspended`, `user.`, `tariff`), **Actor** and **Target**.
3. Click ► in **Details** to expand what was changed. **Export CSV** downloads the filtered entries.

Audit log
Every administrative action, attributed to a user or API key and hash-chained so that any deletion or edit is detectable. Showing the latest 200 entries.

Refresh

Export CSV

hash chain intact

 264 entries verified against a head count of 264. No entry has been altered, removed or reordered since it was written.

Action contains

Actor

Target

200 of 200 entries

TIME	ACTOR	ACTION	TARGET	DETAILS
01 Oct 2026, 21:04 18s ago	user 470614c1-3be3-4c47-a239-e3863d19eb15	auth.login	user 470614c1-3be3-4c47-a239-e3863d19eb15	—
01 Oct 2026, 21:04 30s ago	system	ocpp.SetChargingProfile	charge_point AUTEL-DC60-SMB-002	► {"connectorId":1,"csChargingProfiles":{"validTo":"2026-10-01T14:19:33.502Z","stackLevel":5...
01 Oct 2026, 21:04 30s ago	system	ocpp.SetChargingProfile	charge_point AUTEL-AC22-SMB-001	► {"connectorId":0,"csChargingProfiles":{"stackLevel":0,"chargingSchedule":{"startSchedule":...
01 Oct 2026, 21:04 30s ago	system	ocpp.SetChargingProfile	charge_point AUTEL-DC60-SMB-002	► {"connectorId":0,"csChargingProfiles":{"stackLevel":0,"chargingSchedule":{"startSchedule":...
01 Oct 2026, 21:04 45s ago	user 470614c1-3be3-4c47-a239-e3863d19eb15	ocpp.RemoteStopTransaction	charge_point AUTEL-DC60-SMB-002	{"transactionId":1003}
01 Oct 2026, 21:04 55s ago	user 470614c1-3be3-4c47-a239-e3863d19eb15	roaming.identity_set	ocpi_party b3d1a729-ecb2-4825-b0fd-5b556a9a40ea	► {"website":null,"party_id":"NCN","country_code":"ID","business_name":"Nusantara Charge Nu...
01 Oct 2026, 21:04 59s ago	user 470614c1-3be3-4c47-a239-e3863d19eb15	auth.login	user 470614c1-3be3-4c47-a239-e3863d19eb15	—

Figure 81. Audit log: a remote stop, the roaming identity and sign-ins, with system load-management commands in between.

If the banner ever reports a broken hash chain, do not try to fix anything yourself. Export the log, note the time and inform your security officer and the platform operator.

13.2 Alerts

Alerts are raised by the platform, for example: a charger offline longer than the site's threshold (`charge_point.offline`), a faulted connector (`connector.faulted`), tera due soon or lapsed, SLO expiring, a session parked for review, orphaned, stuck or started with a refused card, and a charger certificate expiring. They appear in **Open alerts** on the Dashboard (and the red count on its menu item).

- **Acknowledge** (roles with remote commands): "someone is on it" — stops escalation to the next contact.
- **Resolve** (roles with hardware rights): closes the alert once the cause is fixed. A recurring alert shows "raised N×".

Alert routing (Governance) decides who hears about alerts, by e-mail, WhatsApp and SMS. Tabs: **Channels & contacts** (**Set up** each channel, **Add contact**), **On-call rotas**, **Rules** (minimum severity, sites, channels, escalation to a second person if nobody acknowledges) and **Delivery log**.

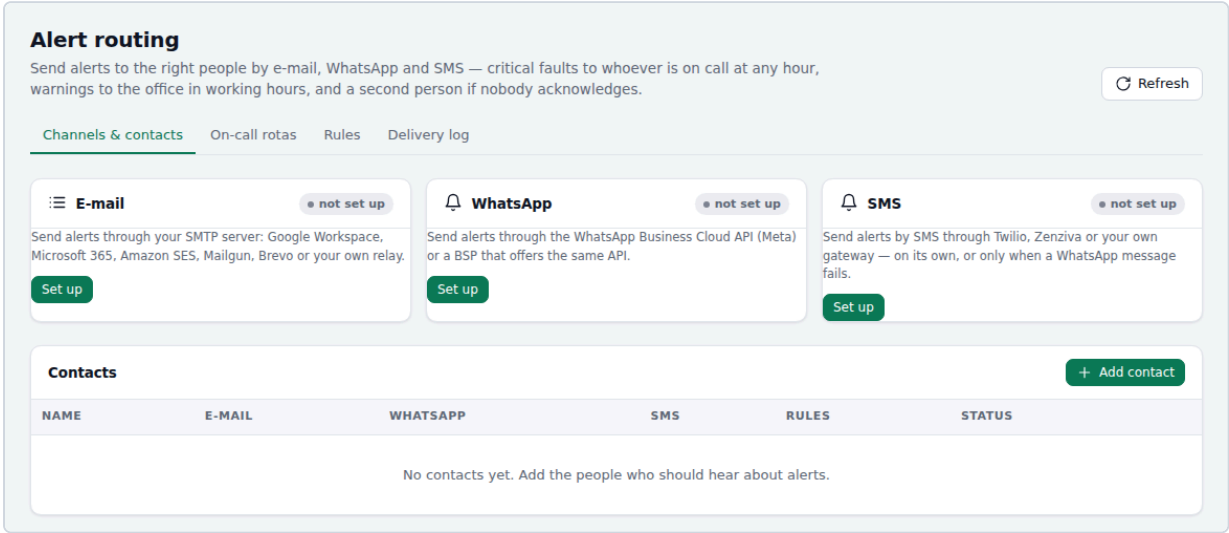


Figure 82. Alert routing before any channel is set up.

14. Troubleshooting for operators

14.1 A charger is offline

1. Open **Charge points** and set **State** to **Offline**. Check **Connectivity**: when it was last seen and for how long it has been offline. A single charger offline points at the charger or its SIM; a whole site offline (**all chargers offline** on the Dashboard) points at power or the site network.
2. Open the charger. On **Remote control** a banner says commands will fail until it reconnects — remote reboot is not possible while offline.
3. Open **Connections** and type the identity in **Identity**. If the charger tries to connect but is refused, the **Outcome** tells you why (table below).
4. If there are no attempts at all, ask the site to power-cycle the charger and check its mobile signal; then check the OCPP URL on the charger matches the one on the charger's Overview.

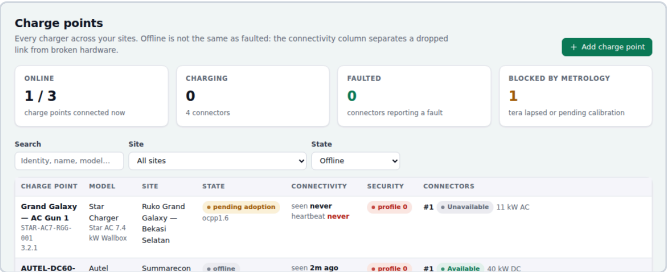


Figure 83. State filter **Offline**: a pending unit that never connected, and a charger that dropped.

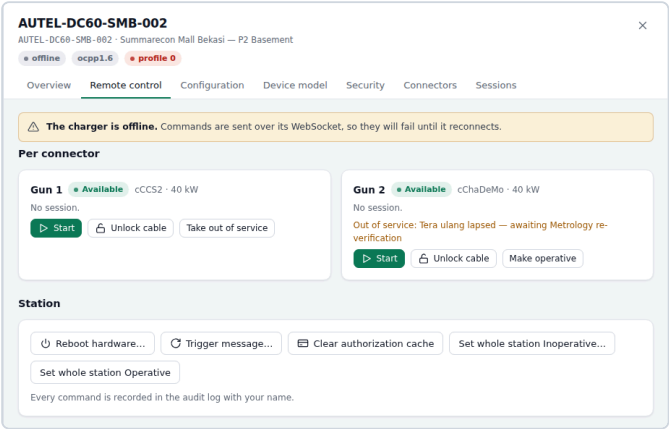


Figure 84. Remote control on an offline charger.

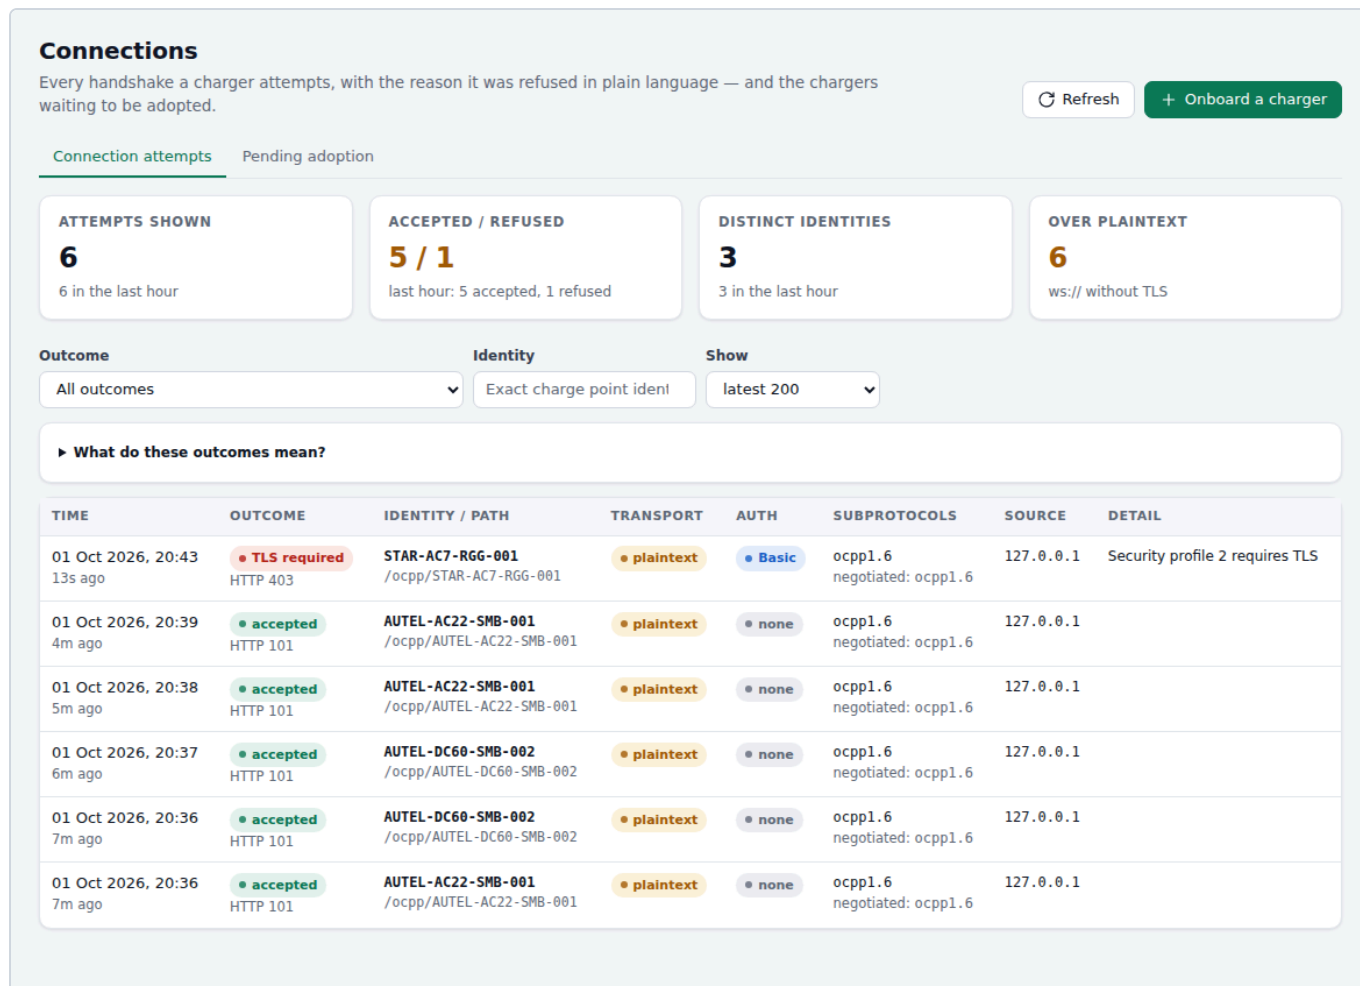


Figure 85. Connections: every handshake attempt; the newest was refused with **TLS required**.

Outcome	Meaning and fix
unknown identity	The identity is not registered: onboard it, or correct the serial/identity on the unit (often a typo or wrong case).
auth failed	Credentials missing or wrong for the required security profile. Re-enter the AuthorizationKey on the charger, or rotate the key on the Security tab and set the new one.
TLS required	The security profile requires <code>wss://</code> but the charger connected over plain <code>ws://</code> . Fix the URL on the charger.
no subprotocol	The charger did not offer an OCPP version the server speaks (e.g. ocpp1.6). Check its OCPP version setting.
no identity / malformed path	The Central System URL is missing the trailing <code>/<identity></code> , or the path or identity has characters that are not allowed.

A **suspended** charger stays connected but cannot start sessions; a **decommissioned** one is refused at the handshake by design. Check the state tag before calling the site.

14.2 A card is refused

- 1. Open **RFID & Access** and search for the card. Check its **Status** (Blocked / Stolen, Expired), expiry date and whether an energy or spending limit has been reached.
- 2. If the card is not found, it is not registered: issue it (section 8.1).
- 3. Open **OCPP log**, choose the charger and type **Authorize** in **Action**. Find the driver's tap and the answer the charger got (Accepted, Blocked, Invalid, Expired).
- 4. If the card is fine but the charger is **suspended**, **pending adoption** or the gun is out of service, every card is refused there: the problem is the station, not the card.
- 5. If the charger is offline it decides from its own list: push the Local Authorization List again once it reconnects (8.3).

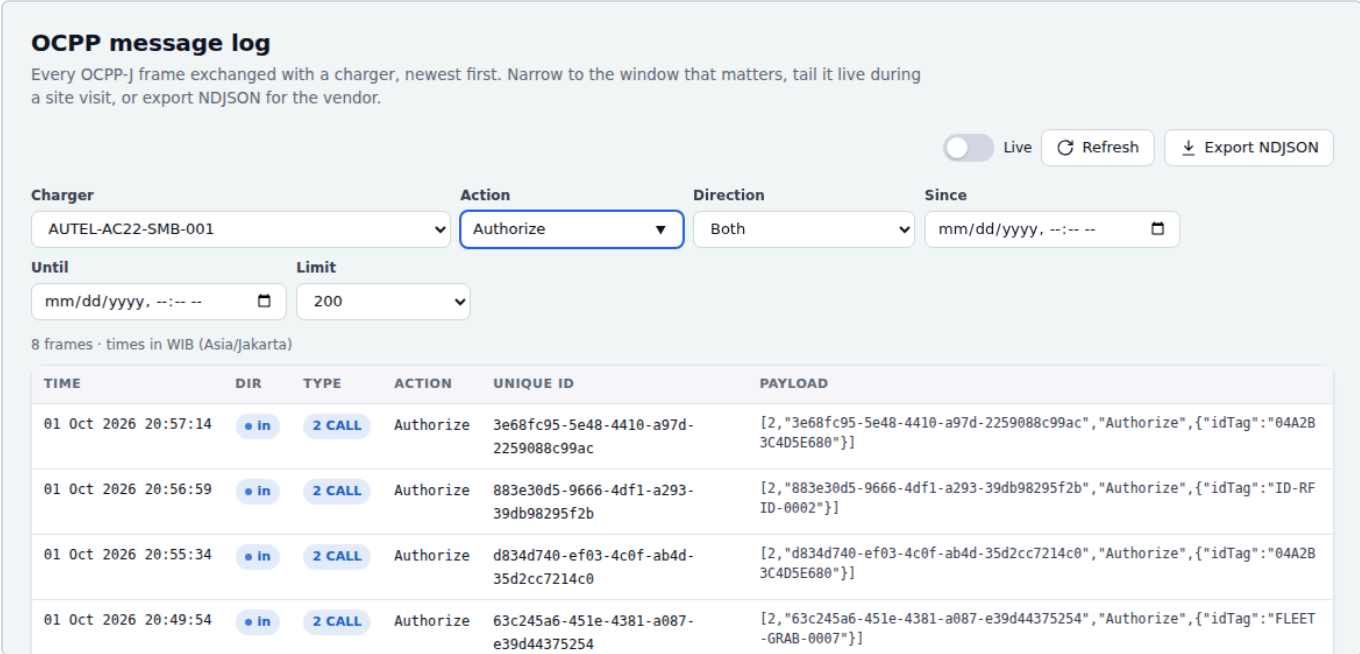


Figure 86. OCPP log filtered to **Authorize**: each tap with its idTag. Expand a frame to see the answer.

14.3 A session is flagged for review

Follow section 7.3: filter **Payment = Needs review**, read the reason, check the charger's clock and meter in the OCPP log, correct the tariff and **Re-rate**, or — only when the data is right — **Force bill as rated....** The driver is not billed while the session is parked. After the cause is fixed, **Resolve** the `session.needs_review` alert on the Dashboard.

14.4 Tera ulang lapsed

Every billing meter needs a valid metrology verification (tera ulang) under Permendag 24/2024. From 60 days before the expiry date the connector shows **tera due soon**, with warning alerts at 60, 30 and 7 days; on expiry the platform marks the connector **tera lapsed**, raises a critical `compliance.tera_lapsed` alert and counts it under **Blocked by metrology**. A remote start on that gun is refused with:

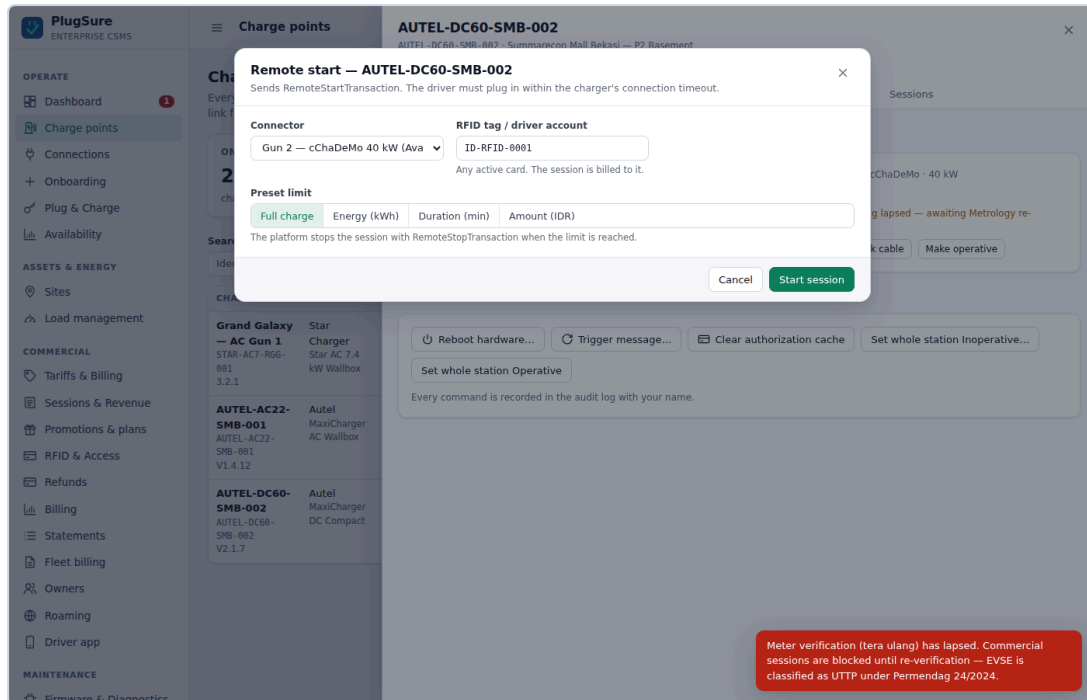


Figure 87. Remote start on gun 2 refused: "Meter verification (tera ulang) has lapsed. Commercial sessions are blocked until re-verification".

1. Take the gun out of service with a clear reason (4.4) so drivers and staff see why it is unavailable. The other guns keep working.
2. Book the re-verification with the metrology office (UPTD Metrologi Legal).
3. After re-verification, open the charger's **Connectors** tab, set **Tera certification** to **Verified**, enter the new **Tera expiry date** and **Last tera date**, and click **Save connectors**.
4. On **Remote control** click **Make operative** on the gun, then **Resolve** the alert.
Compliance (Governance) lists every meter's tera status for audits.

Appendix A. Status tags

Tag	Meaning
online offline	Whether the charger's WebSocket is connected right now.
pending adoption connected · pending	Registered but not yet allowed to transact. Click Activate .
suspended connected · suspended	Suspended by an operator (4.5): connected, no new sessions.
decommissioned	Removed from the fleet; credentials revoked.
faulted	The charger or a connector reports a fault.
Available Charging Preparing Finishing SuspendedEV SuspendedEVSE Faulted Unavailable Reserved	Connector status as reported by the charger (OCPP).
tera verified tera due soon tera lapsed pending calibration tera exempt	Metrology status of the connector's meter. Lapsed and pending block commercial sessions.
profile 2 key set profile 0 no credential rotate key	Security profile and credential state.
Invoiced Paid Payment pending Unbilled Needs review Payment failed Refunded Free	Session payment status.

Appendix B. Known limitations

None are open. The defects found while preparing this manual are fixed:

Release	Fixed
v1.4.2	Scan from live charger listed no cards; the sidebar footer read v1.3.0 instead of the installed release; suspended chargers still offered Start .
v1.4.3	The icons in the user menu (Change password , Theme , Sign out) were drawn far larger than intended.
v1.4.4	A suspended charger could still be paid for, reserved and offered from the queue in the driver app; Resume counted the whole suspension as downtime; Scan from live charger offered roaming partners' cards for registration.

PlugSure CSMS v1.5.0 · Operator Console User Manual · 2 October 2026 · See also the Deployment Guide and the API documentation (</api-docs.html>).