LYNK

OPERATIONS MANUAL

Modular Card Wallet • Model LYNK-01

LYNK Ltd • Auckland, New Zealand • support@lynk.example

LYNK-MAN-01 (EN/FR/ES/DE/ZH)

This seal is your assurance that this product has been inspected and meets LYNK standards for materials, workmanship and fit. Look for this seal when buying LYNK modules and accessories to ensure full compatibility.



Thank you for choosing the LYNK Modular Card Wallet.

IMPORTANT: To protect your safety and ensure correct use, please read the Health and Safety Information and this Operations Manual carefully before first use. Keep this manual for future reference.

NOTE: Modules (key pod, storage pod, coin pouch) are optional and may be sold separately. Contents vary by bundle.

Contents

1 Health and Safety Information **3**

2 Package Contents **4**

3 Components **5**

4 Using the Card Core **6**

5 Key Pod **7**

6 Storage Pod and Coin Pouch **8**

7 Care and Troubleshooting **9**

8 Warranty and Terms of Use **10**

9 Quick Guide – Other Languages **11**

10 Specifications and Disposal **12**

1 Health and Safety Information

IMPORTANT SAFETY INFORMATION – READ THE FOLLOWING WARNINGS BEFORE USING THE PRODUCT. IF THIS PRODUCT IS USED BY A YOUNG PERSON, THIS MANUAL SHOULD BE READ AND EXPLAINED TO THEM BY AN ADULT.

⚠ WARNING – MAGNETS

The storage pod contains strong neodymium (N52) magnets.

- Keep the storage pod at least 10 cm away from pacemakers, implanted defibrillators and other medical implants.
- Magnets can damage mechanical watches, hard disk drives and magnetic stripe cards held directly against them. Cards stored inside the card core are shielded by steel discs and are not affected in normal use.
- If a magnet becomes loose, stop using the pod and contact LYNK Customer Support. If a magnet is swallowed, seek medical help immediately.

⚠ WARNING – SMALL PARTS

Not suitable for children under 36 months. Screws, shims, the wave washer, the key spacer and magnets are small parts and can be swallowed or inhaled.

⚠ CAUTION – PINCH POINTS AND EDGES

- Keep fingers clear of the card slot and the pod rail while the cards eject or a pod is sliding.
- Do not carry the wallet with keys swung out. Fold all keys back into the pod before putting it in a pocket or bag.
- Machined edges are deburred; if a part is damaged and has a sharp edge, stop using it.

⚠ CAUTION – KEYS AND SCREWS

- Use only the T6 driver supplied. Over-tightening can strip the M2 threads (max. 0.2 N·m).
- Do not modify, drill or file any part of the product. This voids the warranty and may make the product unsafe.


⚠ NOTE – CONTACTLESS CARDS

The aluminium body does not block contactless (RFID/NFC) payments. Hold the wallet with the ID window facing the reader. LYNK does not claim RFID-blocking protection.

2 Package Contents

Check that the following items are included. If anything is missing or damaged, contact LYNK Customer Support before using the product.

Qty		Item	Part no.
1	☐	LYNK Card Core	LYNK-CC01
1	☐	Key Pod, pre-assembled (3 shims, 1 wave washer, 2 mm key spacer)	LYNK-KP01
1	☐	Storage Pod with sliding lid	LYNK-SP01
1	☐	Coin Pouch Kit (pouch, 2 rails, 4 rail screws M2 x 4)	LYNK-CP01
1	☐	T6 Torx precision screwdriver	LYNK-TD01
4	☐	Spare key cover screws, M2 x 6 Torx T6	LYNK-SC06
1	☐	Operations Manual (this booklet)	LYNK-MAN-01



T6 Torx screwdriver

4 x spare screw M2 x 6 (T6)

Fig. 2-1 Screwdriver and spare screws supplied

⚠ NOTE – SPARE SCREWS

- The 4 spare screws fit the key cover. Use them if a screw is lost or its Torx recess is damaged.
- Keep the screwdriver and spare screws together in a safe place, out of the reach of small children.
- Contents may vary by bundle. Modules bought separately are packed with their own screws.

Please retain the packaging for storage and in case the product needs to be returned.

3 Components

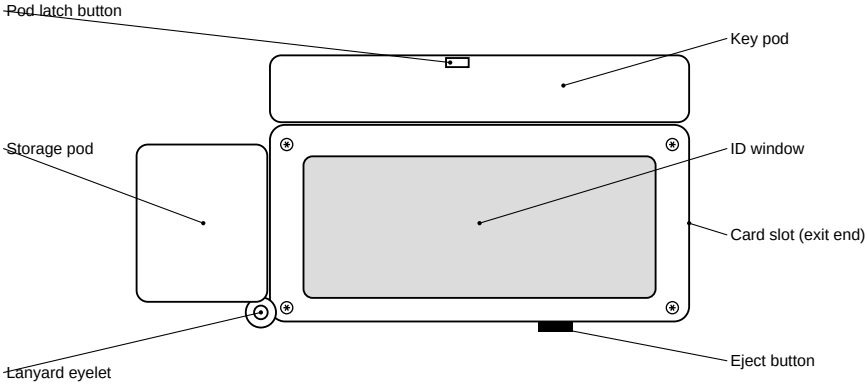


Fig. 3-1 LYNK card core with all modules fitted (top view)

- **LYNK Card Core (LYNK-CC01)**

Holds up to 4 standard cards (ISO/IEC 7810 ID-1) in the eject stack plus 1 ID card behind the window.

- **Key Pod (LYNK-KP01)**

Holds up to 3 keys. Supplied assembled with 3 shims (DIN 988, 4 x 8 x 0.3), 1 wave washer, 1 key spacer (2 mm) and 4 M2 x 6 Torx T6 screws.

- **Storage Pod (LYNK-SP01)**

Magnetic pod with sliding lid for SIM tools, folded notes, a spare key or similar small items.

- **Coin Pouch Kit (LYNK-CP01)**

Clear TPU coin pouch, 2 aluminium rails and 4 M2 x 4 Torx T6 screws.

- **Tools and spares**

T6 Torx screwdriver (LYNK-TD01) and 4 spare key cover screws (LYNK-SC06). See section 2.

4 Using the Card Core

Loading cards

1. Hold the wallet with the ID window facing up and the card slot facing you.
2. Insert up to 4 cards, one at a time, into the card slot until each card stops.
3. Push the stack fully in. The cards are held by the retention pads at the slot.

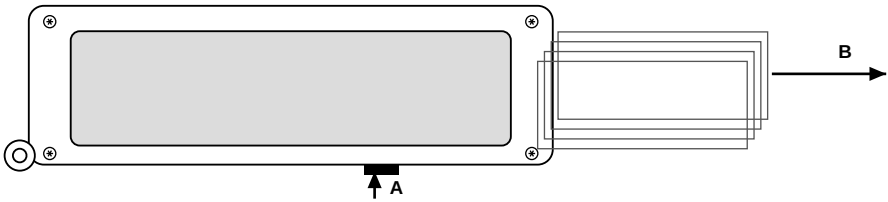


Fig. 4-1 Slide the eject button (A); the cards fan out of the slot (B)

Ejecting cards

1. Slide the eject button on the side of the wallet (A) with your thumb.
2. The cards pop out of the slot in a stepped fan (B) so each card can be gripped.
3. Take the card you need and push the stack back in until it clicks and locks.

ID window

Slide your ID card into the sleeve under the front window from the rear end. It stays visible and does not need to be removed for inspection.

⚠ CAUTION – CARD SLOT

Do not insert more than 4 cards, coins or other objects into the card slot. Do not pull cards while holding the eject button.

5 Key Pod

Attaching and removing the key pod

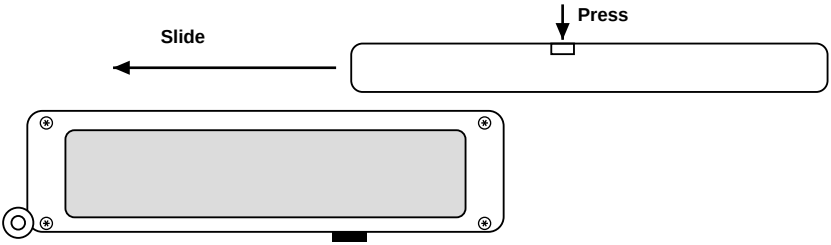
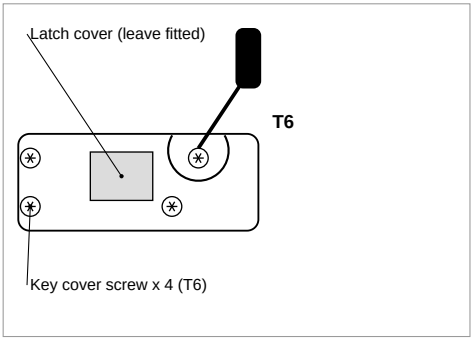


Fig. 5-1 Press the latch button, then slide the pod along the side

1. Align the rail on the key pod with the slot on the long side of the card core, at the card exit end.
2. Slide the pod along the side until it clicks. The pod is now locked.
3. To remove, press and hold the pod latch button and slide the pod off in the same direction.

Fitting or changing keys



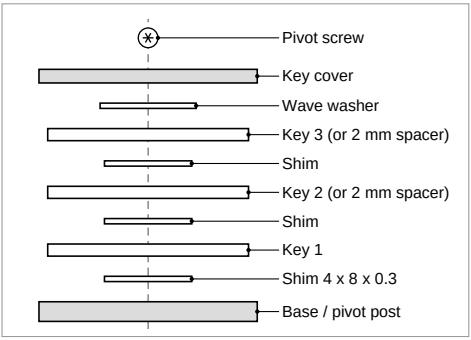



Fig. 5-2 Key cover screws (left) and key stack order (right)

1. Remove the key pod from the card core.
2. Using the T6 driver, turn the 4 key cover screws anticlockwise and remove them. Lift off the key cover. Do not remove the small latch cover.
3. Remove the old keys. Keep the shims and wave washer.
4. Build the stack on the pivot post from the bottom, as shown in Fig. 5-2: shim, key, shim, key, shim, key, wave washer. If you fit fewer than 3 keys, use the 2 mm key spacer in place of each missing key.
5. Refit the key cover and turn the screws clockwise until just snug. Do not over-tighten.
6. Check that each key swings out and back smoothly, then slide the pod back onto the card core.

⚠ NOTE – KEY SIZES

- Maximum key length: 80 mm, measured from the centre of the key hole to the tip.
- Maximum key thickness: 2.1 mm. Minimum key hole diameter: 4.2 mm.

6 Storage Pod and Coin Pouch

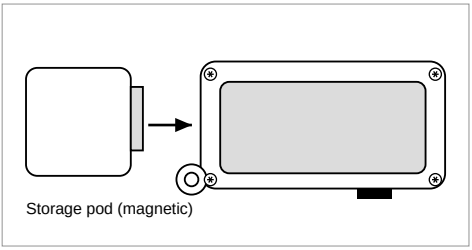

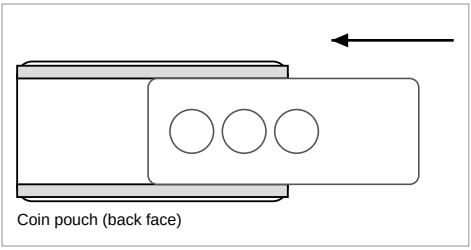


Fig. 6-1 Storage pod (left) and coin pouch (right)

Storage pod

1. Push the pod straight onto the rear end of the card core. The tongue locates it and the magnets pull it home.
2. To open, slide the lid out of the pod until it stops. Slide it back until it clicks to close.
3. To remove, hold the card core and pull the pod straight off.

Coin pouch

1. Fit the 2 rails along the long edges of the back face using the 4 M2 x 4 screws and the T6 driver.
2. Slide the pouch into the rails from the card exit end until it clicks.
3. Push coins in through the slit in the pouch face. To remove coins, push them out through the slit with a finger inserted through the round hole.

Capacity: one layer, approx. 7–8 mixed coins. The wallet is 15.5 mm thick with the coin pouch fitted.

7 Care and Troubleshooting

■ **Cleaning**

- Wipe with a soft, dry cloth. For stubborn marks use a cloth slightly dampened with water.
- Do not use solvents, alcohol, abrasive cleaners or polishes. These can damage the anodised finish and the clear pouch.
- Do not oil or grease the mechanism. Tap the wallet upside down to remove sand or lint from the card slot.

■ **The cards do not eject fully.**

Check that no more than 4 cards are loaded and that the cards are not bent. Remove all cards, clean the slot and reload. If the problem continues, contact LYNK Customer Support.

■ **The cards do not lock when pushed in.**

Push the stack fully in, square to the slot, until you hear a click. Make sure the eject button is not being held.

■ **The key pod does not click into place.**

Check the rail and slot for dirt. Make sure the pod is entered at the card exit end and slid fully along the side.

■ **The keys are loose or too stiff.**

Check the stack order (Fig. 5-2) and that the wave washer is on top. Use the key spacer for each missing key.

■ **The storage pod falls off.**

Remove any debris from the rear face and the tongue. Do not stick labels over the steel discs.

If the product still does not work correctly, do not attempt to repair it yourself. Contact LYNK Customer Support.

8 Warranty and Terms of Use

Limited warranty

LYNK Ltd (“LYNK”) warrants to the original purchaser that this product will be free from defects in materials and workmanship for 24 months from the date of purchase. If a defect covered by this warranty occurs during the warranty period, LYNK will repair or replace the defective part or product free of charge.

This warranty does not apply if the product:

- has been used with parts, keys or accessories that do not meet the specifications in this manual;
- has been modified, tampered with, disassembled beyond the key cover, or repaired by anyone other than LYNK;
- has been damaged by accident, misuse, excessive force, heat, chemicals, or normal wear such as scratches on the finish;
- has had its serial number or seal removed or altered.

Consumer law

Our products come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993 (New Zealand) and the Australian Consumer Law. This warranty is in addition to, and does not limit, your rights under those laws.

Terms of use

This product is intended for personal carrying of cards, keys, coins and small items only. LYNK is not responsible for the loss of, or damage to, cards, keys, coins or other items carried in the product, or for any loss arising from the use of contactless cards. To the extent permitted by law, LYNK’s liability is limited to the repair or replacement of the product.

How to make a claim

Contact LYNK Customer Support with your proof of purchase and a description of the fault. Do not return the product without first obtaining a returns authorisation number.

9 Quick Guide – Other Languages

Français

Glissez le bouton latéral pour éjecter les cartes (4 max.). Pour changer les clés : retirez le module clés, dévissez les 4 vis T6 du couvercle, empilez rondelle, clé, rondelle, clé, rondelle, clé et rondelle ondulée, puis revissez sans forcer. Contient des aimants puissants : tenir à 10 cm des stimulateurs cardiaques. Petites pièces : ne convient pas aux enfants de moins de 3 ans.

Español

Deslice el botón lateral para expulsar las tarjetas (máx. 4). Para cambiar las llaves: retire el módulo de llaves, desenrosque los 4 tornillos T6 de la tapa, apile arandela, llave, arandela, llave, arandela, llave y arandela ondulada, y vuelva a apretar sin forzar. Contiene imanes potentes: manténgalo a 10 cm de marcapasos. Piezas pequeñas: no apto para menores de 3 años.

Deutsch

Schieben Sie die seitliche Taste, um die Karten auszuwerfen (max. 4). Schlüssel wechseln: Schlüsselmodul abnehmen, die 4 T6-Schrauben des Deckels lösen, Scheibe, Schlüssel, Scheibe, Schlüssel, Scheibe, Schlüssel und Wellscheibe stapeln und handfest anziehen. Enthält starke Magnete: 10 cm Abstand zu Herzschrittmachern halten. Kleinteile: nicht für Kinder unter 3 Jahren geeignet.

中文

推动侧面按钮即可弹出卡片（最多 4 张）。
更换钥匙：取下钥匙模块，用 T6 螺丝刀拧下盖板上的 4 颗螺丝，
按“垫片、钥匙、垫片、钥匙、垫片、钥匙、波形垫圈”的顺序安装，然后拧紧螺丝，请勿过度用力。
内含强磁铁：请与心脏起搏器保持 10 厘米以上距离。含小零件：不适合 3 岁以下儿童。

10 Specifications and Disposal

Model	LYNK-01 Modular Card Wallet
Card capacity	4 cards (eject stack) + 1 ID card (window)
Dimensions (card core)	96 x 68 x 11 mm
Thickness with coin pouch	15.5 mm
Materials	Anodised aluminium 6061-T6 / 7075-T6, acetal, stainless steel, TPU
Key pod	Up to 3 keys, max. 80 mm, max. 2.1 mm thick, hole min. 4.2 mm
Fasteners	M2 Torx T6, stainless steel A2
Magnets (storage pod)	Neodymium N52, nickel plated

■ Disposal of this product at the end of its life



Do not dispose of this product in general household waste where recycling is available. The aluminium body and pods are fully recyclable. Remove the magnets and the TPU pouch and dispose of them according to your local council regulations. LYNK will accept returned products for recycling free of charge.

Notes

LYNK Ltd

Auckland 1010, New Zealand

PLEASE RETAIN THE PACKAGING.

LYNK-01 conforms to:

– REACH Regulation (EC) No 1907/2006 – restricted substances

– Consumer Guarantees Act 1993 (NZ) and Fair Trading Act 1986 (NZ)

– ISO/IEC 7810 ID-1 card format compatibility

– Product Safety Policy Statement: small parts and magnets labelling

THIS PRODUCT CONTAINS SMALL PARTS AND MAGNETS. NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS. KEEP AWAY FROM PACEMAKERS AND MEDICAL IMPLANTS.

DECLARATION OF CONFORMITY

LYNK Ltd hereby declares that the LYNK-01 Modular Card Wallet is in compliance with the essential requirements of the regulations listed above. The declaration is available on request.

Design registrations and patents pending.

LYNK, the LYNK logo and the LYNK seal are trademarks of LYNK Ltd. All other trademarks are the property of their respective owners. © 2026 LYNK Ltd. All rights reserved.

Sample manual prepared for the ENGGEN 731 group project (University of Auckland). Not a commercial product.