
OPERATING INSTRUCTIONS AND SPECIFICATIONS NI 9219

4-Channel, 24-Bit, Universal Analog Input Module

Français	Deutsch	日本語	한국어	简体中文	
ni.com/manuals					



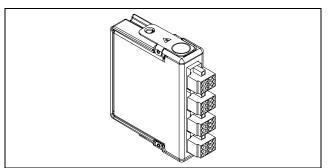

This document describes how to use the National Instruments 9219 and includes specifications and terminal assignments for the module. Visit ni.com/info and enter rdsoftwareversion to determine which software you need for the modules you are using. For information about installing, configuring, and programming the system, refer to the system documentation. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.



Note The safety guidelines and specifications in this document are specific to the NI 9219. The other components in the system might not meet the same safety ratings and specifications. Refer to the documentation for each component in the system to determine the safety ratings and specifications for the entire system. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Safety Guidelines

Operate the NI 9219 only as described in these operating instructions.



Hot Surface This icon denotes that the component may be hot. Touching this component may result in bodily injury.

Safety Guidelines for Hazardous Voltages

If hazardous voltages are connected to the module, take the following precautions. A hazardous voltage is a voltage greater than 42.4 $V_{\rm pk}$ or 60 VDC to earth ground.



Caution Ensure that hazardous voltage wiring is performed only by qualified personnel adhering to local electrical standards.



Caution Do *not* mix hazardous voltage circuits and human-accessible circuits on the same module.



Caution Make sure that devices and circuits connected to the module are properly insulated from human contact.



Caution When module terminals are hazardous voltage LIVE (>42.4 $V_{\rm pk}/60$ VDC), you must ensure that devices and circuits connected to the module are properly insulated from human contact. You must use the NI 9972 connector backshell kit to ensure that the terminals are not accessible.

Figure 1 shows the NI 9972 connector backshell.

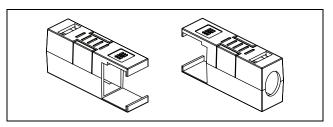


Figure 1. NI 9972 Connector Backshell

Safety Guidelines for Hazardous Locations

The NI 9219 is suitable for use in Class I, Division 2, Groups A, B, C, D, T4 hazardous locations; Class I, Zone 2, AEx nA IIC T4, and Ex nA IIC T4 hazardous locations; and nonhazardous locations only. Follow these guidelines if you are installing the NI 9219 in a

potentially explosive environment. Not following these guidelines may result in serious injury or death.



Caution Do *not* disconnect I/O-side wires or connectors unless power has been switched off or the area is known to be nonhazardous.



Caution Do *not* remove modules unless power has been switched off or the area is known to be nonhazardous.



Caution Substitution of components may impair suitability for Class I, Division 2.



Caution For Zone 2 applications, install the system in an enclosure rated to at least IP 54 as defined by IEC 60529 and EN 60529.

Special Conditions for Hazardous Locations Use in Europe

This equipment has been evaluated as Ex nA IIC T4 equipment under DEMKO Certificate No. 07 ATEX 0626664X. Each module is marked $\langle E_x \rangle$ II 3G and is suitable for use in Zone 2 hazardous locations, in ambient temperatures of -40 °C \leq Ta \leq 70 °C. If you are using the NI 9219 in Gas Group IIC hazardous locations, you must use the device in an NI chassis that has been evaluated as

Ex nC IIC T4, EEx nC IIC T4, Ex nA IIC T4, or Ex nL IIC T4 equipment.

Special Conditions for Marine Applications

Some modules are Lloyd's Register (LR) Type Approved for marine applications. To verify Lloyd's Register certification, visit ni.com/certification and search for the LR certificate, or look for the Lloyd's Register mark on the module.



Caution To meet radio frequency emission requirements for marine applications, use shielded cables and install the system in a metal enclosure. Suppression ferrites must be installed on power supply inputs near power entries to modules and controllers. Power supply and module cables must be separated on opposite sides of the enclosure and must enter and exit through opposing enclosure walls.

NI 9219 Terminal Assignments

The NI 9219 has four 6-terminal spring-terminal connectors that provide connections for four analog input channels.

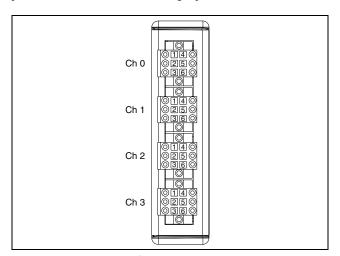


Figure 2. NI 9219 Channel and Terminal Assignments

Table 1. NI 9219 Signal Names

Terminal	Signal Name	Signal Description
1	T+	TEDS Data
2	T-	TEDS COM
3	EX+/HI*	Positive excitation or input signal
4	НІ	Positive input signal
5	EX-/LO*	Negative excitation or input signal
6	LO	Negative input signal

^{*} Depending on the mode, terminals 3 and 5 are either the excitation signals or the input signals.

Table 2. NI 9219 Terminal Assignments by Mode

	Terminal					
Mode	1	2	3	4	5	6
Voltage	T+	Т-	_	HI	LO	_
Current	T+	Т-	HI	_	LO	_
4-Wire Resistance	T+	Т-	EX+	HI	EX-	LO
2-Wire Resistance	T+	Т-	HI	_	LO	_
Thermocouple	T+	Т-	_	HI	LO	_
4-Wire RTD	T+	Т-	EX+	HI	EX-	LO
3-Wire RTD	T+	Т-	EX+	_	EX-	LO
Quarter-Bridge	T+	Т-	HI	_	LO	_
Half-Bridge	T+	Т-	EX+	HI	EX-	_
Full-Bridge	T+	Т-	EX+	HI	EX-	LO
Digital In	T+	Т-	_	HI	LO	_
Open Contact	T+	Т-	HI	_	LO	_

Connecting the NI 9219

Connect the positive signal of the signal source to the positive input signal terminal (HI) and the negative signal of the signal source to the negative input signal terminal (LO). Use the excitation terminals if the sensor requires a separate excitation connection. Refer to the *NI 9219 Circuitry* section for information about connections in each mode.

Connecting Wires to the Spring-Terminal Connectors

Use a flathead screwdriver with a blade smaller than 2.3×1.0 mm $(0.09 \times 0.04 \text{ in.})$ to connect wires to the detachable spring-terminal connectors. Insert the screwdriver into a spring clamp activation slot and press a wire into the corresponding connector terminal, then remove the screwdriver to clamp the wire into the terminal. Refer to the *Specifications* section for more information about spring-terminal wiring. Refer to Figure 3 for an illustration of connecting wires to the NI 9219.

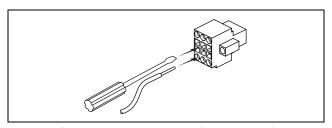


Figure 3. Connecting Wires to the NI 9219 Spring-Terminal Connectors

Connecting TEDS Channels

The NI 9219 supports only Class II TEDS sensors. Connect the two TEDS lines to TEDS Data (T+) and TEDS COM (T-) and ensure that neither T+ nor T- is tied in common to any of the signal inputs (terminals 3 through 6) on the NI 9219. Visit $\[ni.com/info \]$ and enter the info code rdteds for information about TEDS sensors.

Connecting Signal Sources to the NI 9219

You can connect ground-referenced or floating signal sources to the NI 9219. If you make a floating connection between the signal source and the NI 9219, make sure the voltages on the positive and negative connections are within the channel-to-earth working voltage range to ensure proper operation of the NI 9219. Refer to the *Specifications* section for more information about operating voltages and overvoltage protection.



Note For best signal quality, National Instruments recommends using shielded cables and twisted pair wiring whenever possible.

Figures 4 and 5 illustrate connecting grounded and floating signal sources to the NI 9219 in Voltage mode.

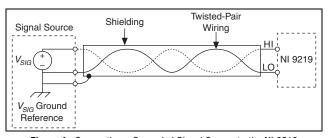


Figure 4. Connecting a Grounded Signal Source to the NI 9219

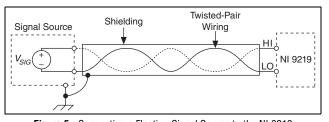


Figure 5. Connecting a Floating Signal Source to the NI 9219

NI 9219 Circuitry

The NI 9219 is channel-to-channel isolated. Four 24-bit analog-to-digital converters (ADCs) simultaneously sample all four analog input channels. The NI 9219 enables an excitation circuit for all input modes that require excitation, and reconfigures the ADC and excitation circuits in each mode to accommodate each type of sensor.




Figure 6. Input Circuitry for One Channel on the NI 9219

Voltage and Current Modes

In Voltage mode, the ADC measures voltage across the HI and LO terminals. In Current mode, the NI 9219 computes current from the voltage that the ADC measures across an internal shunt resistor.




Figure 7. Connections in Voltage, Current, and Digital In Modes

4-Wire Resistance and 4-Wire RTD Modes

In 4-Wire Resistance and 4-Wire RTD modes, the NI 9219 sources a current, which varies based on the resistance of the load, between the EX+ and EX- terminals. The NI 9219 computes measured resistance from the resulting voltage reading. Lead wire resistance does not affect these modes because a negligible amount of current flows across the HI and LO terminals due to the high input impedance of the ADC.

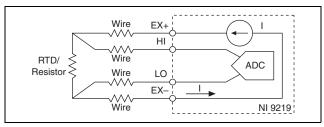


Figure 8. Connections in 4-Wire Resistance and 4-Wire RTD Modes

3-Wire RTD Mode

In 3-Wire RTD mode, the NI 9219 sources a current, which varies based on the resistance of the load, between the EX+ and EX-terminals. This mode compensates for lead wire resistance in hardware if all the lead wires have the same resistance. The NI 9219 applies a gain of 2x to the voltage across the negative lead wire and the ADC uses this voltage as the negative reference to cancel the resistance error across the positive lead wire.

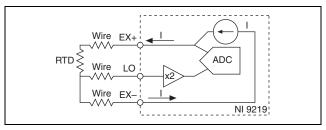


Figure 9. Connections in 3-Wire RTD Mode

2-Wire Resistance and Quarter-Bridge Modes

In 2-Wire Resistance and Quarter-Bridge modes, the NI 9219 sources a current, which varies based on the resistance of the load, between the HI and LO terminals. The NI 9219 computes measured resistance from the resulting voltage reading. 2-Wire Resistance and Quarter-Bridge modes do not compensate for lead wire resistance.





Figure 10. Connections in 2-Wire Resistance and Quarter-Bridge Modes

Half-Bridge and Full-Bridge Modes

In Half-Bridge mode, the HI input is referenced to EX—. In Full-Bridge mode, the ADC reads the HI and LO inputs differentially. Both modes use the internal voltage excitation to set the input range of the ADC and return voltage readings that are proportional to the excitation level. The internal excitation voltage varies based on the resistance of the sensor. Refer to the *Specifications* section for more information about excitation levels.

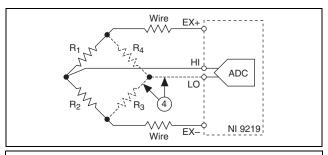

1 The dotted line represents the portion of the circuit that is connected only in Full-Bridge mode.

Figure 11. Connections in Half-Bridge and Full-Bridge Modes

Thermocouple Mode

In Thermocouple mode, the NI 9219 uses the ±125 mV range of the ADC to return a voltage reading. Use shielded cables and twisted pair wiring and ground the shielded cables. Each channel has a built-in thermistor for cold-junction compensation (CJC) calculations. For improved CJC sensor accuracy, operate the NI 9219 in a stable temperature environment and avoid placing heat sources near the module or its connectors. Refer to the *Specifications* section for more information about accuracy. The NI 9219 does not support open thermocouple detection.




Figure 12. Connections in Thermocouple Mode

Digital In Mode

Digital In mode has a 60 V unipolar threshold that you can set in software. Refer to the software help for information about configuring the Digital In threshold. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Digital In mode is supported only in CompactRIO systems. Refer to Figure 7 for an illustration of the connections.

Open Contact Mode

In Open Contact mode, the NI 9219 sources a current between the HI and LO terminals and determines if the two terminals are open or closed based on the measured current through the terminals. When the circuit is open, make sure no more than ±60 V is sourced across the switch. Open Contact mode is supported only in CompactRIO systems.




Figure 13. Connections in Open Contact Mode

NI 9219 Timing Options

The NI 9219 supports four different timing options that are optimized for different types of applications by using different ADC conversion times. High Speed is optimized for high speed at

the expense of noise rejection, Best 60 Hz Rejection is optimized for rejection of 60 Hz noise, Best 50 Hz Rejection is optimized for rejection of 50 Hz noise, and High Resolution is optimized for maximum overall noise rejection and provides rejection of 50 Hz and 60 Hz noise. Refer to the *Specifications* section for more information.

Excitation Protection

The NI 9219 protects the excitation circuit from overcurrent and overvoltage fault conditions. The module automatically disables the circuit in the event of a fault condition. Whenever possible, channels automatically recover after the fault is removed. Refer to the software help for information on how the software displays and handles overcurrent and overvoltage faults. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Sleep Mode

This module supports a low-power sleep mode. Support for sleep mode at the system level depends on the chassis that the module is plugged into. Refer to the chassis manual for information about support for sleep mode. If the chassis supports sleep mode, refer to

the software help for information about enabling sleep mode. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Typically, when a system is in sleep mode, you cannot communicate with the modules. In sleep mode, the system consumes minimal power and may dissipate less heat than it does in normal mode. Refer to the *Specifications* section for more information about power consumption and thermal dissipation.

Specifications

The following specifications are typical for the range -40 to $70\,^{\circ}\mathrm{C}$ unless otherwise noted.

Input Characteristics

•	
Number of channels	4 analog input channels
ADC resolution	24 bits
Type of ADC	Delta-sigma (with analog
	prefiltering)
Sampling mode	Simultaneous
Type of TEDS supported	IEEE 1451.4 TEDS Class II
	(Interface)

Mode input ranges

Mode	Nominal Range(s)	Actual Range(s)
Voltage	±60 V, ±15 V, ±4 V, ±1 V, ±125 mV	±60 V, ±15 V, ±4 V, ±1 V, ±125 mV
Current	±25 mA	±25 mA
4-Wire and 2-Wire Resistance	10 kΩ, 1 kΩ	10.5 kΩ, 1.05 kΩ
Thermocouple	±125 mV	±125 mV
4-Wire and 3-Wire RTD	Pt 1000, Pt 100	$5.05 \text{ k}\Omega, 505 \Omega$
Quarter-Bridge	350Ω , 120Ω	390 Ω, 150 Ω
Half-Bridge	±500 mV/V	±500 mV/V
Full-Bridge	±62.5 mV/V, ±7.8 mV/V	±62.5 mV/V, ±7.8125 mV/V
Digital In	_	0-60 V
Open Contact	_	1.05 kΩ

Conversion time, no channels in TC mode
High speed10 ms for all channels
Best 60 Hz rejection110 ms for all channels
Best 50 Hz rejection130 ms for all channels
High resolution500 ms for all channels
Conversion time, one or more channels in TC mode
High speed20 ms for all channels
Best 60 Hz rejection
Best 50 Hz rejection140 ms for all channels
High resolution510 ms for all channels
Overvoltage protection
Terminals 1 and 2±30 V
Terminals 3 through 6,
across any combination±60 V
Input impedance
Voltage and Digital In modes
$(\pm 60 \text{ V}, \pm 15 \text{ V}, \pm 4 \text{ V})1 \text{ M}\Omega$
Current mode< 40Ω
All other modes>1 G Ω

Accuracy

	Gain Error (Percent of Reading)	Offset Error (ppm of Range)	
Mada Dawar	Typ (25 °C, ±5 °C), Max (–40 to 70 °C)		
Mode, Range	Max (-40	10 /0 C)	
Voltage, ±60 V	±0.3, ±0.4	±20, ±50	
Voltage, ±15 V	±0.3, ±0.4	±60, ±180	
Voltage, ±4 V	±0.3, ±0.4	±240, ±720	
Voltage, ±1 V	±0.1, ±0.18	±15, ±45	
Voltage/Thermocouple, ±125 mV	±0.1, ±0.18	±120, ±360	
Current, ±25 mA	±0.1, ±0.6	±30, ±100	
4-Wire and 2-Wire* Resistance, $10 \text{ k}\Omega$	±0.1, ±0.5	±120, ±320	
4-Wire and 2-Wire* Resistance, 1 k Ω	±0.1, ±0.5	±1200, ±3200	
4-Wire and 3-Wire RTD, Pt 1000	±0.1, ±0.5	±240, ±640	
4-Wire and 3-Wire RTD, Pt 100	±0.1, ±0.5	±2400, ±6400	
Quarter-Bridge, 350 Ω	±0.1, ±0.5	±2400, ±6400	
Quarter-Bridge, 120Ω	±0.1, ±0.5	±2400, ±6400	

	Gain Error (Percent of Reading) Offset Error (ppm of Range)		
	Typ (25 °C, ±5 °C),		
Mode, Range	Max (-40 to 70 °C)		
Half-Bridge, ±500 mV/V	±0.03, ±0.07	±300, ±450	
Full-Bridge, ±62.5 mV/V	±0.03, ±0.08 ±300, ±100		
Full-Bridge, ±7.8 mV/V	±0.03, ±0.08	±2200, ±8000	

 $^{^*}$ 2-Wire Resistance mode accuracy depends on the lead wire resistance. This table assumes 0 Ω of lead wire resistance.

Cold-junction compensation sensor accuracy±1°C typ

Stability

Mode, Range	Gain Drift (ppm of Reading/°C)	Offset Drift (ppm of Range/°C)
Voltage, ±60 V	±20	±0.2
Voltage, ±15 V	±20	±0.8
Voltage, ±4 V	±20	±3.2
Voltage, ±1 V	±10	±0.2
Voltage/Thermocouple, ±125 mV	±10	±1.6
Current, ±25 mA	±15	±0.4
4-Wire and 2-Wire Resistance, $10 \text{ k}\Omega$	±15	±3
4-Wire and 2-Wire Resistance, 1 k Ω	±15	±30
4-Wire and 3-Wire RTD, Pt 1000	±15	±6
4-Wire and 3-Wire RTD, Pt 100	±15	±60
Quarter-Bridge, 350 Ω	±15	±120
Quarter-Bridge, 120 Ω	±15	±240
Half-Bridge, ±500 mV/V	±3	±20

Mode, Range	Gain Drift (ppm of Reading/°C)	Offset Drift (ppm of Range/°C)
Full-Bridge, ±62.5 mV/V	±3	±20
Full-Bridge, ±7.8 mV/V	±3	±20

Input noise in ppm of Range_{rms}

	Conversion Time			
Mode, Range	High speed	Best 60 Hz rejection	Best 50 Hz rejection	High reso- lution
Voltage, ±60 V	7.6	1.3	1.3	0.5
Voltage, ±15 V	10.8	1.9	1.9	0.7
Voltage, ±4 V	10.8	2.7	2.7	1.3
Voltage, ±1 V	7.6	1.3	1.3	0.5
Voltage/Thermocouple, ±125 mV	10.8	1.9	1.9	1.0
Current, ±25 mA	10.8	1.9	1.9	1.0

	Conversion Time			
Mode, Range	High speed	Best 60 Hz rejection	Best 50 Hz rejection	High reso- lution
4-Wire and 2-Wire Resistance, $10 \text{ k}\Omega$	4.1	1.3	0.8	0.3
4-Wire and 2-Wire Resistance, 1 $k\Omega$	7.1	1.8	1.2	0.7
4-Wire and 3-Wire RTD, Pt 1000	7.6	1.7	1.1	0.4
4-Wire and 3-Wire RTD, Pt 100	10.8	1.9	1.9	0.9
Quarter-Bridge, 350 Ω	5.4	1.0	1.0	0.7
Quarter-Bridge, 120 Ω	5.4	1.0	1.0	0.7
Half-Bridge, ±500 mV/V	3.8	0.5	0.5	0.2
Full-Bridge, ±62.5 mV/V	5.4	1.0	1.0	0.8
Full-Bridge, ±7.8 mV/V	30	4.7	4.7	2.3

Input bias current	.<1 nA
INL	.±15 ppm
CMRR $(f_{in} = 60 \text{ Hz})$.>100 dB
NMRR	
Best 60 Hz rejection	.90 dB at 60 Hz
Best 50 Hz rejection	. 80 dB at 50 Hz

Excitation level for Half-Bridge and Full-Bridge modes

Mode	Load Resistance (Ω)	Excitation (V)
Half-Bridge	700	2.5
	240	2.0
Full-Bridge	350	2.7
	120	2.2

High resolution......65 dB at 50 Hz and 60 Hz

Excitation level for Resistance, RTD, and Quarter-Bridge modes

Load Resistance (Ω)	Excitation (mV)
120	50
350	150
1 k	430
10 k	2200

Method



Note Contact NI for Bellcore MTBF specifications at other temperatures or for MIL-HDBK-217F specifications.

Power Requirements

Power consumption from chassis

Physical Characteristics

If you need to clean the module, wipe it with a dry towel.



Note For two-dimensional drawings and three-dimensional models of the C Series module and connectors, visit ni.com/dimensions and search by module number.

Spring-terminal wiring	. 18 to 28 AWG copper
	conductor wire with 7 mm
	(0.28 in.) of insulation
	stripped from the end
Weight	. 156 g (5.5 oz)

Safety

Safety Voltages

Connect only voltages that are within the following limits.

Channel-to-channel

Continuous250 VAC,

dielectric withstand test

Channel-to-earth ground

Continuous250 VAC,

Measurement Category II

Withstand.......2,300 VAC, verified by a 5 s

Zone 2 hazardous locations applications in Europe

Channel-to-channel and

channel-to-earth ground......60 VDC,

Measurement Category I

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as *MAINS* voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.



Caution Do *not* connect to signals or use for measurements within Measurement Categories II, III, or IV.

Measurement Category II is for measurements performed on circuits directly connected to the electrical distribution system. This category refers to local-level electrical distribution, such as that provided by a standard wall outlet, for example, 115 V for U.S. or 230 V for Europe.



Caution Do *not* connect to signals or use for measurements within Measurement Categories III or IV.

Hazardous Locations

U.S. (UL)	Class I, Division 2,
. ,	Groups A, B, C, D, T4;
	Class I, Zone 2,
	AEx nA IIC T4
Canada (C-UL)	Class I, Division 2,
	Groups A, B, C, D, T4;
	Class I, Zone 2,
	Ex nA IIC T4
Europe (DEMKO)	Ex nA IIC T4

Safety Standards

This product meets the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



Note For UL and other safety certifications, refer to the product label or the *Online Product Certification* section.

Electromagnetic Compatibility

This product meets the requirements of the following EMC standards for electrical equipment for measurement, control, and laboratory use:

- EN 61326 (IEC 61326): Class A emissions; Industrial immunity
- EN 55011 (CISPR 11): Group 1, Class A emissions
- AS/NZS CISPR 11: Group 1, Class A emissions
- FCC 47 CFR Part 15B: Class A emissions
- ICES-001: Class A emissions



For the standards applied to assess the EMC of this product, refer to the *Online Product Certification* section.



Note For EMC compliance, operate this device with shielded cabling.

CE Compliance $\subset \in$

This product meets the essential requirements of applicable European Directives as follows:

- 2006/95/EC; Low-Voltage Directive (safety)
- 2004/108/EC; Electromagnetic Compatibility Directive (EMC)

Online Product Certification

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/certification, search by module number or product line, and click the appropriate link in the Certification column.

Shock and Vibration

To meet these specifications, you must panel mount the system.

Operating vibration

Random (IEC 60068-2-64)....... 5 g_{rms}, 10 to 500 Hz Sinusoidal (IEC 60068-2-6)...... 5 g, 10 to 500 Hz

Operating shock

Environmental

National Instruments C Series modules are intended for indoor use only but may be used outdoors if installed in a suitable enclosure. Refer to the manual for the chassis you are using for more information about meeting these specifications.

Operating temperature

(IEC 60068-2-1, IEC 60068-2-2) -40 to 70 °C

Storage temperature

(IEC 60068-2-1, IEC 60068-2-2) -40 to 85 °C

Ingress protection......IP 40

Operating humidity	
(IEC 60068-2-56)	10 to 90% RH,
	noncondensing
Storage humidity	
(IEC 60068-2-56)	5 to 95% RH,
	noncondensing
Maximum altitude	2,000 m
Pollution Degree (IEC 60664)	2

Environmental Management

National Instruments is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the NI and the Environment Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of their life cycle, all products must be sent to a WEEE recycling center. For more information about WEEE recycling centers and National Instruments WEEE initiatives, visit ni.com/ environment/weee.htm.

电子信息产品污染控制管理办法 (中国 RoHS)



中国客户 National Instruments 符合中国电子信息 产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息,请登录 ni.com/environment/rohs_china。 (For information about China RoHS compliance, go to ni.com/ environment/rohs_china.)

Calibration

You can obtain the calibration certificate and information about calibration services for the NI 9219 at ni.com/calibration. Calibration interval 1 year

Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800, Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 358 (0) 9 725 72511, France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737, Italy 39 02 41309277, Japan 0120-527196,

Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466, New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 328 90 10, Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886, Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222, Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the Terms of Use section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help-Patents in your software, the patents.txtfile on your media, or the National Instruments Patent Notice at ni.com/patents.

© 2007–2009 National Instruments Corp. All rights reserved. Printed in Hungary.

374473E-01 Feb09