## C1178

### 12A581

K357
Trailer tow relay, reversing lamp

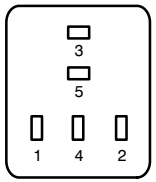


F05139

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | 57 (BK) | Ground |
| 3 | 963 (BK/LG) | Trailer tow connector (15A416), Reversing lamps |
| 4 | – | not used |
| 5 | 37 (YE) | Voltage supplied at all times (overload protected) |

## C1180

### 9D930

B41
Camshaft position sensor (6B288)

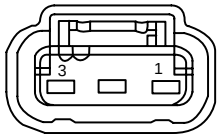


F03267

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 2 | 795 (DG) | Camshaft position sensor (6B288), to, Powertrain Control Module (PCM) (12A650) |
| 3 | 570 (BK/WH) | Ground |

## C1181

### 12B637

Y108
Fuel injector 1
(9F593)

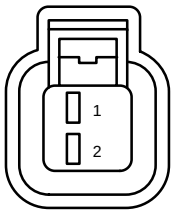


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 555 (TN) | Fuel injector 1, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1182

### 12B637/9D930

Y109
Fuel injector 2
(9F593)

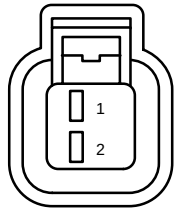


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 556 (WH) | Fuel injector 2, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1183

### 12B637/9D930

Y110
Fuel injector 3
(9F593)

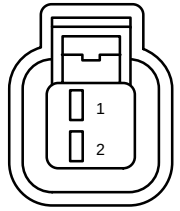


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 557 (BN/YE) | Fuel injector 3, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1184

### 12B637/9D930

Y111
Fuel injector 4
(9F593)

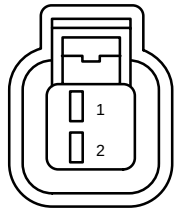


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 558 (BN/LB) | Fuel injector 4, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |