C702

14633

Y17
Speaker, left rear
(18808)

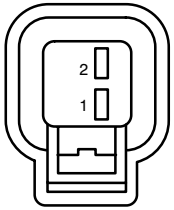

F02069

Pin	Circuit	Circuit function
1	8-MD11 (WH/VT)	Speaker, left rear (18808), Audio signal positive
2	10-MD11 (GY/WH)	Speaker, left rear (18808), Audio signal negative

C703

14633

M116
Power window motor, left rear (23394)

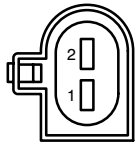

F02065

Pin	Circuit	Circuit function
1	35-AJ13 (VT/BU)	Switched between: Battery voltage, Ground or Open
2	34-AJ13 (BU/RD)	Switched between: Battery voltage, Ground or Open

C704

14633

M64
Door lock actuator, left rear (218A43)

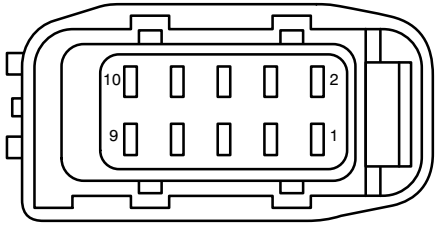

F16030

Pin	Circuit	Circuit function
1	–	not used
2	33-AA15 (YE/GN)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	–	not used
5	–	not used
6	31-AA58D (BK)	Ground
7	–	not used
8	31S-GL12 (BK/OG)	Ground, Switched
9	–	not used
10	32-AA16 (WH/BK)	Switched between: Battery voltage, Ground or Open