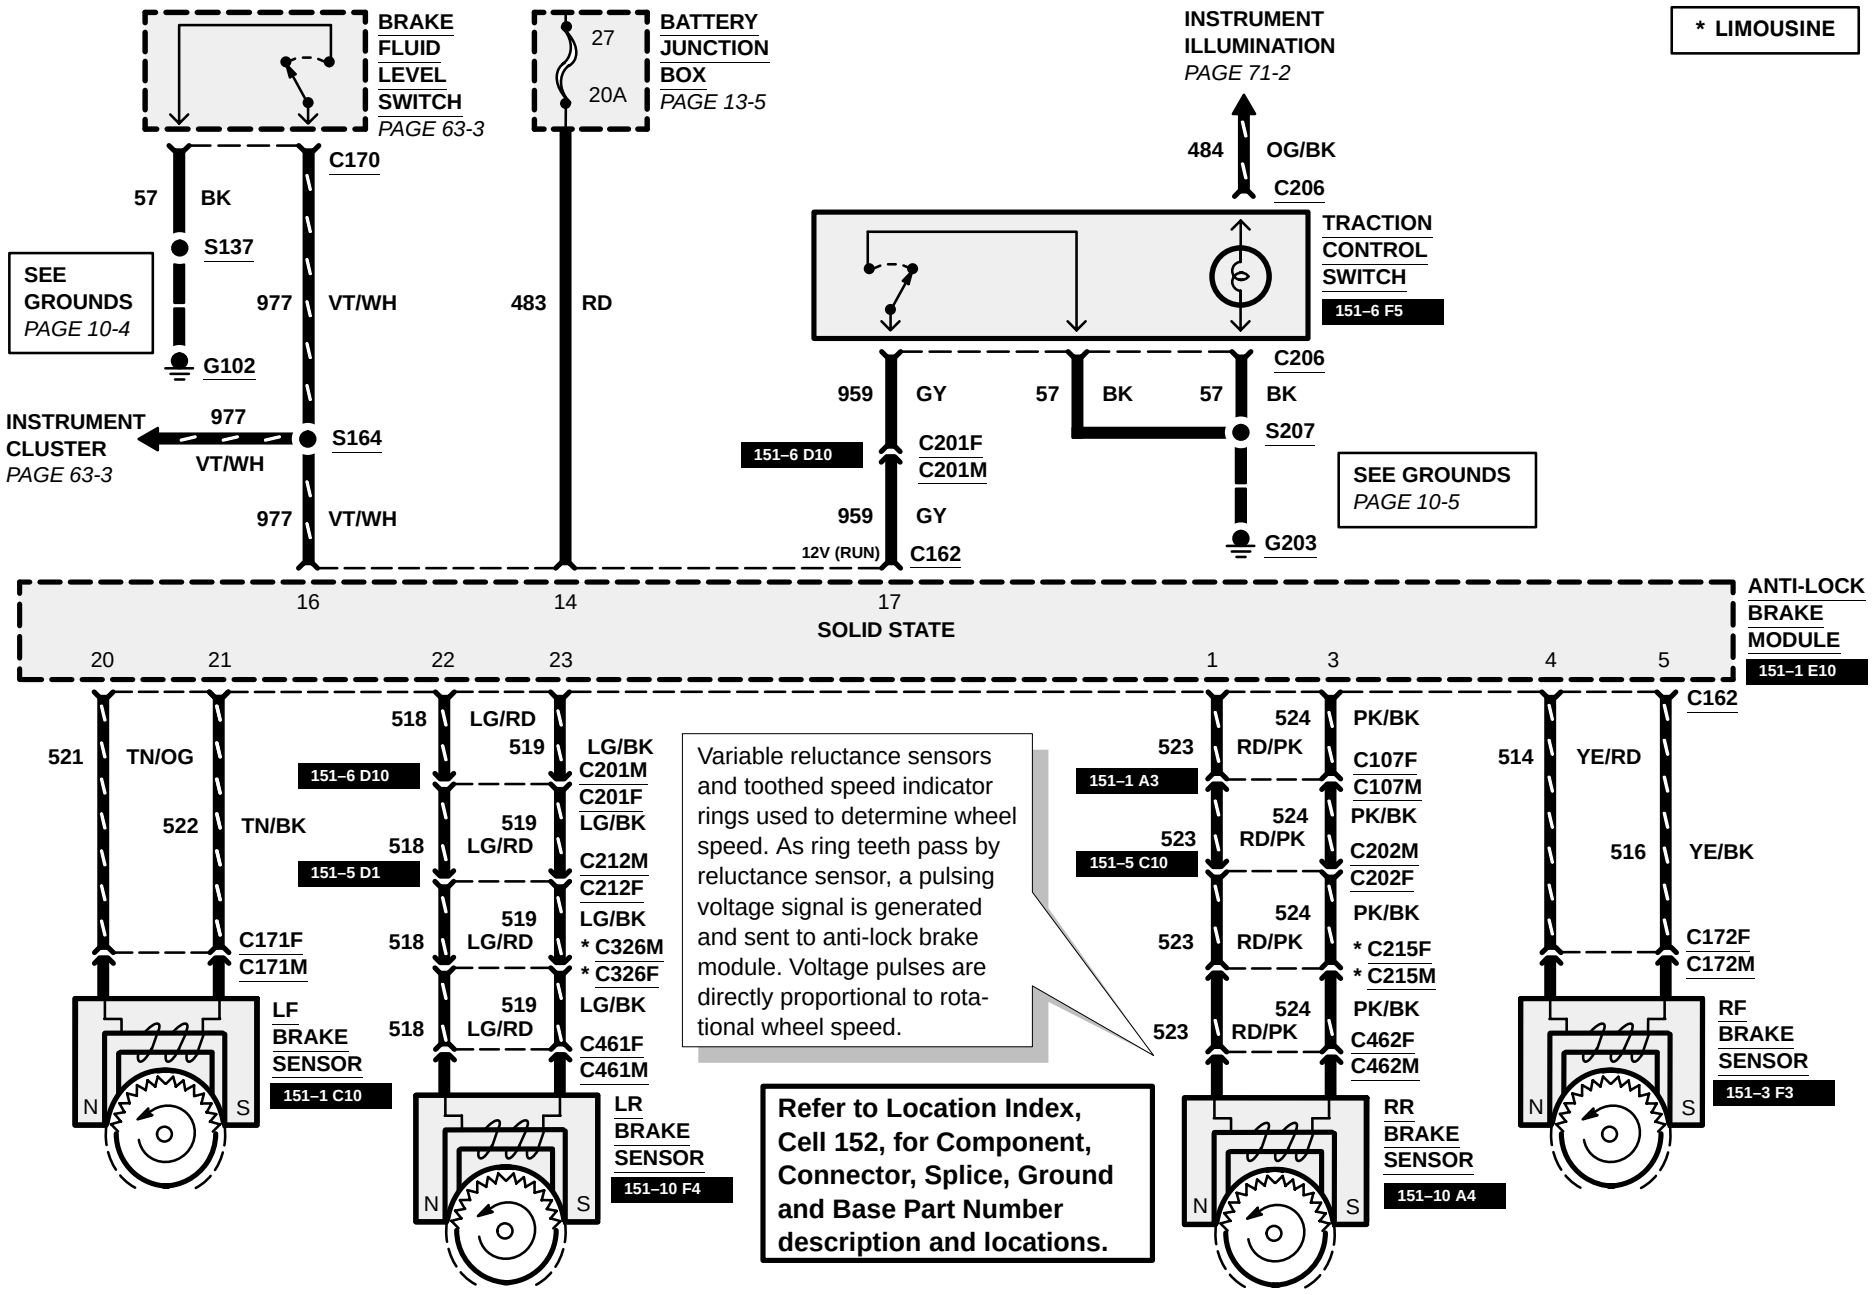
BRAKE FLUID LEVEL SWITCH
PAGE 63-3
BATTERY JUNCTION BOX
PAGE 13-5
27
20A
INSTRUMENT ILLUMINATION
PAGE 71-2
* LIMOUSINE
C170
57 BK
S137
SEE GROUNDS
PAGE 10-4
G102
977 VT/WH
483 RD
484 OG/BK
C206
TRACTION CONTROL SWITCH
151–6 F5
INSTRUMENT CLUSTER
PAGE 63-3
977 VT/WH
S164
959 GY
151–6 D10
C201F
C201M
57 BK
S207
SEE GROUNDS
PAGE 10-5
G203
12V (RUN)
C162
16
14
17
SOLID STATE
ANTI-LOCK BRAKE MODULE
151–1 E10
20
21
22
23
1
3
4
5
521 TN/OG
522 TN/BK
151–5 D1
518 LG/RD
519 LG/BK
C212M
C212F
* C326M
* C326F
C461F
C461M
C171F
C171M
LF BRAKE SENSOR
151–1 C10
LR BRAKE SENSOR
151–10 F4
523
151–1 A3
151–5 C10
524 PK/BK
RD/PK
C107F
C107M
C202M
C202F
* C215F
* C215M
C462F
C462M
RR BRAKE SENSOR
151–10 A4
514 YE/RD
516 YE/BK
C172F
C172M
RF BRAKE SENSOR
151–3 F3
N
S
Variable reluctance sensors and toothed speed indicator rings used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to anti-lock brake module. Voltage pulses are directly proportional to rotational wheel speed.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number description and locations.