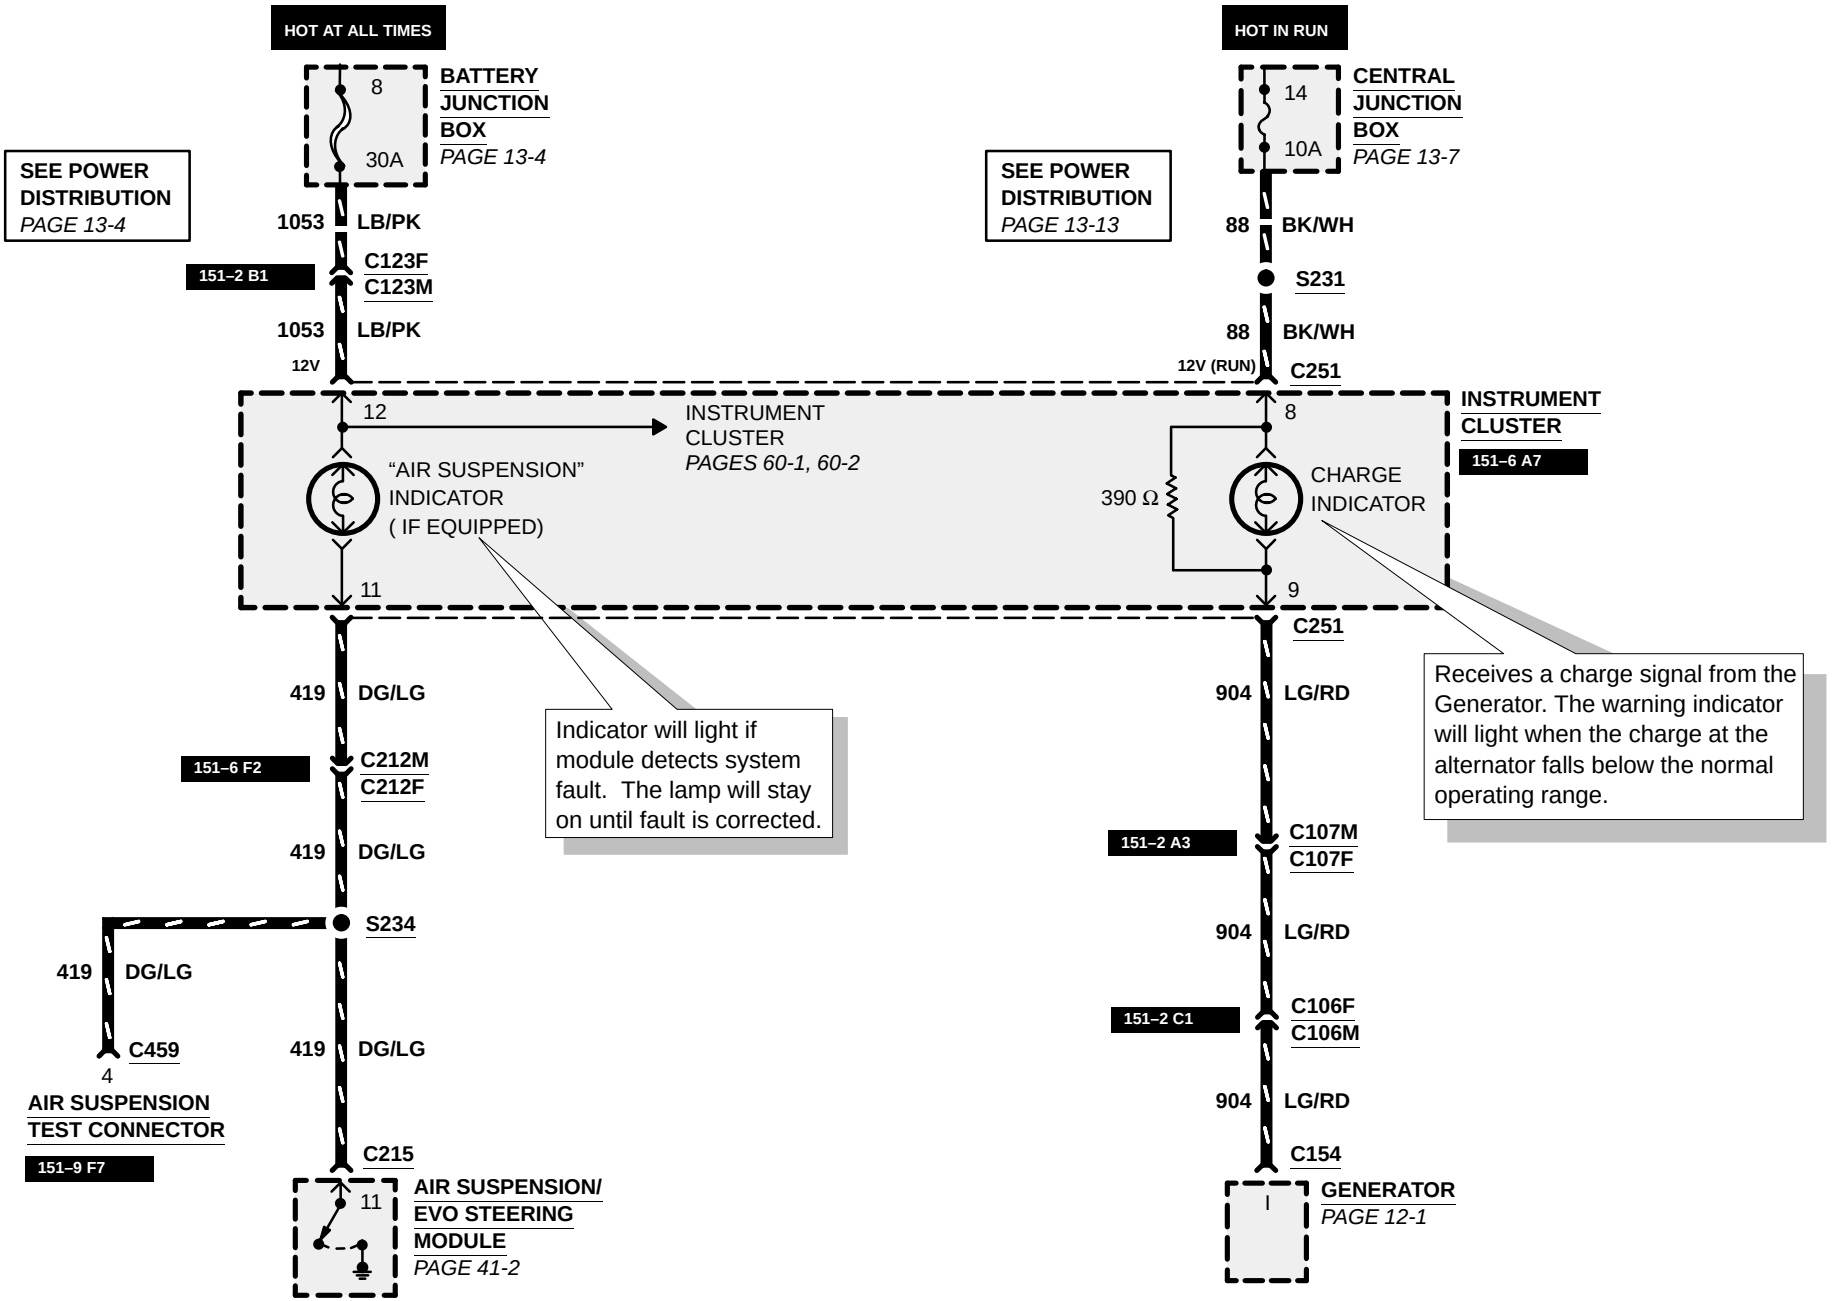
HOT AT ALL TIMES
HOT IN RUN
8
30A
BATTERY JUNCTION BOX
PAGE 13-4
14
10A
CENTRAL JUNCTION BOX
PAGE 13-7
SEE POWER DISTRIBUTION
PAGE 13-4
SEE POWER DISTRIBUTION
PAGE 13-13
1053 LB/PK
151–2 B1
C123F
C123M
1053 LB/PK
12V
88 BK/WH
S231
88 BK/WH
12V (RUN)
C251
12
11
INSTRUMENT CLUSTER
PAGES 60-1, 60-2
8
9
INSTRUMENT CLUSTER
151–6 A7
"AIR SUSPENSION" INDICATOR (IF EQUIPPED)
390 Ω
CHARGE INDICATOR
419 DG/LG
151–6 F2
C212M
C212F
419 DG/LG
S234
419 DG/LG
C459
4
AIR SUSPENSION TEST CONNECTOR
151–9 F7
419 DG/LG
C215
11
AIR SUSPENSION/ EVO STEERING MODULE
PAGE 41-2
C251
904 LG/RD
151–2 A3
C107M
C107F
904 LG/RD
151–2 C1
C106F
C106M
904 LG/RD
C154
I
GENERATOR
PAGE 12-1
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
Receives a charge signal from the Generator. The warning indicator will light when the charge at the alternator falls below the normal operating range.