C825

13A612

N81
Clutch pedal position switch

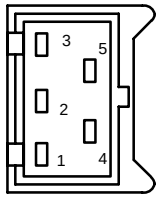

F05012

Pin	Circuit	Circuit function
1	15S-PG17 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	–	not used
3	15S-PG7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
4	8-BB6 (WH)	Sensor signal
5	9-BB6 (BN)	Sensor signal return (reference/ground)

C828

14K733

M74
Two–way washer pump motor

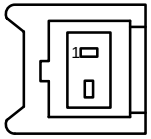

F02014

Pin	Circuit	Circuit function
1	33-KA34 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-KA34 (WH/BK)	Switched between: Battery voltage, Ground or Open

C831 (BU)

14K733

E43
Fog lamp, left front (15200)

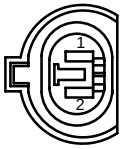

F02037

Pin	Circuit	Circuit function
1	31-LD11 (BK)	Ground
2	29S-LD11 (OG/WH)	Voltage supplied at all times (overload protected), Switched

C832 (BU)

14K733

E42
Fog lamp, right front (15200)

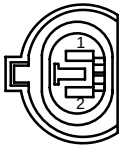

F02037

Pin	Circuit	Circuit function
1	31-LD17 (BK)	Ground
2	29S-LD17 (OG/WH)	Voltage supplied at all times (overload protected), Switched