C520

14631

M220
Exterior rear view mirror, driver side (17682)

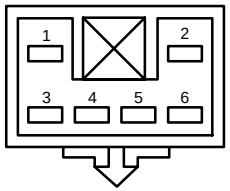

F06233

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	540 (RD)	Right/Left mirror movement
5	542 (YE)	Mirror motor, feed
6	541 (DB)	Up/Down mirror movement

C523

14631

Y28
Speaker, left front (18808)

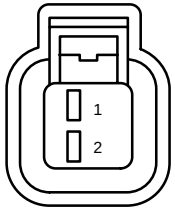

F02069

Pin	Circuit	Circuit function
1	176 (PK/LG)	Tweeter, left front, to, Speaker, left front (18808) +
	804 (OG/LG)	Speaker, left front (18808) +
2	179 (OG/RD)	Tweeter, left front, to, Speaker, left front (18808) –
	813 (LB/WH)	Speaker, left front (18808) –

C524

14631

M80
Power window motor, driver side front (23395)

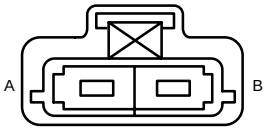

F02311

Pin	Circuit	Circuit function
A	992 (WH/BK)	Master window adjust switch (14529), feed, Up
B	903 (RD)	Window motor, feed, Down

C525

14631

A172
Door lock unit, driver side front (5421813)

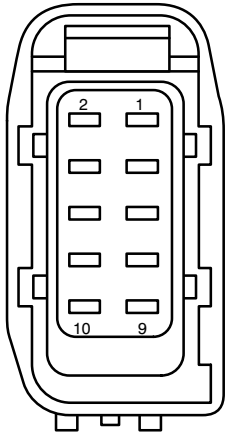

F10089

Pin	Circuit	Circuit function
1	–	not used
2	117 (PK/BK)	Door lock, output
3	–	not used
4	–	not used
5	1317 (DB/LG)	Driver front door lock switch, Door unlock, input
6	57 (BK)	Ground
7	1316 (WH/VT)	Driver front door lock switch, Door lock, input
8	1312 (LG/BK)	Door ajar switch, driver side front (14018)
9	–	not used
10	163 (RD/OG)	Door unlock, output