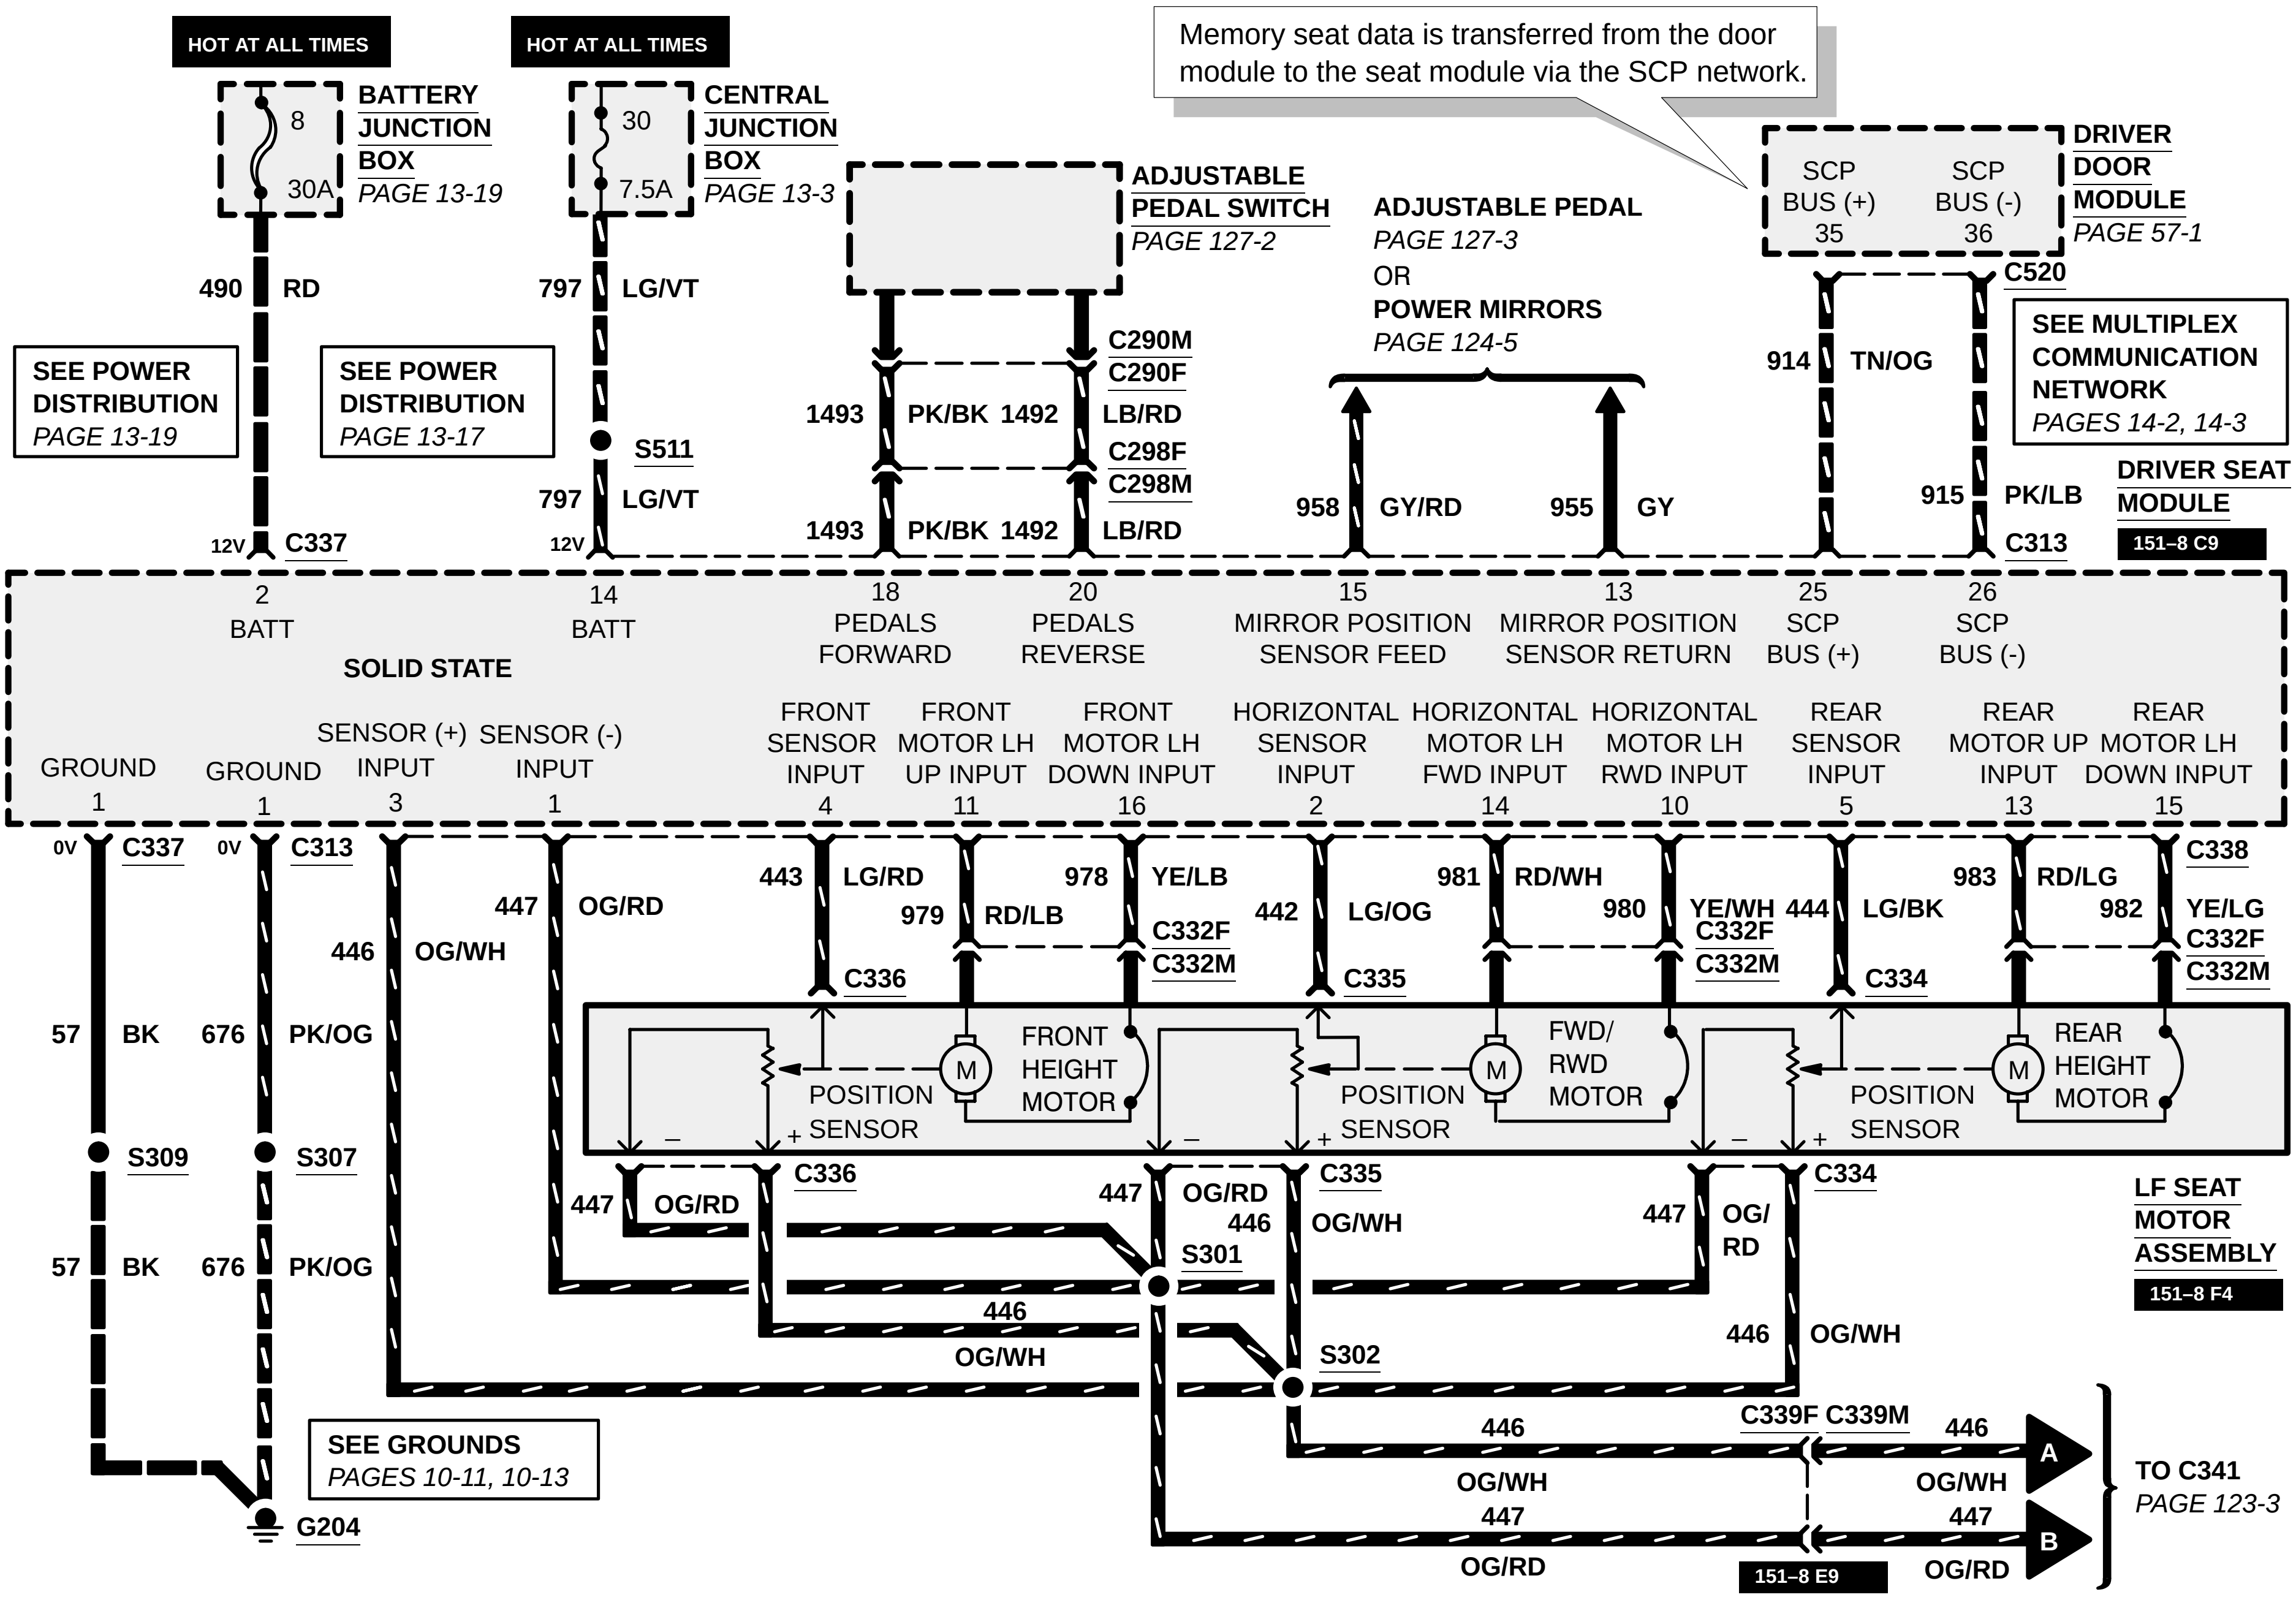

Memory seat data is transferred from the door module to the seat module via the SCP network.

HOT AT ALL TIMES
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-19
8
30A
CENTRAL JUNCTION BOX
PAGE 13-3
30
7.5A
490
RD
797
LG/VT
S511
797
LG/VT
SEE POWER DISTRIBUTION
PAGE 13-19
SEE POWER DISTRIBUTION
PAGE 13-17
12V
C337
12V
ADJUSTABLE PEDAL SWITCH
PAGE 127-2
C290M
C290F
1493
PK/BK
1492
LB/RD
C298F
C298M
1493
PK/BK
1492
LB/RD
ADJUSTABLE PEDAL
PAGE 127-3
OR
POWER MIRRORS
PAGE 124-5
958
GY/RD
955
GY
DRIVER DOOR MODULE
PAGE 57-1
SCP BUS (+) 35
SCP BUS (-) 36
C520
914
TN/OG
915
PK/LB
SEE MULTIPLEX COMMUNICATION NETWORK
PAGES 14-2, 14-3
DRIVER SEAT MODULE
C313
151–8 C9
2 BATT
14 BATT
SOLID STATE
18 PEDALS FORWARD
20 PEDALS REVERSE
15 MIRROR POSITION SENSOR FEED
13 MIRROR POSITION SENSOR RETURN
25 SCP BUS (+)
26 SCP BUS (-)
GROUND 1
GROUND 1
SENSOR (+) INPUT 3
SENSOR (-) INPUT 1
FRONT SENSOR INPUT 4
FRONT MOTOR LH UP INPUT 11
FRONT MOTOR LH DOWN INPUT 16
HORIZONTAL SENSOR INPUT 2
HORIZONTAL MOTOR LH FWD INPUT 14
HORIZONTAL MOTOR LH RWD INPUT 10
REAR SENSOR INPUT 5
REAR MOTOR UP INPUT 13
REAR MOTOR LH DOWN INPUT 15
0V
C337
0V
C313
57
BK
676
PK/OG
S309
S307
57
BK
676
PK/OG
G204
SEE GROUNDS
PAGES 10-11, 10-13
446
OG/WH
447
OG/RD
443
LG/RD
C336
979
RD/LB
978
YE/LB
C332F
C332M
442
LG/OG
C335
981
RD/WH
980
YE/WH
C332F
C332M
444
LG/BK
C334
983
RD/LG
982
YE/LG
C338
C332F
C332M
POSITION SENSOR
M
FRONT HEIGHT MOTOR
POSITION SENSOR
M
FWD/ RWD MOTOR
POSITION SENSOR
M
REAR HEIGHT MOTOR
–
+
–
+
–
+
C336
447
OG/RD
C335
447
OG/RD
446
S301
OG/WH
C334
447
OG/ RD
446
OG/WH
446
OG/WH
S302
446
OG/WH
LF SEAT MOTOR ASSEMBLY
151–8 F4
C339F C339M
446
OG/WH
446
OG/WH
A
447
OG/RD
447
OG/RD
B
151–8 E9
TO C341
PAGE 123-3