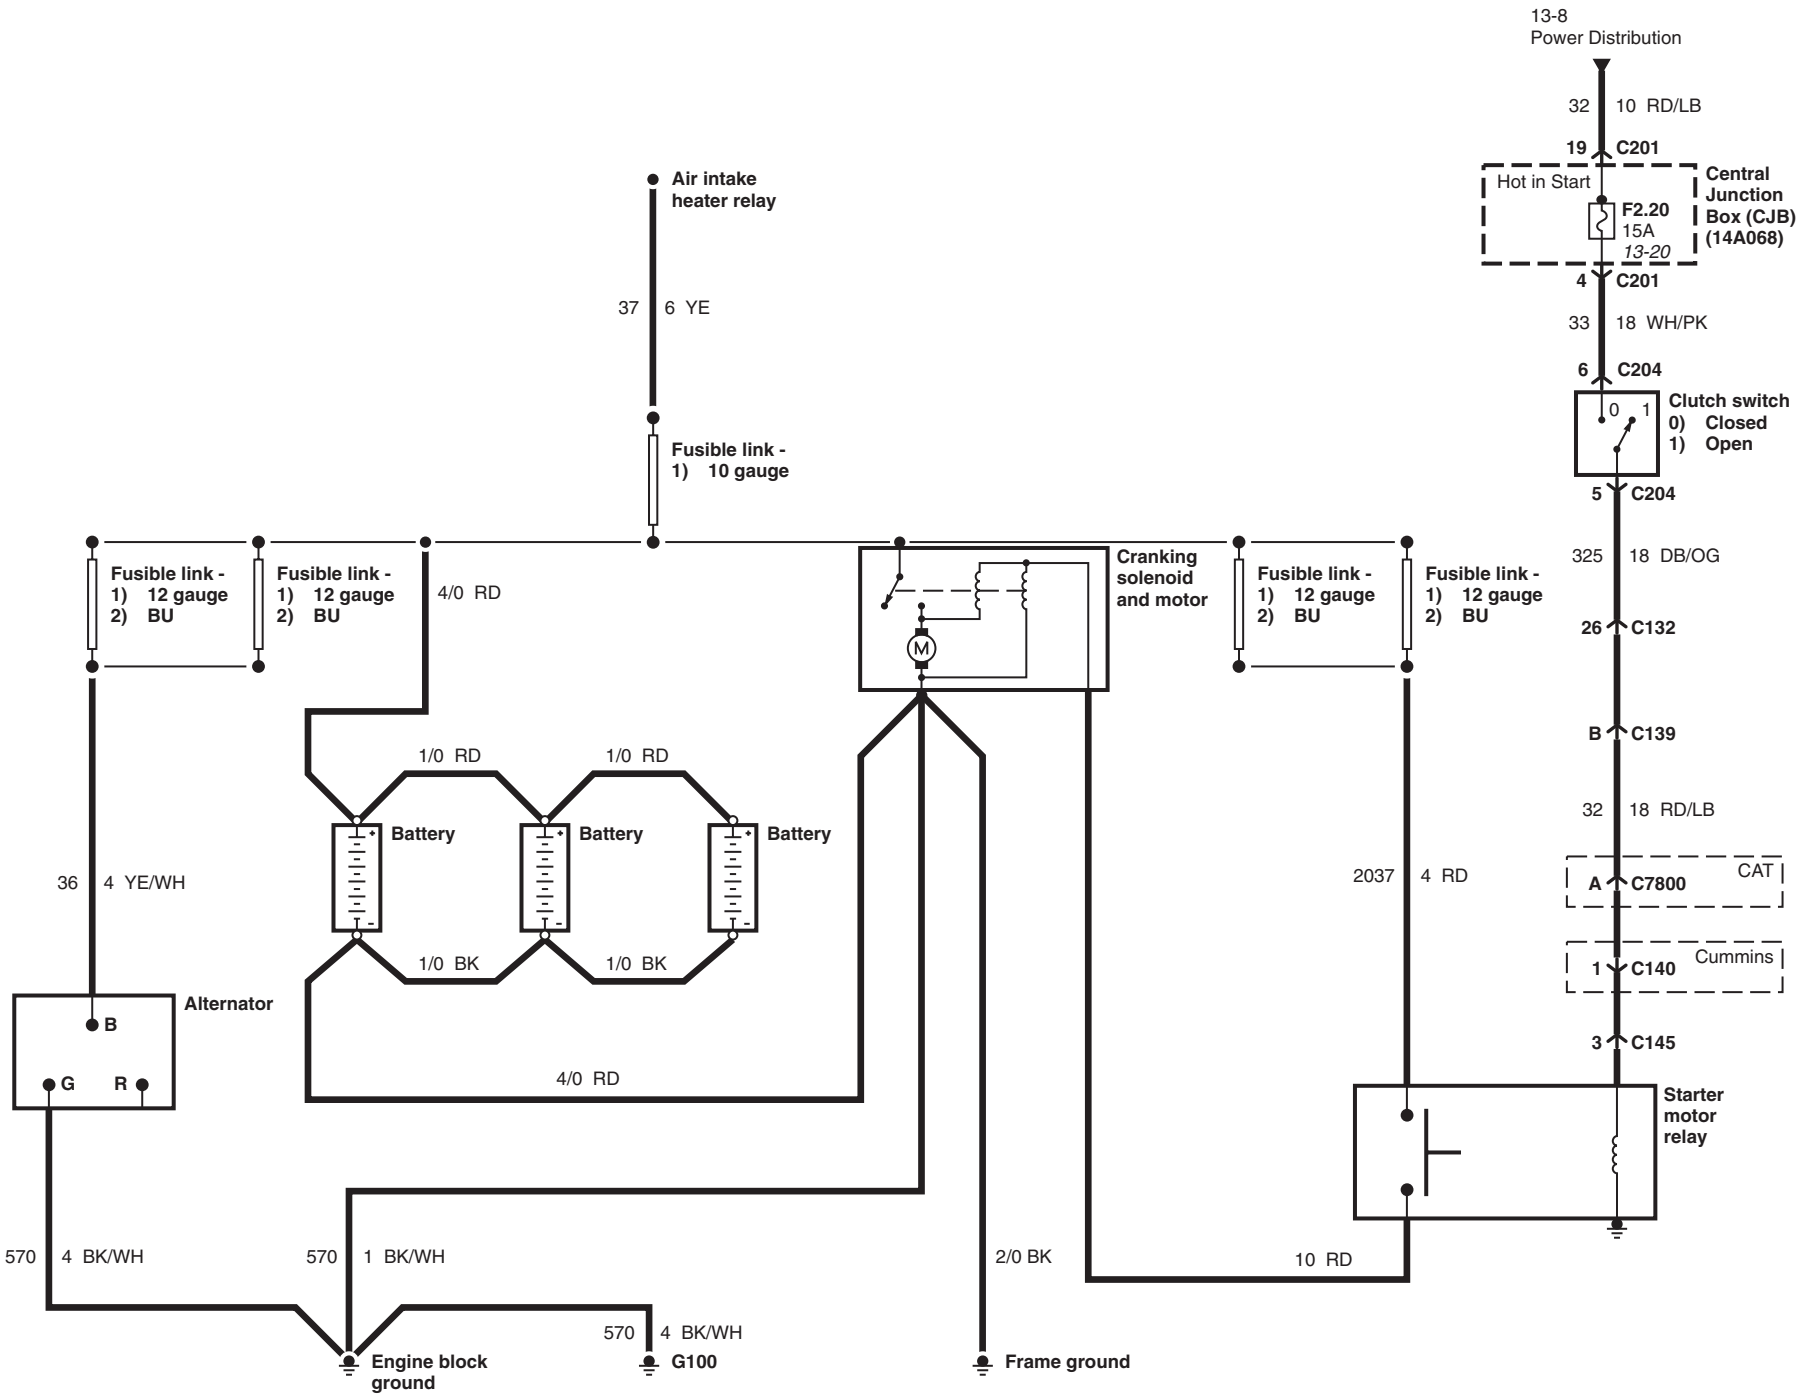
13-8
Power Distribution
32 10 RD/LB
19 C201
Hot in Start
F2.20
15A
13-20
Central Junction Box (CJB) (14A068)
4 C201
33 18 WH/PK
6 C204
0 1
Clutch switch
0) Closed
1) Open
5 C204
325 18 DB/OG
26 C132
B C139
32 18 RD/LB
A C7800
CAT
1 C140
Cummins
3 C145
Starter motor relay
Air intake heater relay
37 6 YE
Fusible link - 1) 10 gauge
Fusible link - 1) 12 gauge 2) BU
Fusible link - 1) 12 gauge 2) BU
4/0 RD
Cranking solenoid and motor
M
Fusible link - 1) 12 gauge 2) BU
Fusible link - 1) 12 gauge 2) BU
1/0 RD
1/0 RD
Battery
Battery
Battery
1/0 BK
1/0 BK
4/0 RD
36 4 YE/WH
2037 4 RD
Alternator
B
G
R
570 4 BK/WH
570 1 BK/WH
2/0 BK
10 RD
570 4 BK/WH
Engine block ground
G100
Frame ground