XLT

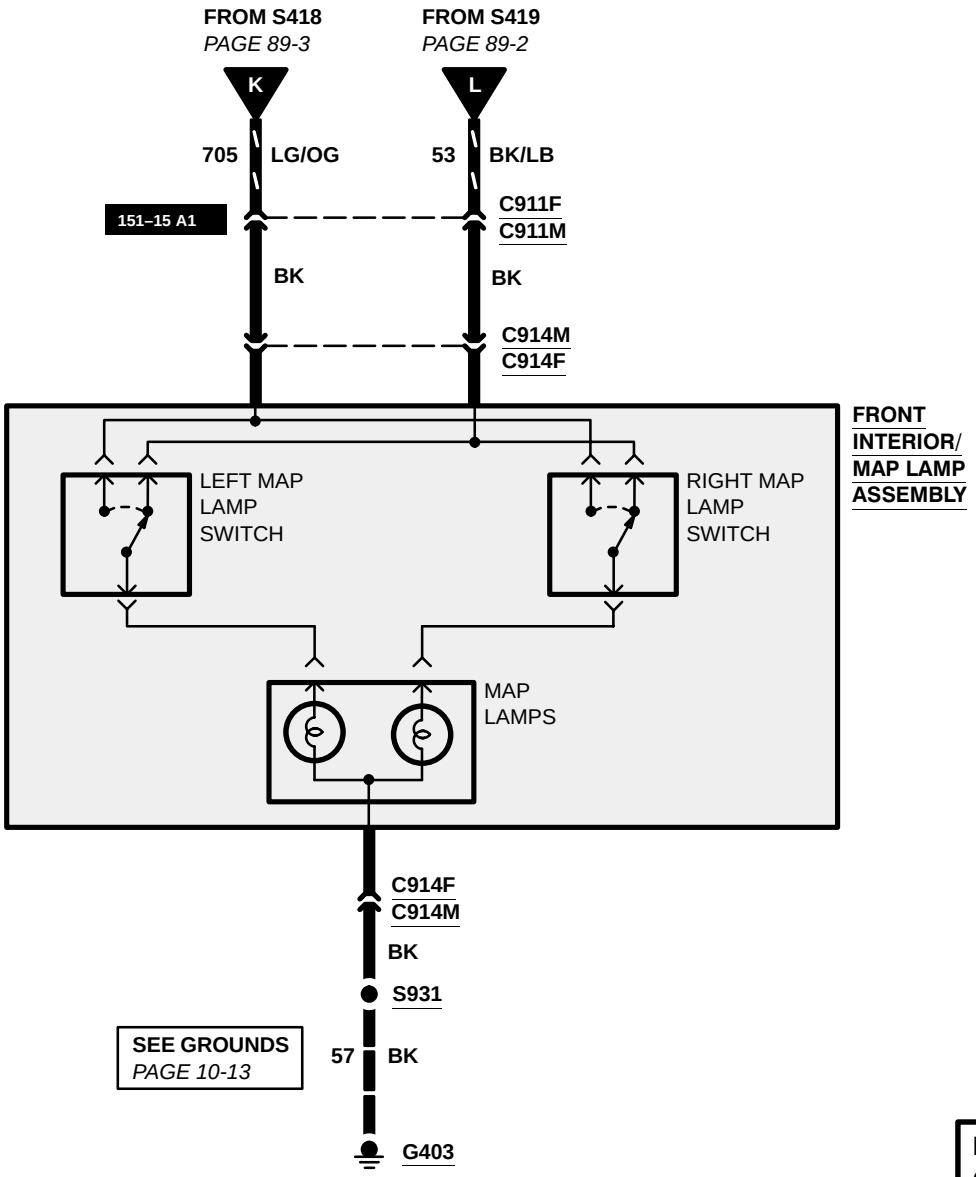

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C242	13-29
C243	13-28
C245	13-26
C246	13-26
C928	102-4

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.