-1

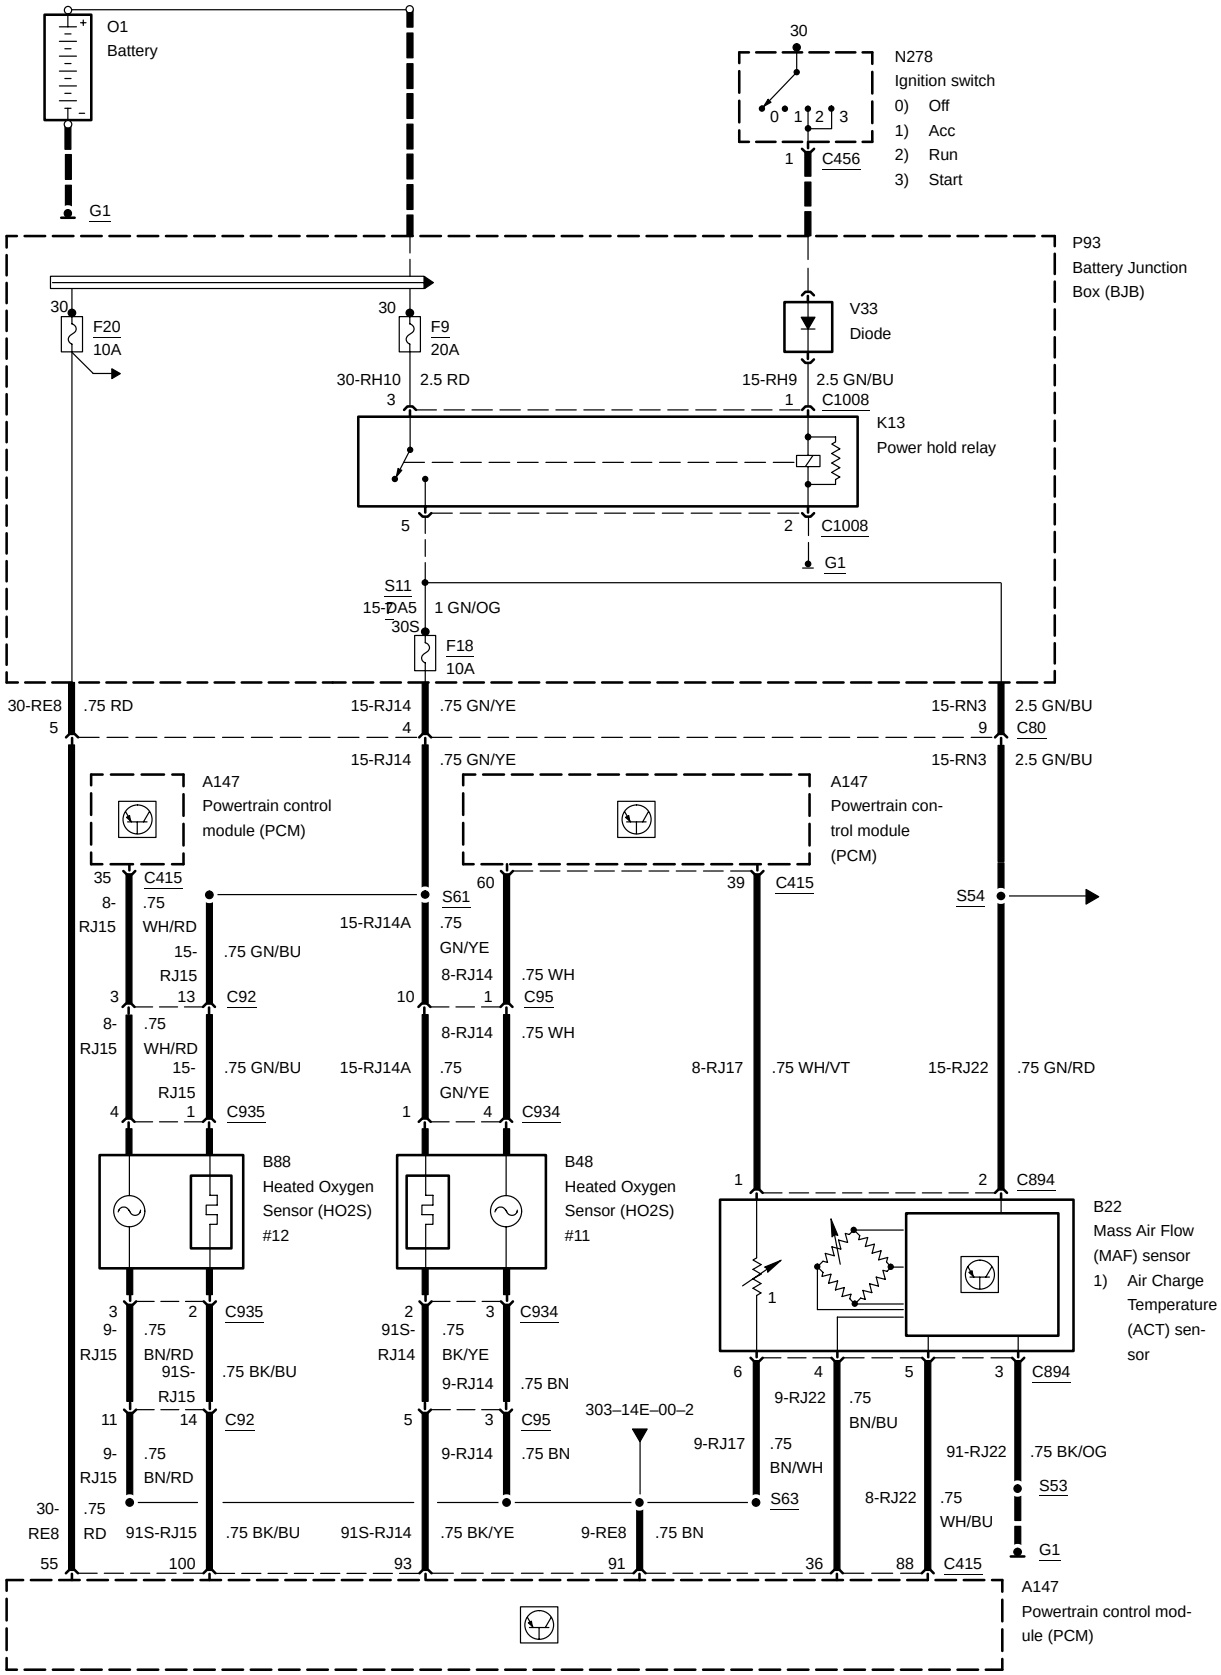
O1
Battery
G1
30
N278
Ignition switch
0) Off
1) Acc
2) Run
3) Start
C456
P93
Battery Junction Box (BJB)
F20
10A
F9
20A
V33
Diode
30-RH10 2.5 RD
15-RH9 2.5 GN/BU
C1008
K13
Power hold relay
C1008
G1
S11
15-DA5 1 GN/OG
F18
10A
30-RE8 .75 RD
15-RJ14 .75 GN/YE
15-RN3 2.5 GN/BU
C80
A147
Powertrain control module (PCM)
C415
S61
S54
B88
Heated Oxygen Sensor (HO2S) #12
B48
Heated Oxygen Sensor (HO2S) #11
C935
C934
C92
C95
C894
B22
Mass Air Flow (MAF) sensor
1) Air Charge Temperature (ACT) sensor
303–14E–00–2
S63
S53
G1