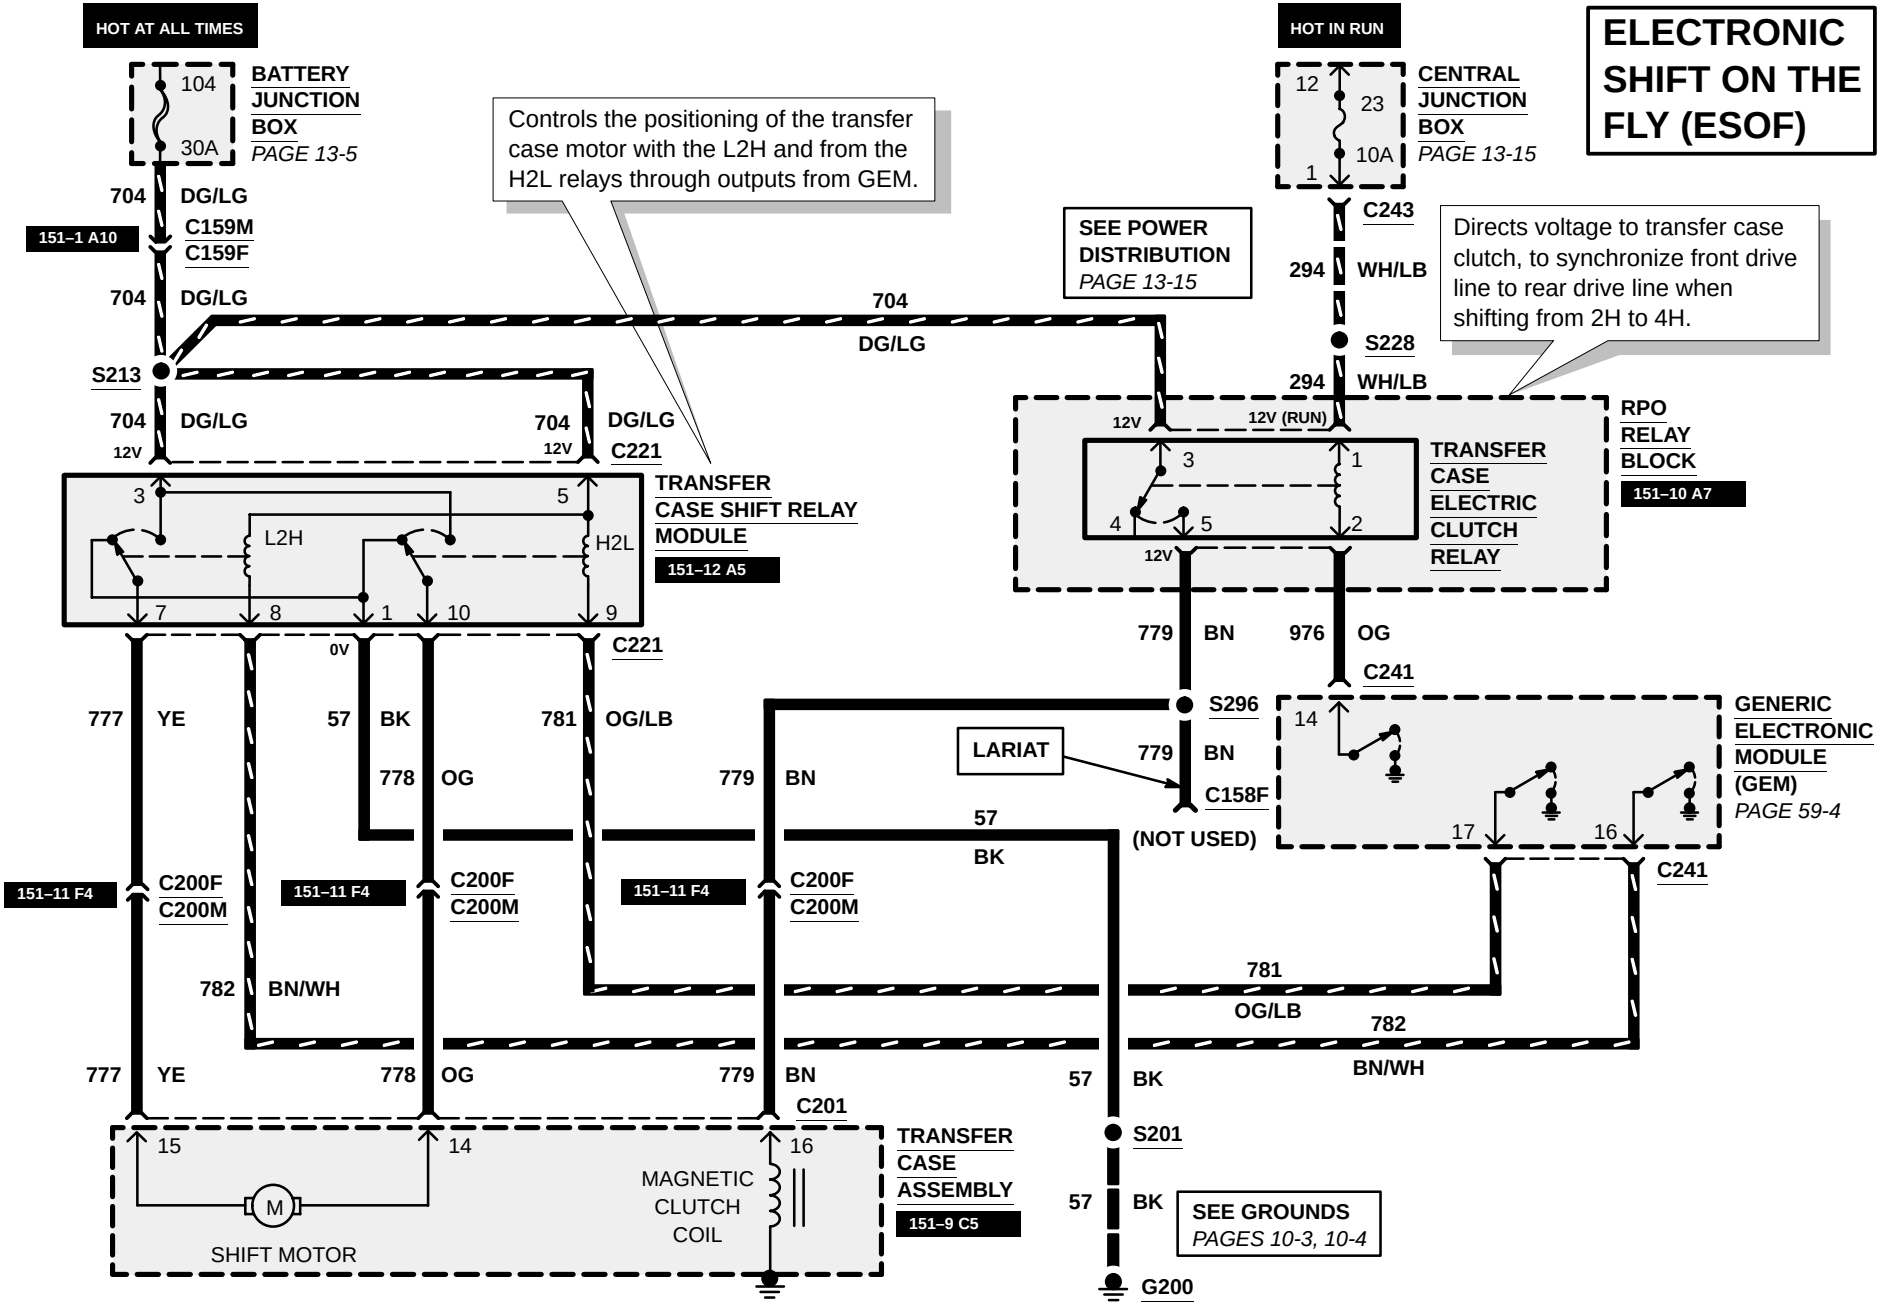
HOT AT ALL TIMES
HOT IN RUN
ELECTRONIC SHIFT ON THE FLY (ESOF)
BATTERY JUNCTION BOX
PAGE 13-5
104
30A
CENTRAL JUNCTION BOX
PAGE 13-15
12
23
10A
1
Controls the positioning of the transfer case motor with the L2H and from the H2L relays through outputs from GEM.
SEE POWER DISTRIBUTION
PAGE 13-15
Directs voltage to transfer case clutch, to synchronize front drive line to rear drive line when shifting from 2H to 4H.
704 DG/LG
151–1 A10
C159M
C159F
C243
294 WH/LB
S228
S213
RPO RELAY BLOCK
151–10 A7
12V
12V (RUN)
TRANSFER CASE ELECTRIC CLUTCH RELAY
TRANSFER CASE SHIFT RELAY MODULE
151–12 A5
L2H
H2L
C221
0V
779 BN
976 OG
C241
S296
777 YE
57 BK
781 OG/LB
778 OG
779 BN
LARIAT
C158F
(NOT USED)
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-4
151–11 F4
C200F
C200M
782 BN/WH
781 OG/LB
782 BN/WH
C201
TRANSFER CASE ASSEMBLY
151–9 C5
SHIFT MOTOR
MAGNETIC CLUTCH COIL
S201
SEE GROUNDS
PAGES 10-3, 10-4
G200