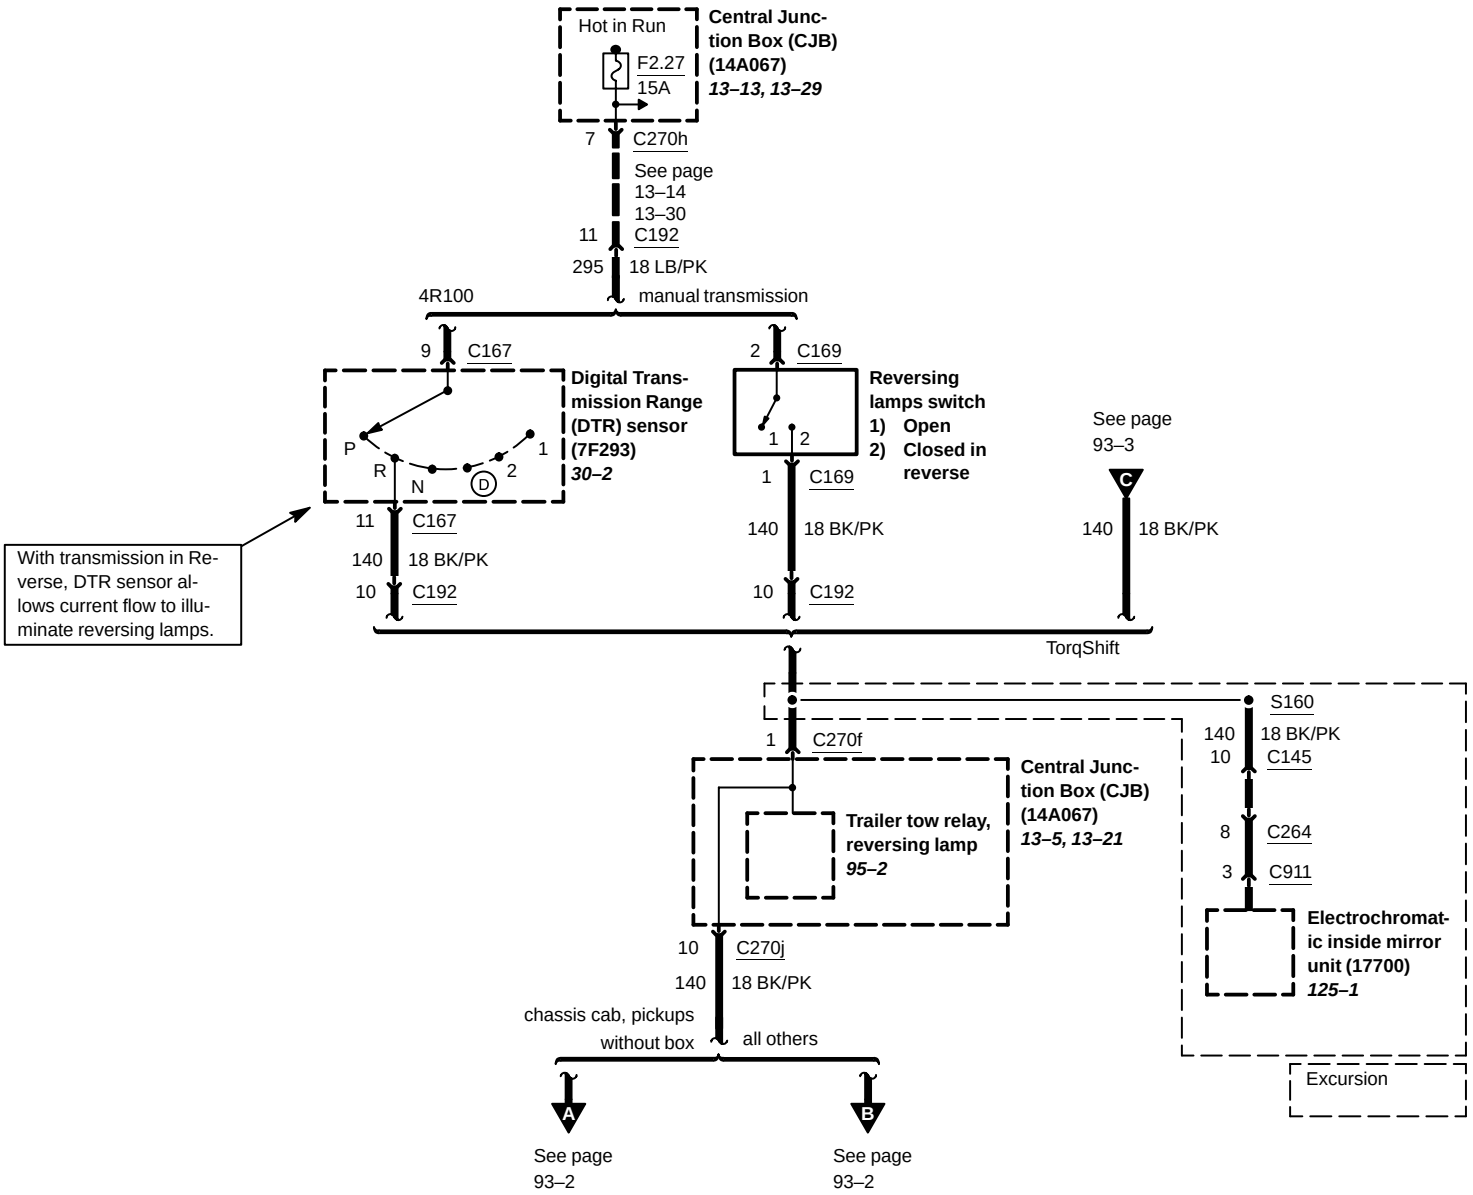
Hot in Run
F2.27
15A
Central Junction Box (CJB) (14A067) 13–13, 13–29
7
C270h
See page 13–14 13–30
11
C192
295
18 LB/PK
4R100
manual transmission
9
C167
2
C169
Digital Transmission Range (DTR) sensor (7F293) 30–2
P
R
N
D
1
2
Reversing lamps switch 1) Open 2) Closed in reverse
1
2
1
C169
140
18 BK/PK
10
C192
See page 93–3
C
140
18 BK/PK
11
C167
140
18 BK/PK
10
C192
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
TorqShift
S160
140
18 BK/PK
10
C145
1
C270f
Central Junction Box (CJB) (14A067) 13–5, 13–21
Trailer tow relay, reversing lamp 95–2
8
C264
3
C911
Electrochromatic inside mirror unit (17700) 125–1
10
C270j
140
18 BK/PK
chassis cab, pickups without box
all others
A
B
Excursion
See page 93–2
See page 93–2