113-1 LUGGAGE COMPARTMENT LID RELEASE

2001 CONTINENTAL

For diagnostic information, refer to Section 501-14A of the Workshop Manual.

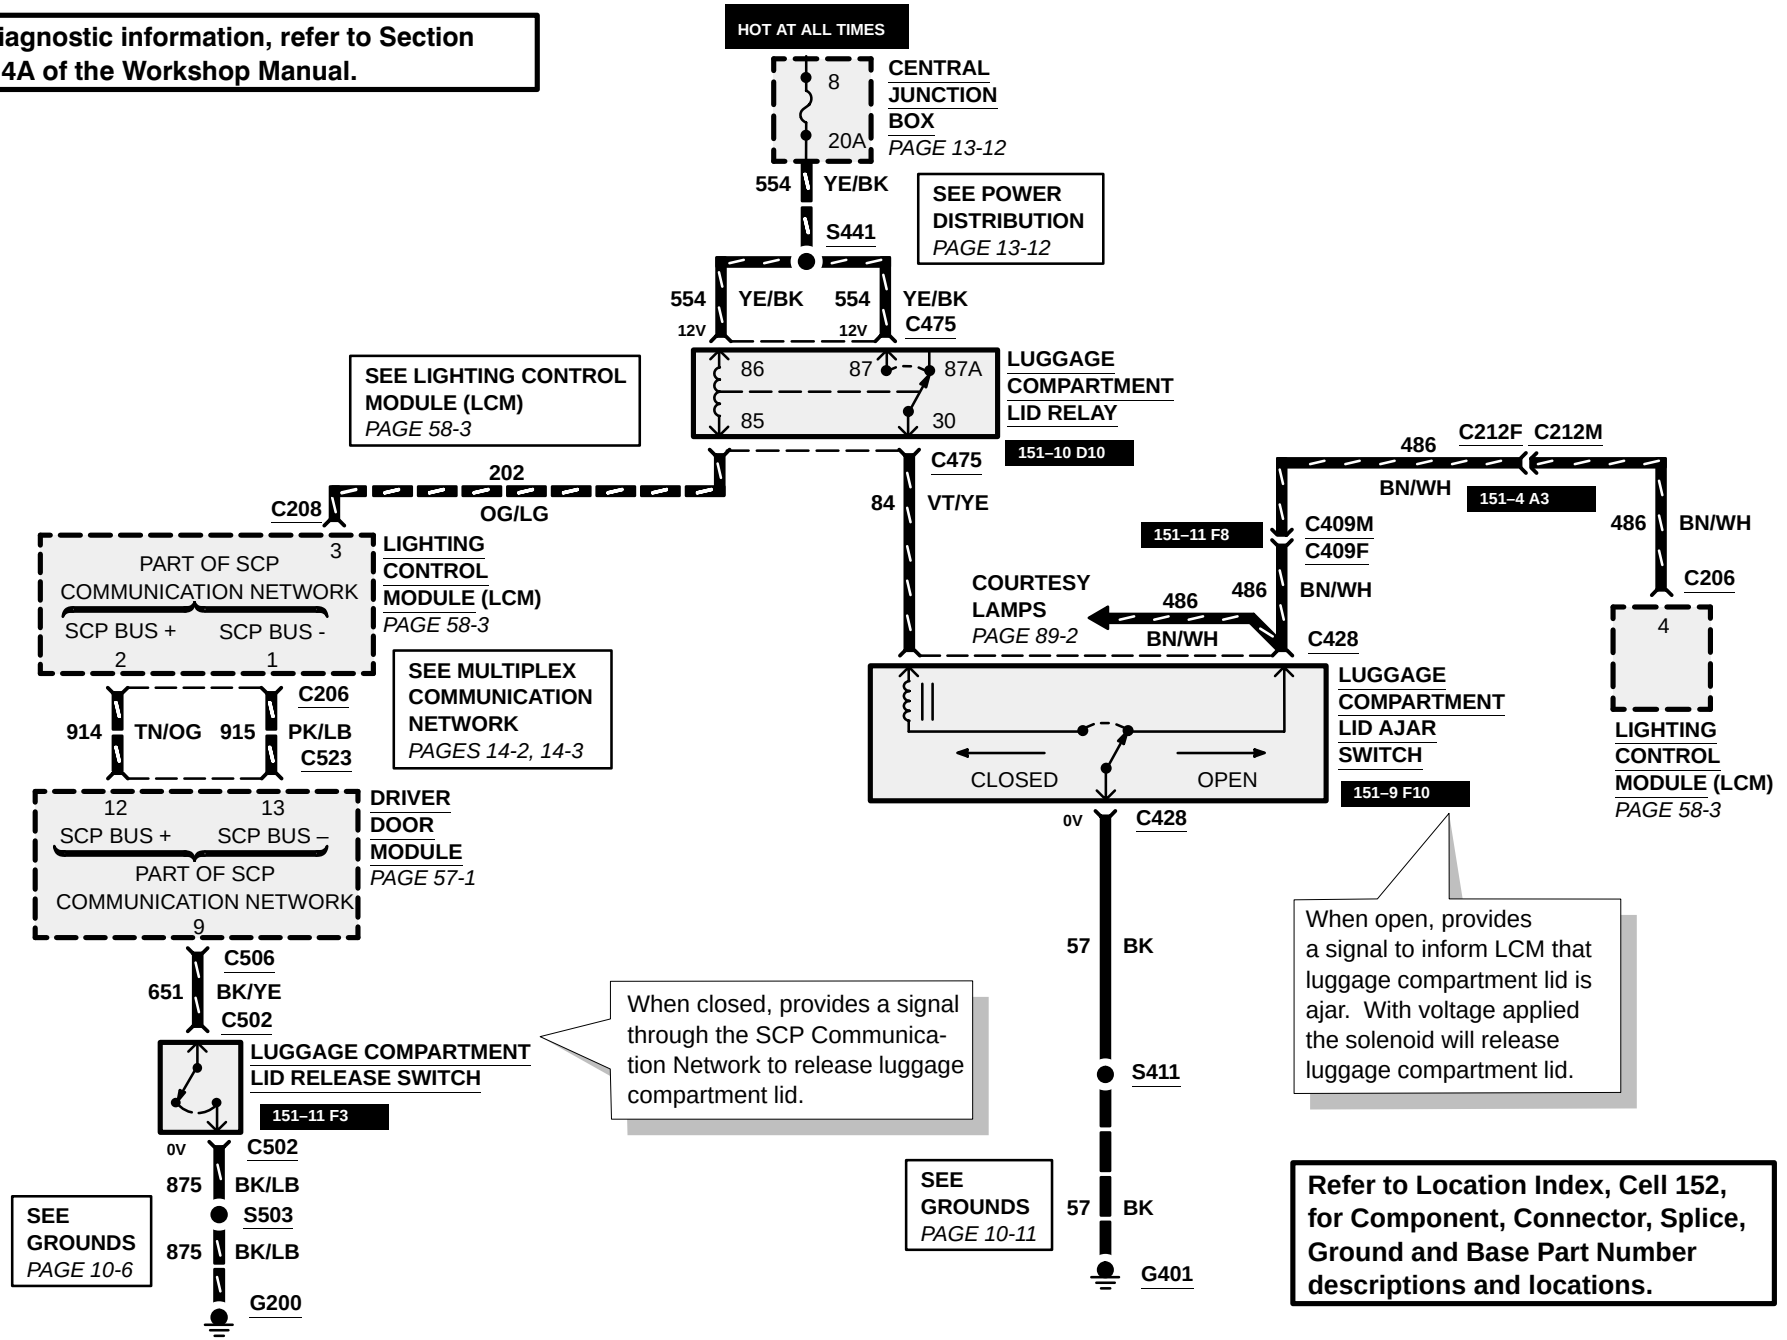

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.