C2122

14K024

N20
Glove box lamp switch

F02005

Pin	Circuit	Circuit function
1	31S-LB8 (BK/OG)	Ground, Switched
2	31-LB9 (BK)	Ground

C2123

14K733

E45
Side turn signal lamp, left

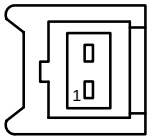

F02012

Pin	Circuit	Circuit function
1	31-LG13 (BK)	Ground
2	49-LG13 (BU/RD)	Pulsed power feed (overload protected)

C2124

14K733

E44
Side turn signal lamp, right

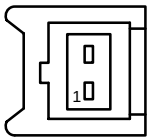

F02012

Pin	Circuit	Circuit function
1	31-LG20 (BK)	Ground
2	49-LG20 (BU/WH)	Pulsed power feed (overload protected)

C2125 (GN)

14A584

N310
Window operating switch, driver side for passenger side

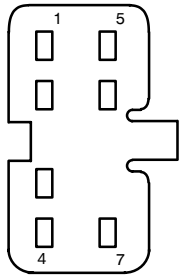

F07016

Pin	Circuit	Circuit function
1	32-AJ18 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	15-AJ9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
3	31-AJ9 (BK)	Ground
4	–	not used
5	–	not used
6	–	not used
7	33-AJ18 (YE/VT)	Switched between: Battery voltage, Ground or Open

C2126

19K315

M40
Front seat backrest motor

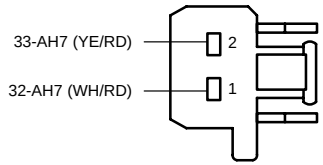

F02053