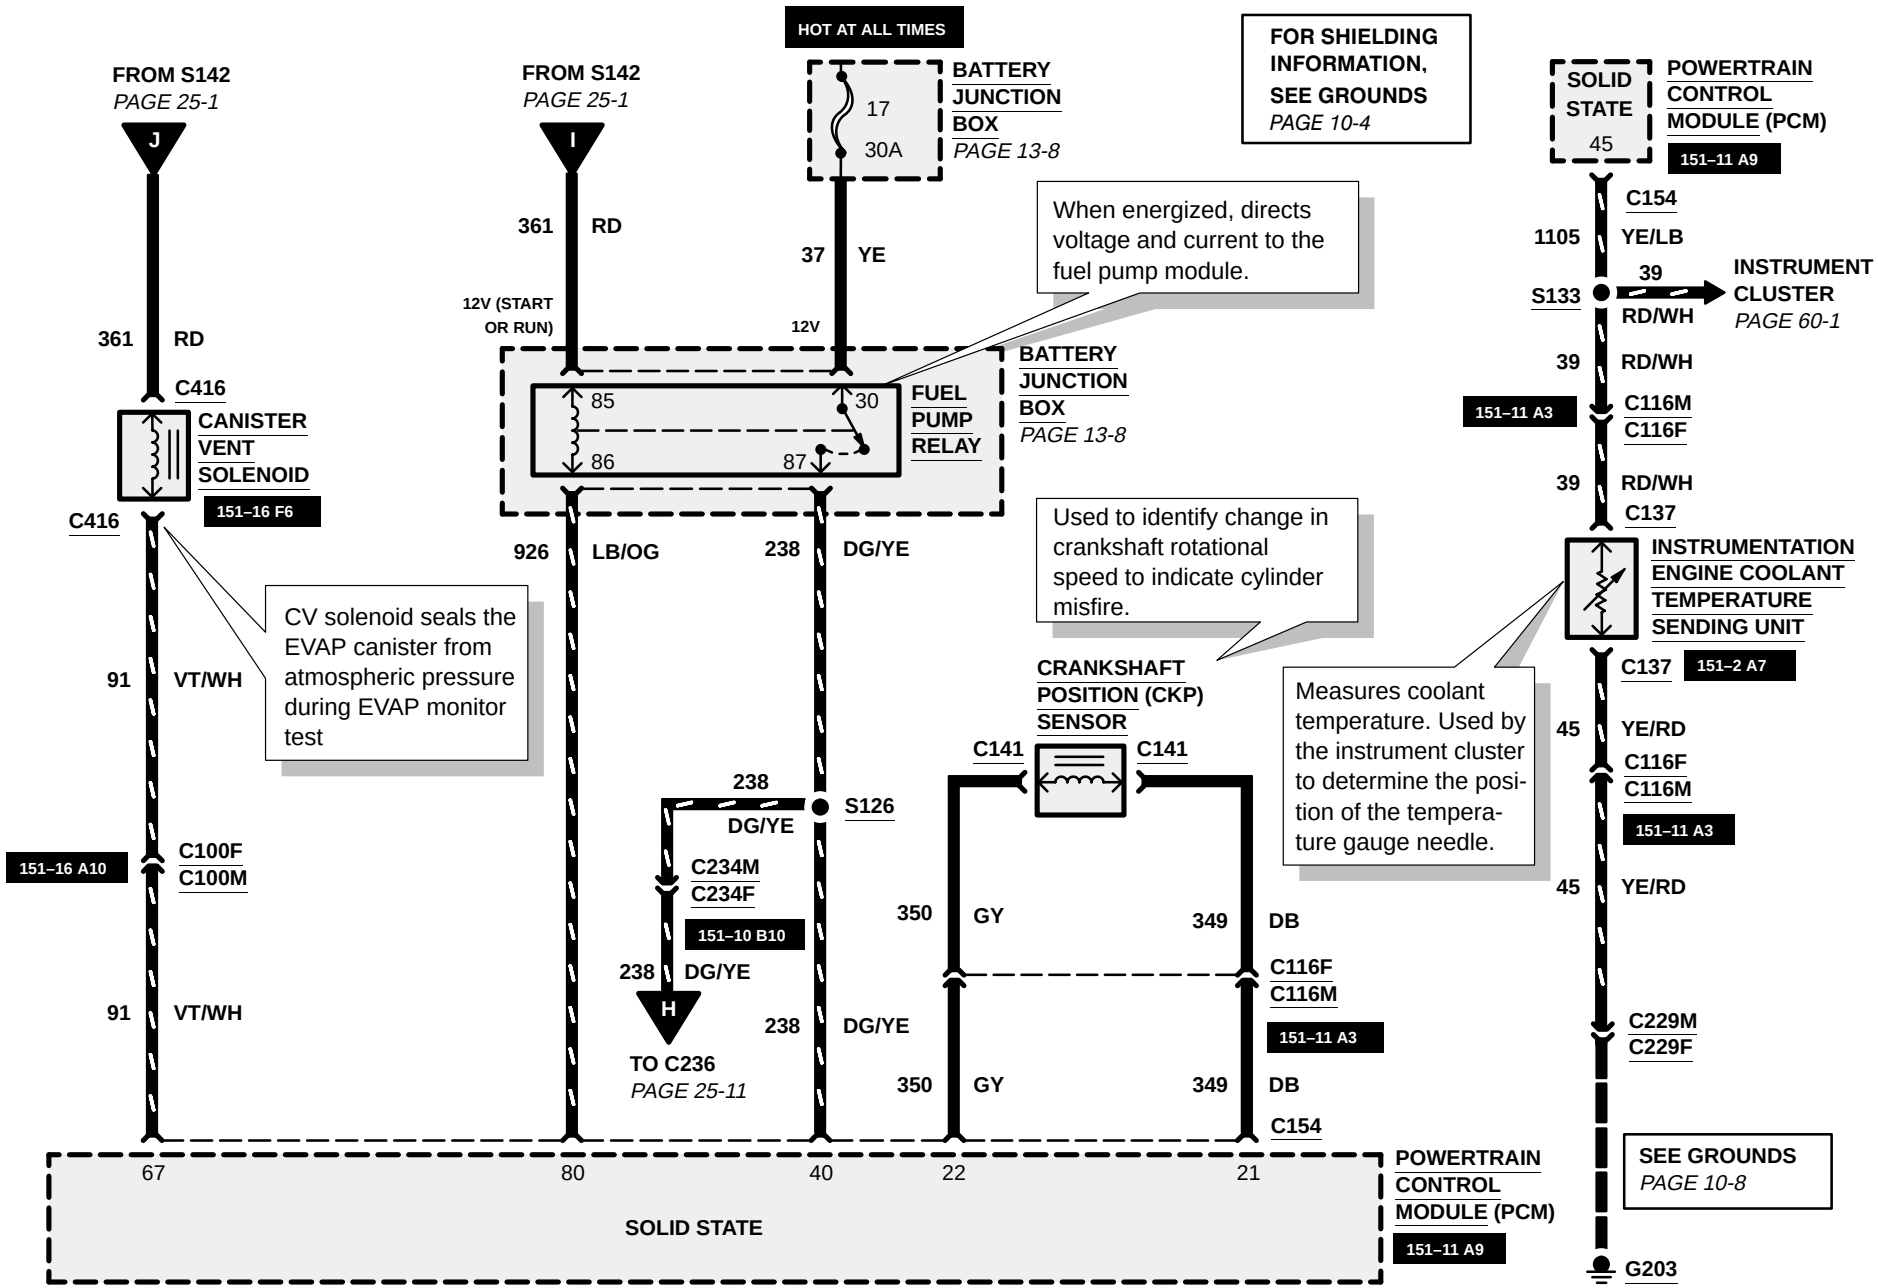
HOT AT ALL TIMES
FOR SHIELDING INFORMATION, SEE GROUNDS PAGE 10-4
FROM S142 PAGE 25-1
FROM S142 PAGE 25-1
BATTERY JUNCTION BOX PAGE 13-8
17
30A
SOLID STATE 45
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
When energized, directs voltage and current to the fuel pump module.
361 RD
37 YE
12V (START OR RUN)
12V
361 RD
C154
1105 YE/LB
39
INSTRUMENT CLUSTER PAGE 60-1
S133
RD/WH
39 RD/WH
151–11 A3
C116M
C116F
BATTERY JUNCTION BOX PAGE 13-8
85
30
FUEL PUMP RELAY
86
87
39 RD/WH
C137
C416
CANISTER VENT SOLENOID
151–16 F6
926 LB/OG
238 DG/YE
INSTRUMENTATION ENGINE COOLANT TEMPERATURE SENDING UNIT
Used to identify change in crankshaft rotational speed to indicate cylinder misfire.
CV solenoid seals the EVAP canister from atmospheric pressure during EVAP monitor test
CRANKSHAFT POSITION (CKP) SENSOR
C137
151–2 A7
Measures coolant temperature. Used by the instrument cluster to determine the position of the temperature gauge needle.
C141
C141
45 YE/RD
C116F
C116M
151–11 A3
238
S126
DG/YE
C234M
C234F
151–10 B10
350 GY
349 DB
45 YE/RD
C116F
C116M
151–11 A3
238 DG/YE
TO C236 PAGE 25-11
238 DG/YE
350 GY
349 DB
C154
C229M
C229F
91 VT/WH
C100F
C100M
151–16 A10
91 VT/WH
SEE GROUNDS PAGE 10-8
G203
67
80
40
22
21
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9