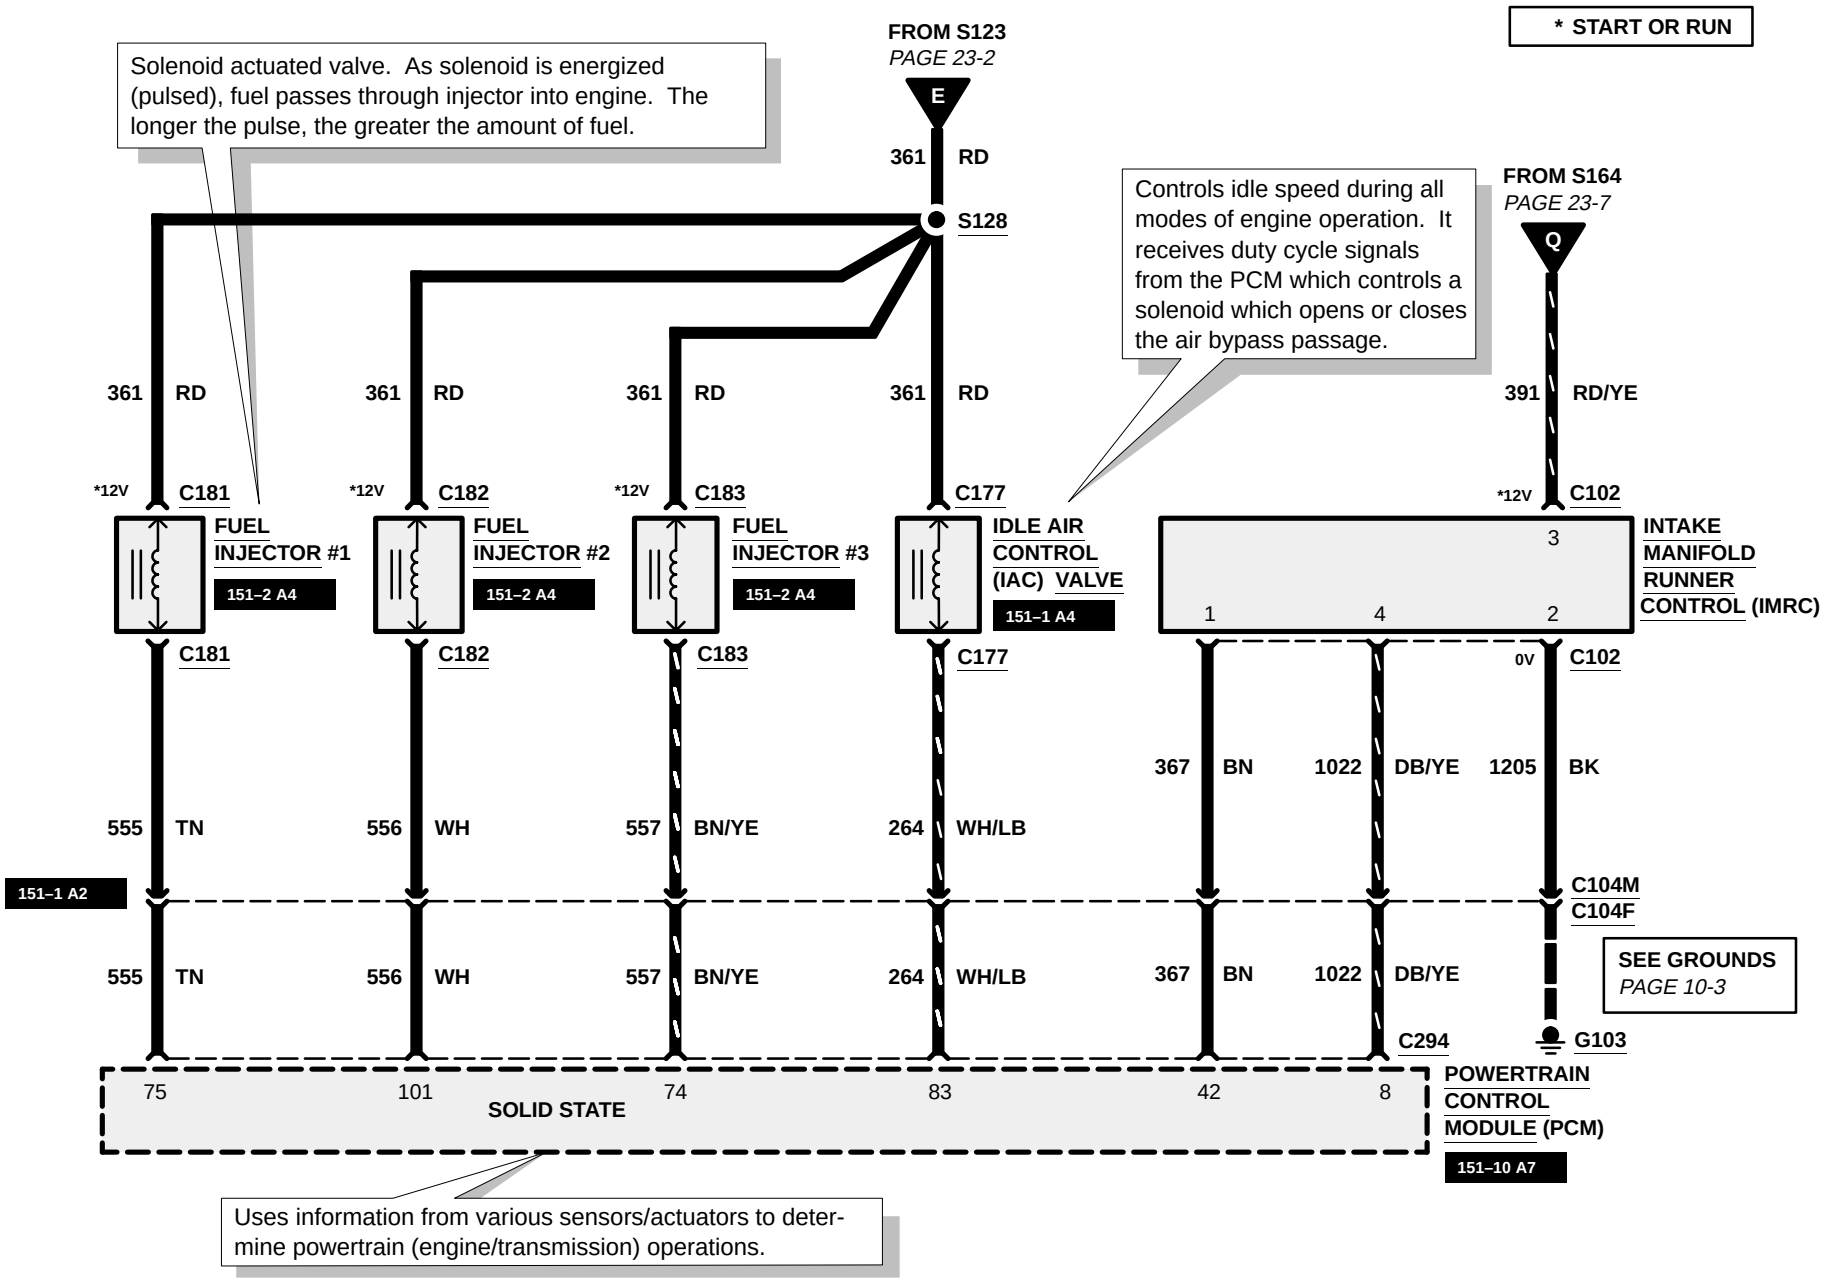
* START OR RUN
FROM S123
PAGE 23-2
E
361 RD
S128
Solenoid actuated valve. As solenoid is energized (pulsed), fuel passes through injector into engine. The longer the pulse, the greater the amount of fuel.
Controls idle speed during all modes of engine operation. It receives duty cycle signals from the PCM which controls a solenoid which opens or closes the air bypass passage.
FROM S164
PAGE 23-7
Q
391 RD/YE
*12V C102
361 RD
*12V C181
FUEL INJECTOR #1
151–2 A4
361 RD
*12V C182
FUEL INJECTOR #2
151–2 A4
361 RD
*12V C183
FUEL INJECTOR #3
151–2 A4
361 RD
C177
IDLE AIR CONTROL (IAC) VALVE
151–1 A4
INTAKE MANIFOLD RUNNER CONTROL (IMRC)
3
1
4
2
0V C102
C181
C182
C183
C177
367 BN
1022 DB/YE
1205 BK
555 TN
556 WH
557 BN/YE
264 WH/LB
151–1 A2
C104M
C104F
SEE GROUNDS
PAGE 10-3
555 TN
556 WH
557 BN/YE
264 WH/LB
367 BN
1022 DB/YE
C294
G103
75
101
74
83
42
8
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.