C3113a

7E203/7C078

A423
Vehicle Interface
Module (VIM)

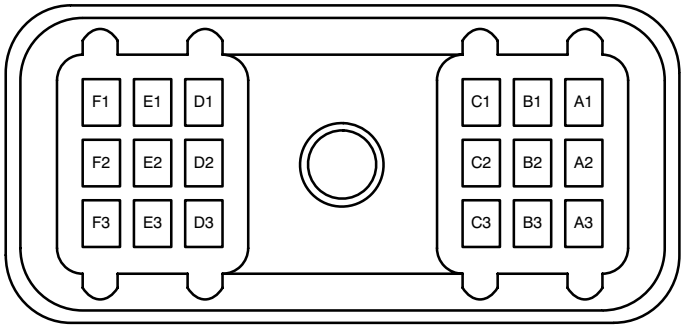

F18025

Pin	Circuit	Circuit function
A1	143 (LB/YE)	Message center switch, Power (Start or Run)
A2	143 (LB/YE)	Message center switch, Power (Start or Run)
A3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
B1	3231 (OG/LB)	Traction assist switch, feed, to ABS control module
B2	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
B3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
C1	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
C2	132 (OG/BK)	Message center switch, Power (Start or Run)
C3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)

Pin	Circuit	Circuit function
D1	123 (LG/OG)	Turn lamps, feed, left rear
D2	112 (BK/YE)	Voltage supplied at all times (overload protected)
D3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
E1	136 (DB/YE)	Powertrain Control Module (PCM) (12A650) – Output Shaft Speed (OSS) sensor (7M101)
E2	136 (DB/YE)	Powertrain Control Module (PCM) (12A650) – Output Shaft Speed (OSS) sensor (7M101)
E3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
F1	146 (WH/PK)	Digital Transmission Range (DTR) sensor, TR2
F2	113 (YE/LB)	Starter motor (11002), to, Starter relay (11450)
F3	114 (LB/YE)	Electronic Automatic Temperature Control (EATC) module (19980), to, Fresh/recirculation door actuator (19E616)