C108

12B637

B106
Knock sensor 2
(6G004)

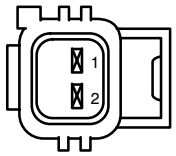

F02107

Pin	Circuit	Circuit Function
1	8-RJ19 (WH/RD)	Sensor signal
2	10-RJ19 (GY/RD)	Signal 2 (Y–direction, reverse, downward)

C109

12B637

B105
Knock sensor 1
(6G004)

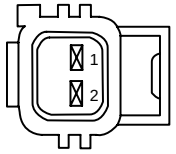

F02107

Pin	Circuit	Circuit Function
1	8-RJ18 (WH/BK)	Sensor signal
2	10-RJ18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)

C110

17A477

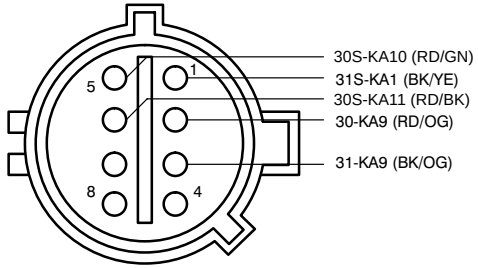

F08048

14290

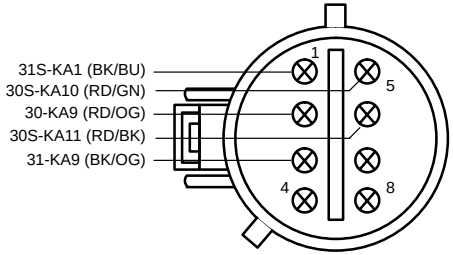

F08243

C111

12B637

P66
Coil On Plug (COP)
1 (12029)

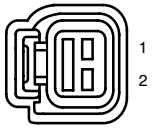

F02109

Pin	Circuit	Circuit Function
1	91S-RR5 (BN)	Ground, Switched
2	15-RR5 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)