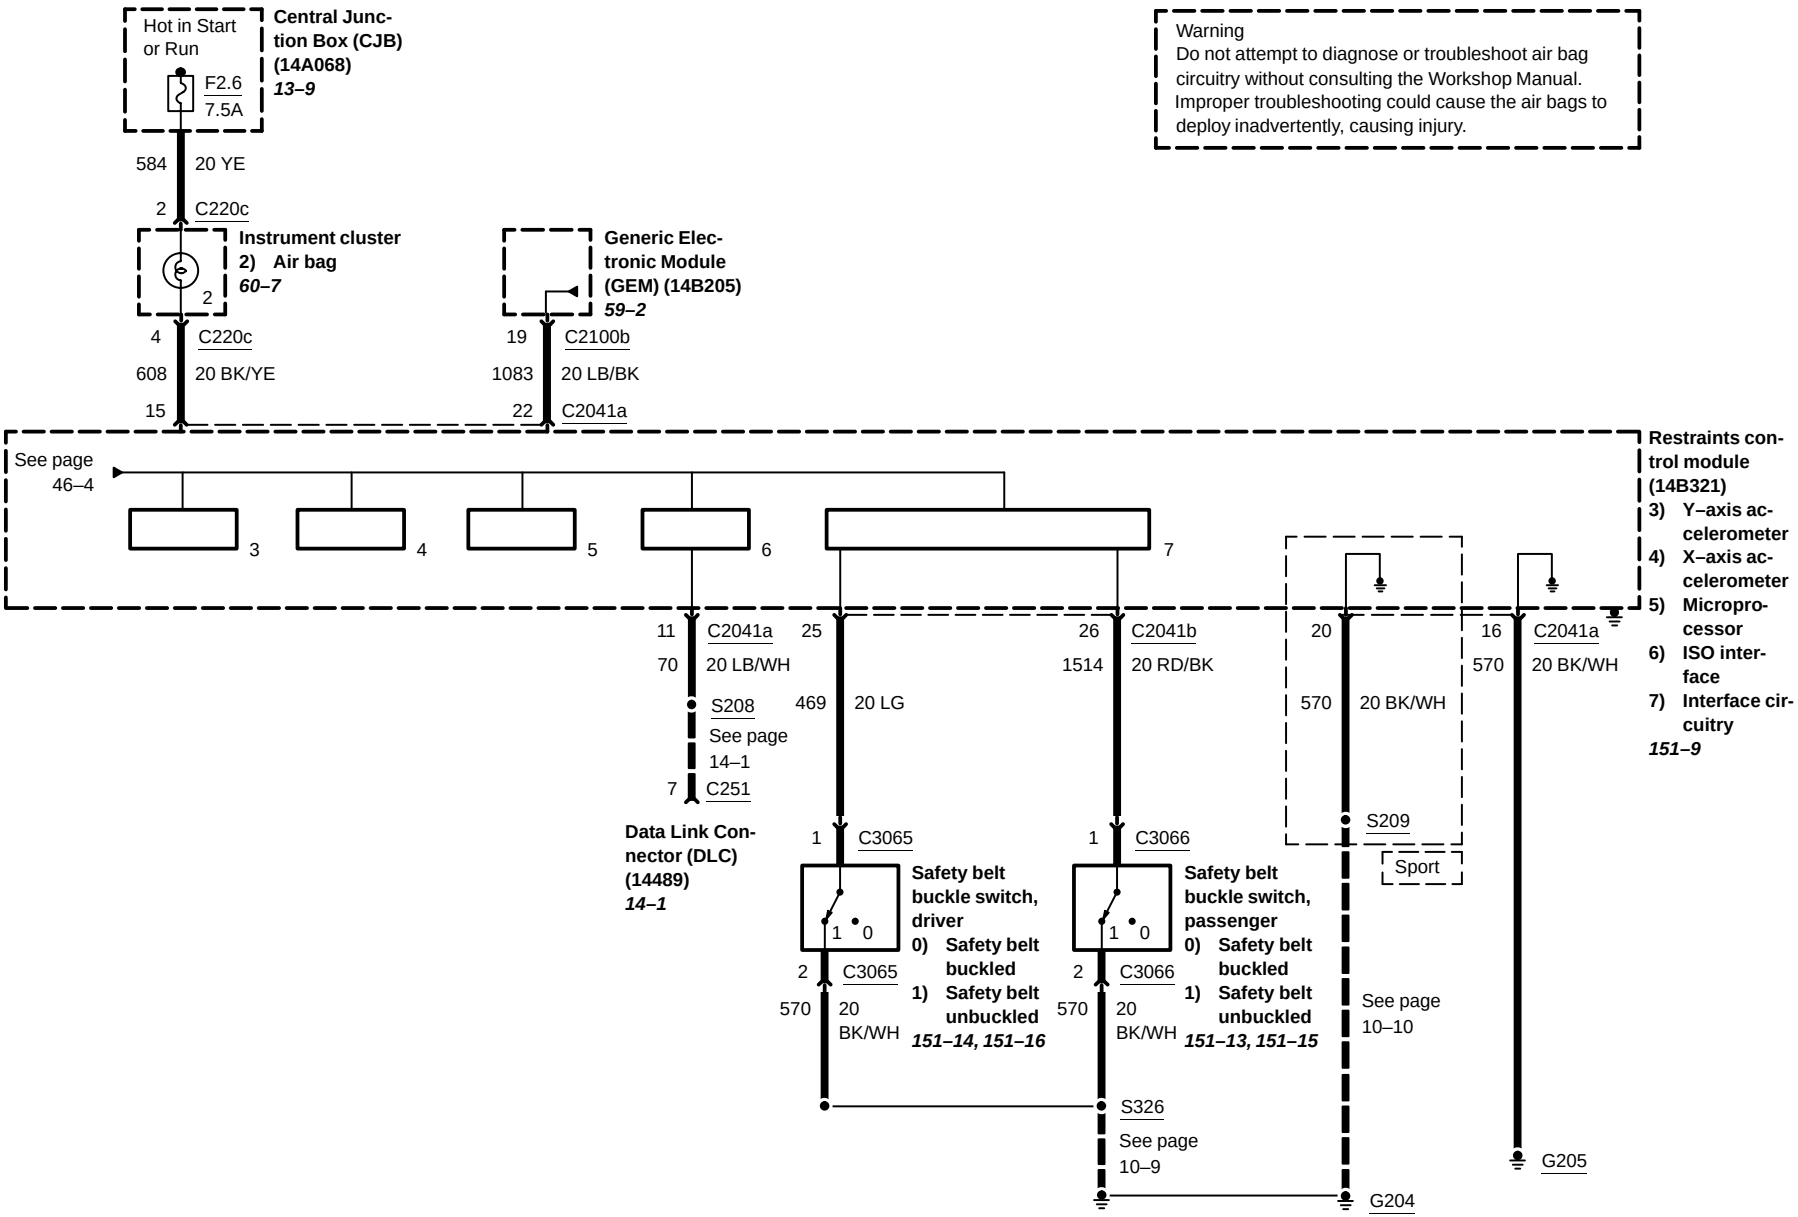
Hot in Start or Run
F2.6
7.5A
Central Junction Box (CJB) (14A068)
13–9
584
20 YE
2
C220c
Instrument cluster
2) Air bag
60–7
2
4
C220c
608
20 BK/YE
15
Generic Electronic Module (GEM) (14B205)
59–2
19
C2100b
1083
20 LB/BK
22
C2041a
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
See page 46–4
3
4
5
6
7
Restraints control module (14B321)
3) Y–axis accelerometer
4) X–axis accelerometer
5) Microprocessor
6) ISO interface
7) Interface circuitry
151–9
11
C2041a
70
20 LB/WH
S208
See page 14–1
7
C251
Data Link Connector (DLC) (14489)
14–1
25
469
20 LG
1
C3065
Safety belt buckle switch, driver
0) Safety belt buckled
1) Safety belt unbuckled
151–14, 151–16
2
C3065
570
20 BK/WH
26
C2041b
1514
20 RD/BK
1
C3066
Safety belt buckle switch, passenger
0) Safety belt buckled
1) Safety belt unbuckled
151–13, 151–15
2
C3066
570
20 BK/WH
S326
See page 10–9
20
570
20 BK/WH
S209
Sport
See page 10–10
16
C2041a
570
20 BK/WH
G205
G204