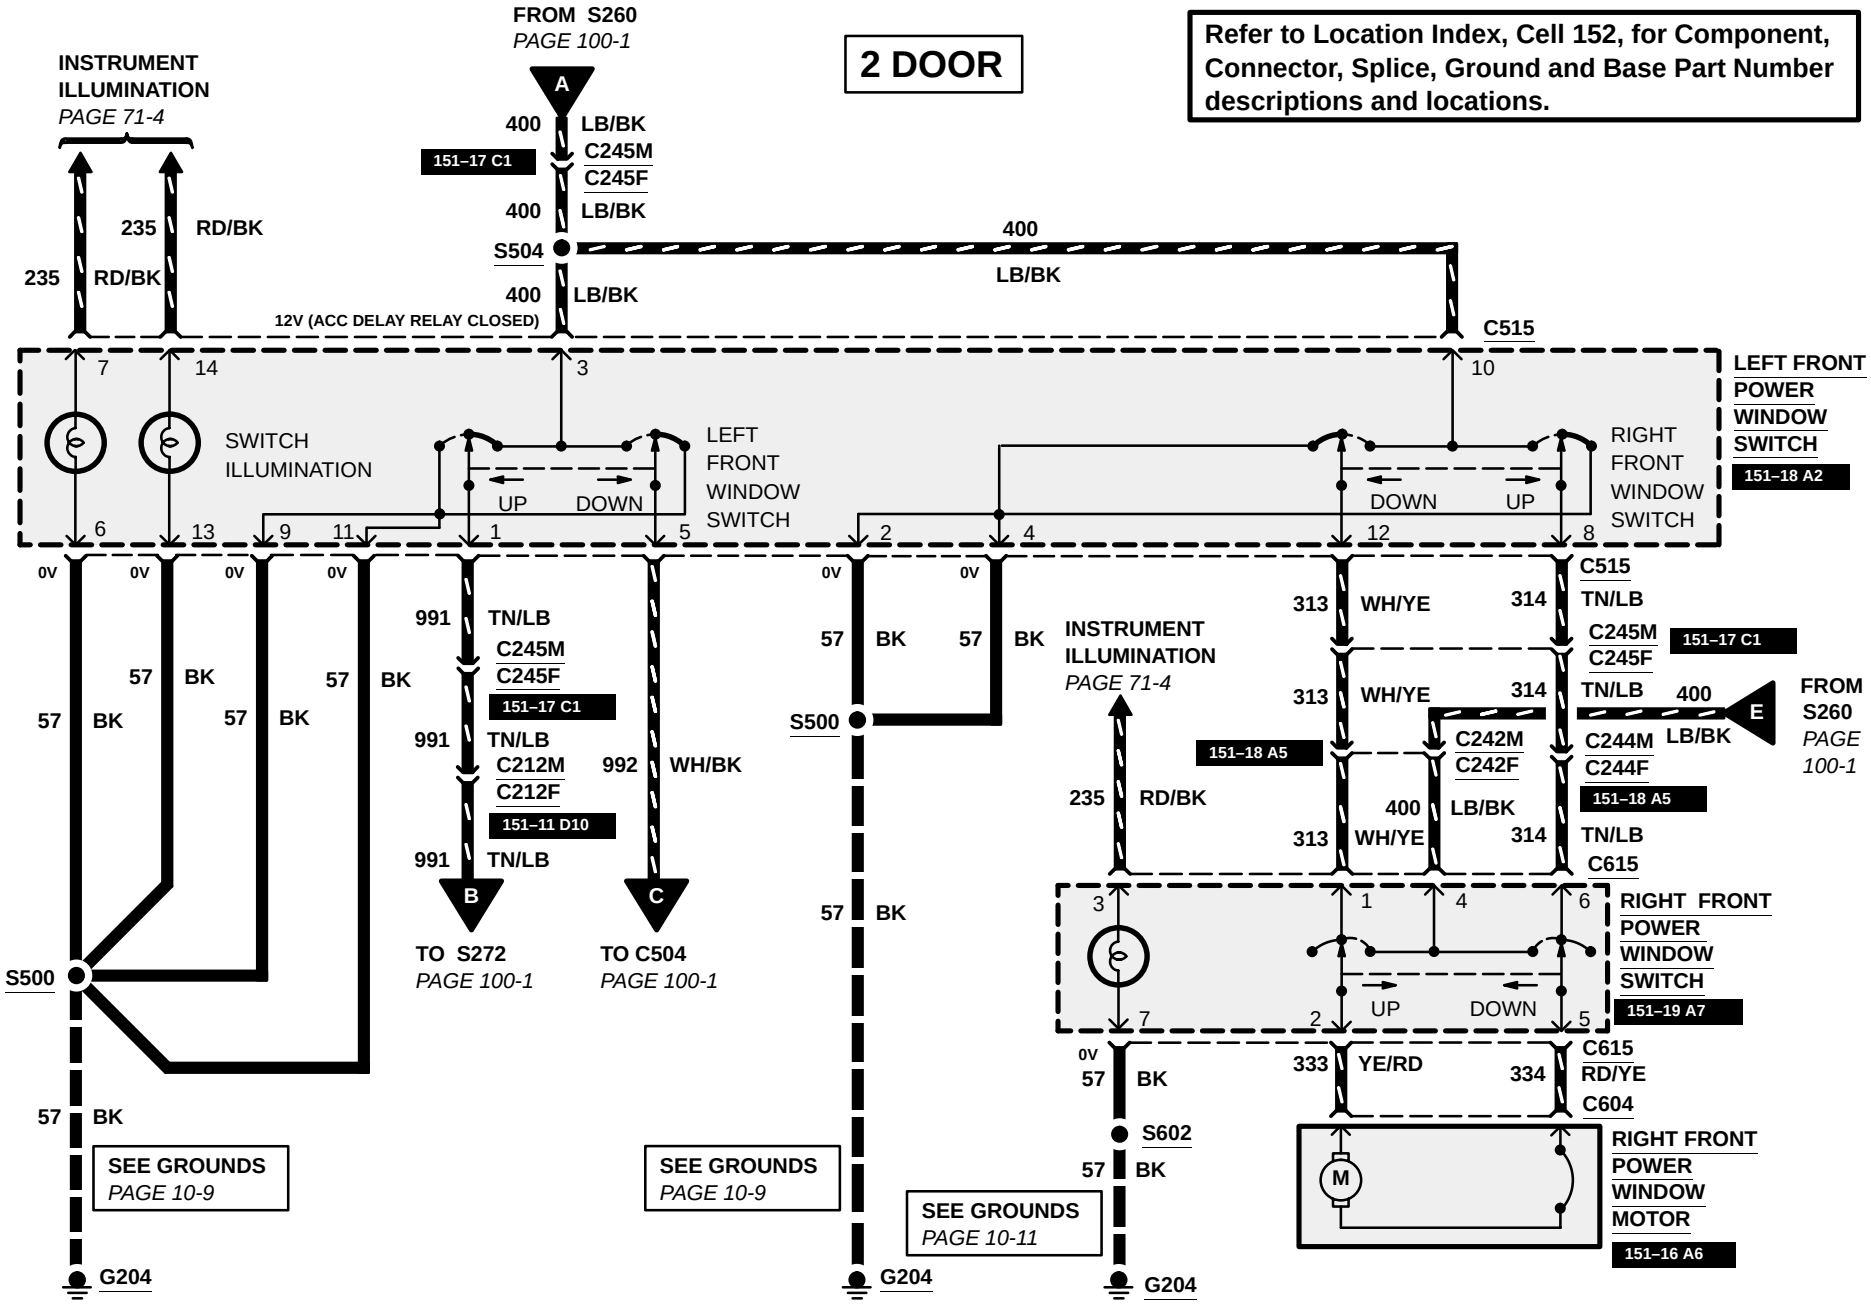
2 DOOR
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.
FROM S260
PAGE 100-1
INSTRUMENT ILLUMINATION
PAGE 71-4
A
400 LB/BK
151–17 C1
C245M
C245F
400 LB/BK
S504
400 LB/BK
400 LB/BK
235 RD/BK
235 RD/BK
12V (ACC DELAY RELAY CLOSED)
C515
LEFT FRONT POWER WINDOW SWITCH
151–18 A2
SWITCH ILLUMINATION
LEFT FRONT WINDOW SWITCH
RIGHT FRONT WINDOW SWITCH
UP DOWN
DOWN UP
7 14 3 10
6 13 9 11 1 5 2 4 12 8
0V 0V 0V 0V
57 BK 57 BK 57 BK 57 BK
991 TN/LB
C245M
C245F
151–17 C1
991 TN/LB
C212M
C212F
151–11 D10
991 TN/LB
992 WH/BK
B
C
TO S272
PAGE 100-1
TO C504
PAGE 100-1
S500
57 BK
SEE GROUNDS
PAGE 10-9
G204
0V 0V
57 BK 57 BK
S500
57 BK
SEE GROUNDS
PAGE 10-9
G204
INSTRUMENT ILLUMINATION
PAGE 71-4
313 WH/YE 314
313 WH/YE 314
151–18 A5
235 RD/BK
400 LB/BK
313 WH/YE 314
C515
TN/LB
C245M
C245F
151–17 C1
TN/LB 400
C244M LB/BK
C244F
151–18 A5
TN/LB
C615
C242M
C242F
FROM S260
PAGE 100-1
E
RIGHT FRONT POWER WINDOW SWITCH
151–19 A7
3 7 1 4 6 2 5
UP DOWN
0V
57 BK
333 YE/RD 334
C615
RD/YE
C604
S602
57 BK
RIGHT FRONT POWER WINDOW MOTOR
151–16 A6
M
SEE GROUNDS
PAGE 10-11
G204