C365

14K024

P91
Central Junction
Box (CJB)

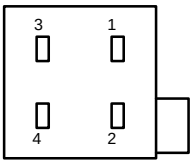

F04025

Pin	Circuit	Circuit Function
1	15-CF45 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	15-GE42 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
3	–	not used
4	–	not used

C366

14K024

P91
Central Junction
Box (CJB)

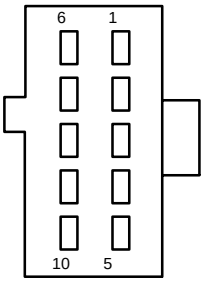

F10002.01

Pin	Circuit	Circuit Function
1	31S-GE52 (BK/RD) + 31S-GE52A (BK/RD)	Ground, switched
2	31S-LC29 (BK/RD) + 31S-GE7 (BK/YE)	Ground, switched
	31S-LC29 (BK/RD) + 31S-GL46 (BK/YE)	Ground, switched
3	8-AA36 (WH)	Sensor signal
4	15S-HB1 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	–	not used
6	29-AH1 (OG/BU)	Voltage supplied at all times (overload protected)
7	–	not used
8	15-GG15 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
9	31S-LC30 (BK/GN) + 31S-GE9 (BK/BU)	Ground, switched
	31S-LC30 (BK/GN) + 31S-GL47 (BK/BU)	Ground, switched