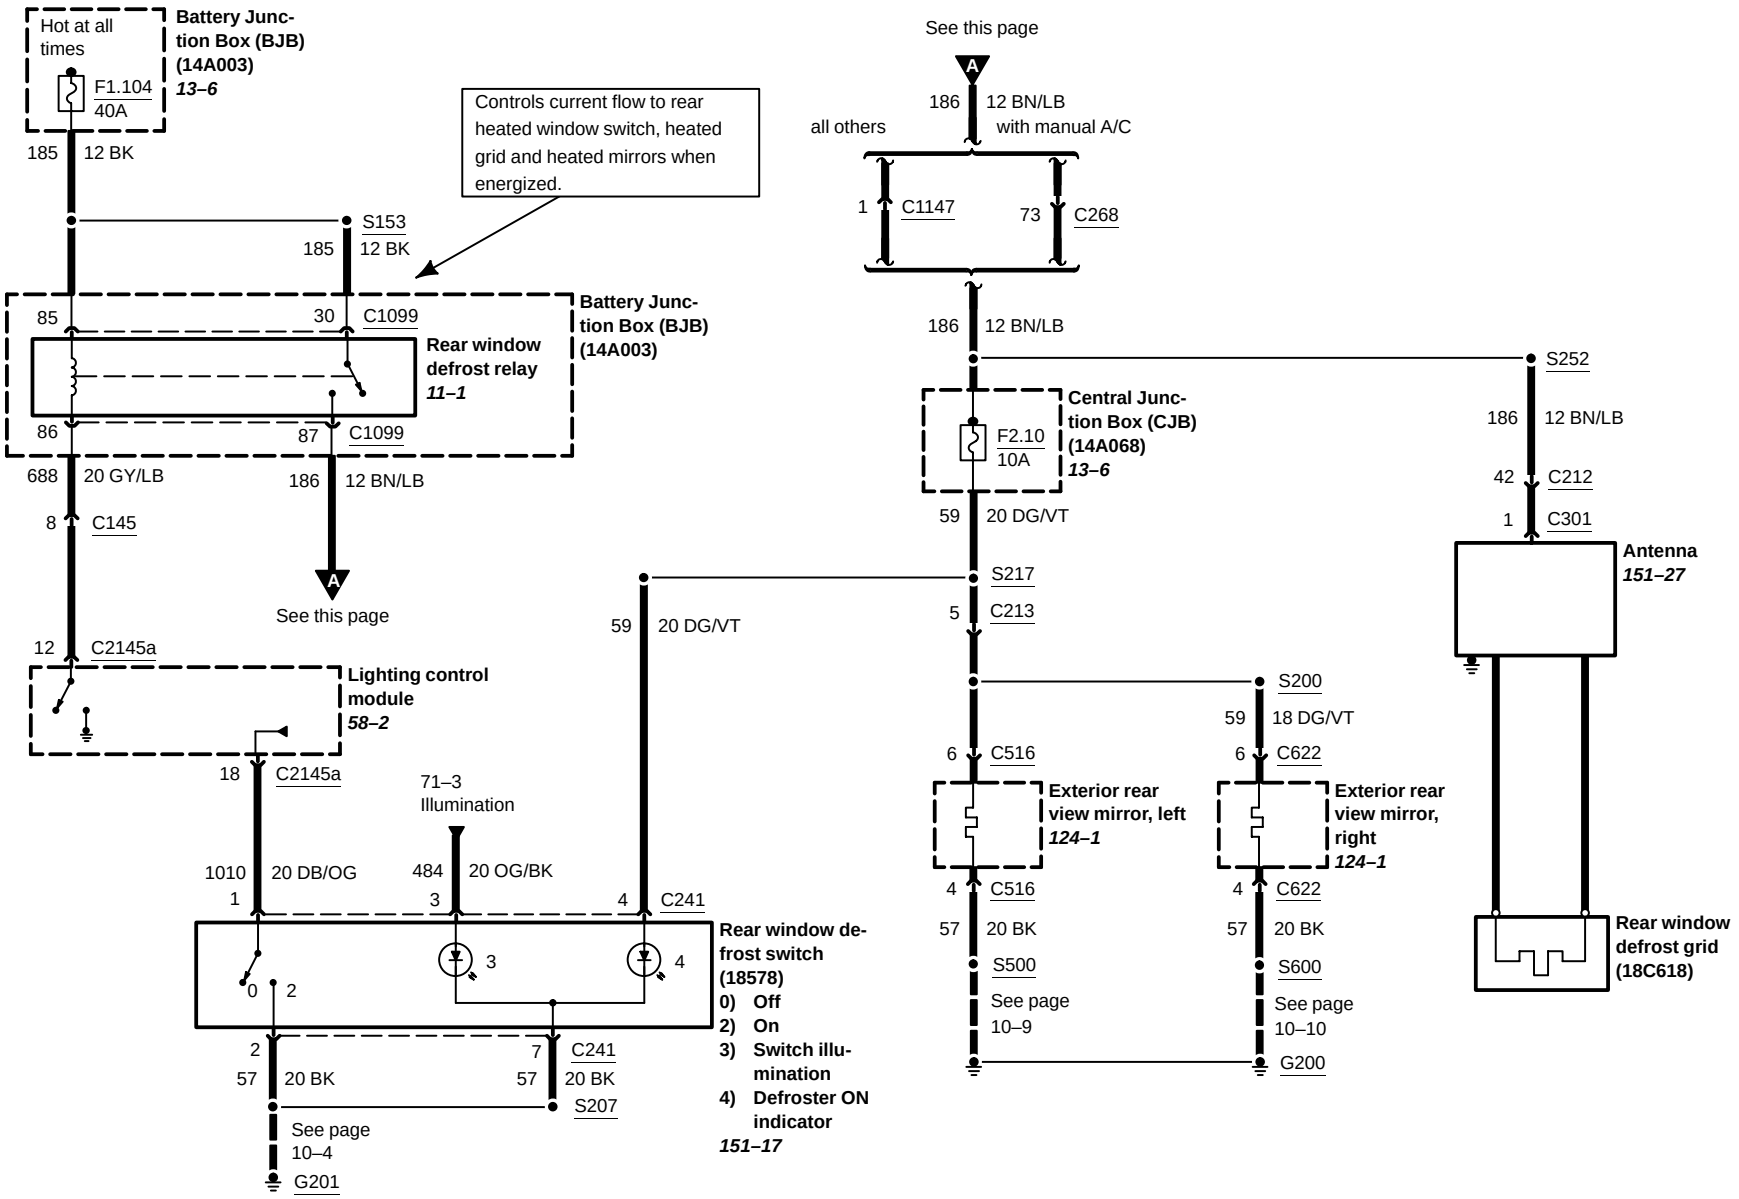
Hot at all times
F1.104
40A
Battery Junction Box (BJB) (14A003) 13–6
185 12 BK
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
S153
185 12 BK
85
30 C1099
Rear window defrost relay 11–1
86
87 C1099
Battery Junction Box (BJB) (14A003)
688 20 GY/LB
186 12 BN/LB
8 C145
A
See this page
12 C2145a
Lighting control module 58–2
18 C2145a
71–3 Illumination
1010 20 DB/OG
484 20 OG/BK
59 20 DG/VT
1
3
4 C241
0
2
3
4
Rear window defrost switch (18578)
0) Off
2) On
3) Switch illumination
4) Defroster ON indicator 151–17
2 57 20 BK
7 C241
57 20 BK
S207
See page 10–4
G201
See this page
A
186 12 BN/LB
all others
with manual A/C
1 C1147
73 C268
186 12 BN/LB
Central Junction Box (CJB) (14A068) 13–6
F2.10
10A
59 20 DG/VT
S217
5 C213
S200
59 18 DG/VT
6 C516
6 C622
Exterior rear view mirror, left 124–1
Exterior rear view mirror, right 124–1
4 C516
57 20 BK
S500
See page 10–9
4 C622
57 20 BK
S600
See page 10–10
G200
S252
186 12 BN/LB
42 C212
1 C301
Antenna 151–27
Rear window defrost grid (18C618)