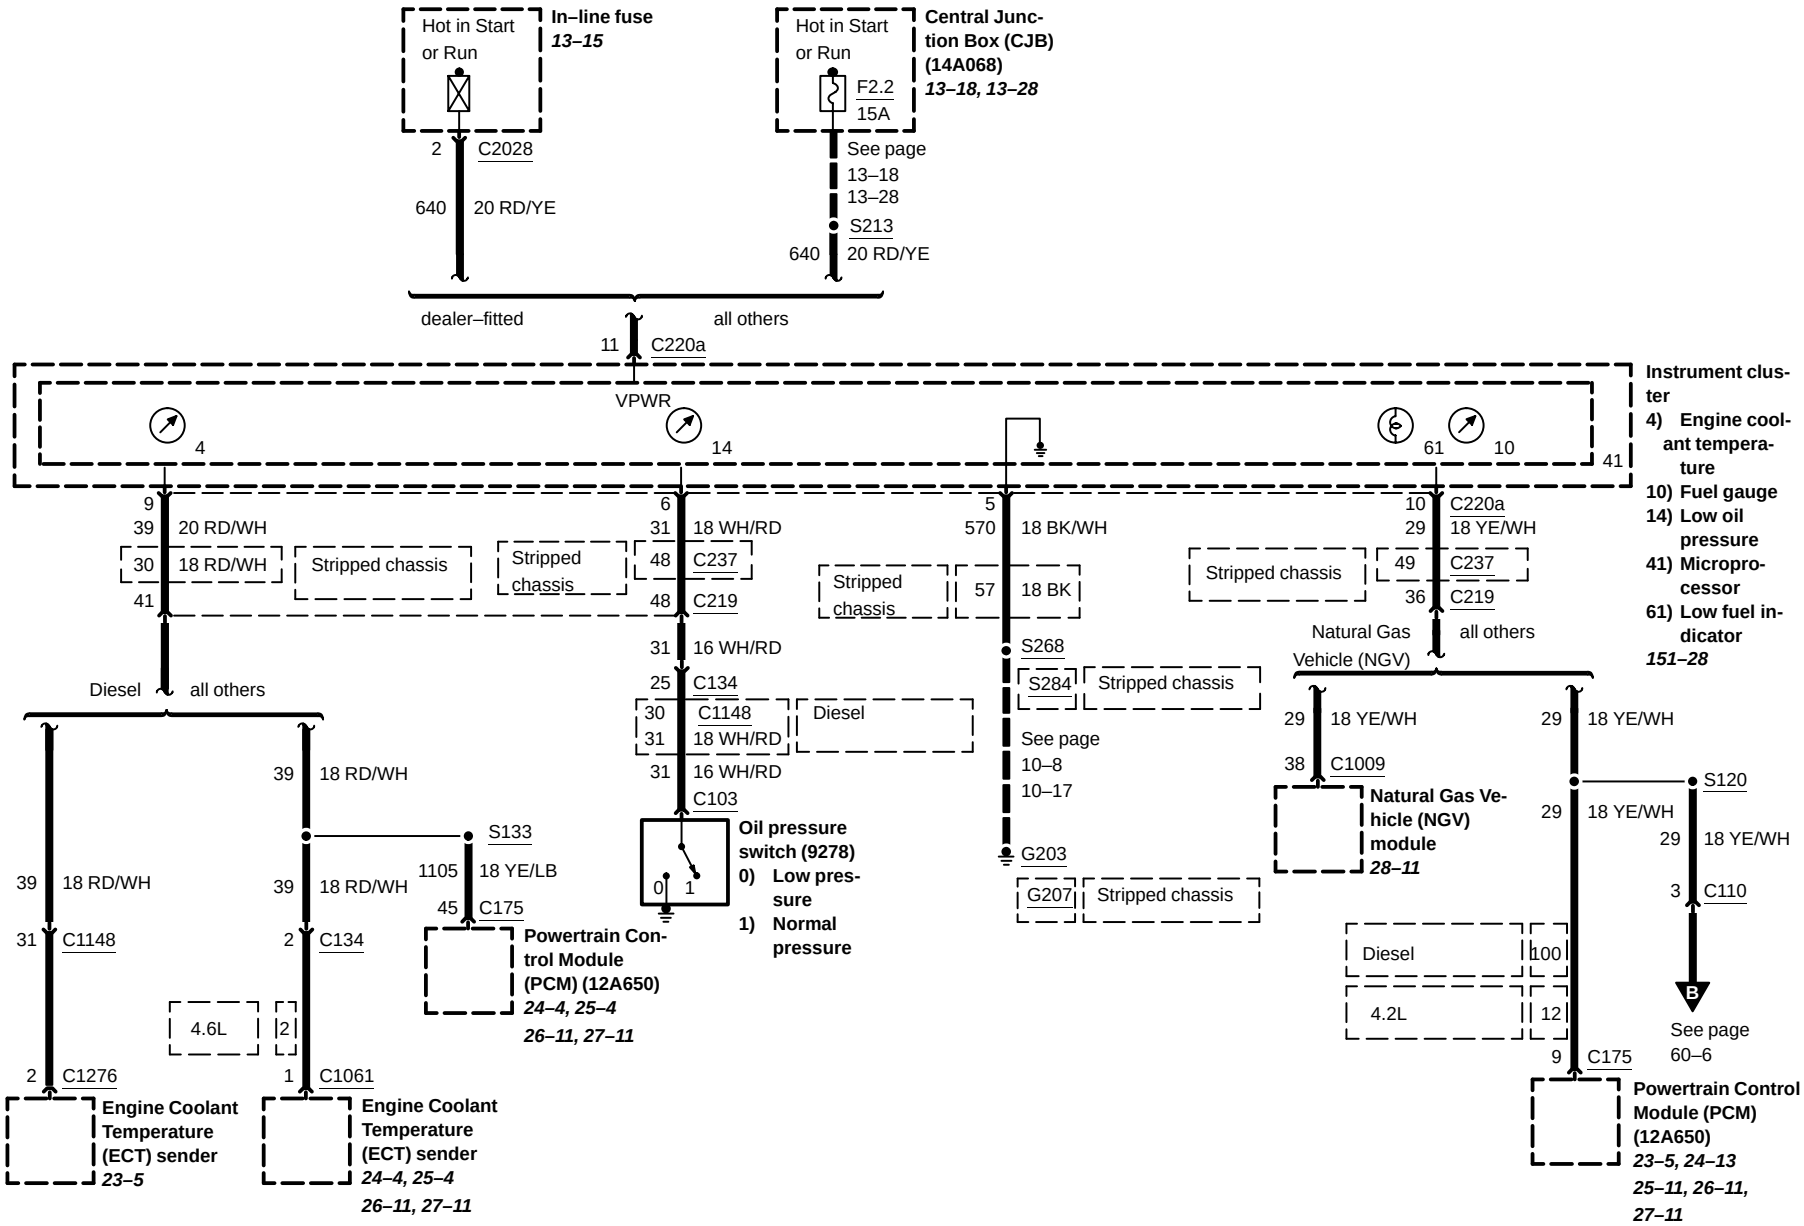
Hot in Start or Run
In–line fuse 13–15
Hot in Start or Run
F2.2 15A
Central Junction Box (CJB) (14A068) 13–18, 13–28
2 C2028
640 20 RD/YE
See page 13–18 13–28
S213
640 20 RD/YE
dealer–fitted
all others
11 C220a
VPWR
Instrument cluster
4) Engine coolant temperature
10) Fuel gauge
14) Low oil pressure
41) Microprocessor
61) Low fuel indicator
151–28
4
14
61
10
41
9 39 20 RD/WH
30 18 RD/WH
41
Stripped chassis
Stripped chassis
6 31 18 WH/RD
48 C237
48 C219
Stripped chassis
5 570 18 BK/WH
57 18 BK
Stripped chassis
10 C220a
29 18 YE/WH
49 C237
36 C219
Natural Gas Vehicle (NGV)
all others
Diesel
all others
31 16 WH/RD
25 C134
30 C1148
31 18 WH/RD
Diesel
31 16 WH/RD
C103
S268
S284
Stripped chassis
See page 10–8 10–17
G203
G207
Stripped chassis
29 18 YE/WH
38 C1009
Natural Gas Vehicle (NGV) module 28–11
29 18 YE/WH
S120
29 18 YE/WH
3 C110
B
See page 60–6
39 18 RD/WH
31 C1148
39 18 RD/WH
2 C134
S133
1105 18 YE/LB
45 C175
Powertrain Control Module (PCM) (12A650) 24–4, 25–4 26–11, 27–11
0 1
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure
Diesel
100
4.2L
12
9 C175
Powertrain Control Module (PCM) (12A650) 23–5, 24–13 25–11, 26–11, 27–11
4.6L
2
2 C1276
Engine Coolant Temperature (ECT) sender 23–5
1 C1061
Engine Coolant Temperature (ECT) sender 24–4, 25–4 26–11, 27–11