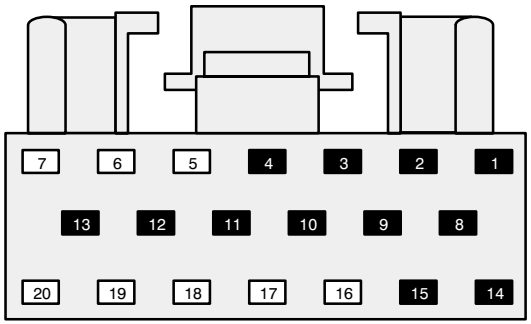

C212
RADIO

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	–	NOT USED
4	–	NOT USED
5	1068 (LG/BK)	Signal, from Rear Entertainment Module to Radio
6	832 (LB/PK)	Signal, from Rear Entertainment Module to Radio
7	833 (TN)	Signal, from Rear Entertainment Module to Radio
8	–	NOT USED
9	–	NOT USED
10	–	NOT USED
11	–	NOT USED
12	–	NOT USED
13	–	NOT USED
14	–	NOT USED
15	–	NOT USED
16	48	Shield
17	1561 (OG)	Signal, from Rear Entertainment Module to Radio
18	1562 (YE)	Signal, from Rear Entertainment Module to Radio
19	1559 (RD)	Signal, from Rear Entertainment Module to Radio
20	1560 (WH)	Signal, from Rear Entertainment Module to Radio

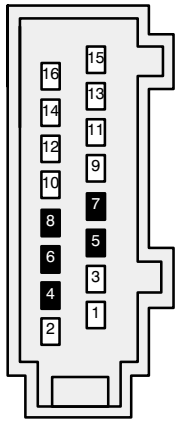

C360
FLOOR CONSOLE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1540 (DG)	Signal, from Rear Entertainment Module to Video Display
2	1541 (DB)	Signal, from Rear Entertainment Module to Video Display
3	48	Shield
4	–	NOT USED
5	–	NOT USED
6	–	NOT USED
7	–	NOT USED
8	–	NOT USED
9	57 (BK)	Ground
10	48	Shield
11	1559 (RD)	Signal, from Rear Entertainment Module to Radio
12	1560 (WH)	Signal, from Rear Entertainment Module to Radio
13	1561 (OG)	Signal, from Rear Entertainment Module to Radio
14	1562 (YE)	Signal, from Rear Entertainment Module to Radio
15	729 (RD/WH)	Power (Hot at all Times)
16	137 (YE/BK)	Power (Hot in Acc or Run)