C525 (WH)

14631

Door lock actuator, left front

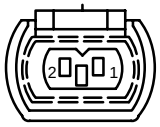

F02116

Pin	Circuit	Circuit function
1	1015 (RD/WH)	Door lock actuator, feed, Left front side +/–
2	163 (RD/OG)	Door unlock, Left front side +/–

C526 (BK)

14631

Door ajar switch, left front

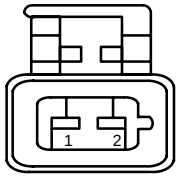

F02379

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	765 (YE/BK)	Door ajar switch, left front signal

C527 (GY)

14631

Exterior rear view mirror switch (17B676)

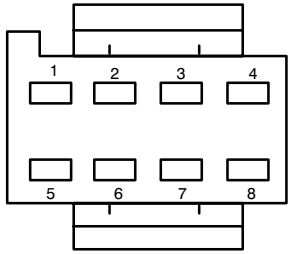

F08056

Pin	Circuit	Circuit function
1	326 (WH/VT)	Voltage supplied at all times (overload protected)
2	–	not used
3	541 (DB)	Up/Down mirror movement, Left +/–
4	540 (RD)	Right/Left mirror movement, Left +/–
5	1205 (BK)	Ground
6	542 (YE)	Mirror motor, feed +/–
7	544 (VT)	Up/Down mirror movement, Right +/–
8	543 (DG)	Right/Left mirror movement, Right +/–

C536 (GY)

14631

Subwoofer, left front



F02048

Pin	Circuit	Circuit function
1	287 (BK/WH)	Subwoofer amplifier, front, to Subwoofer, –
2	822 (BK/LG)	Subwoofer amplifier, front, to Subwoofer, +