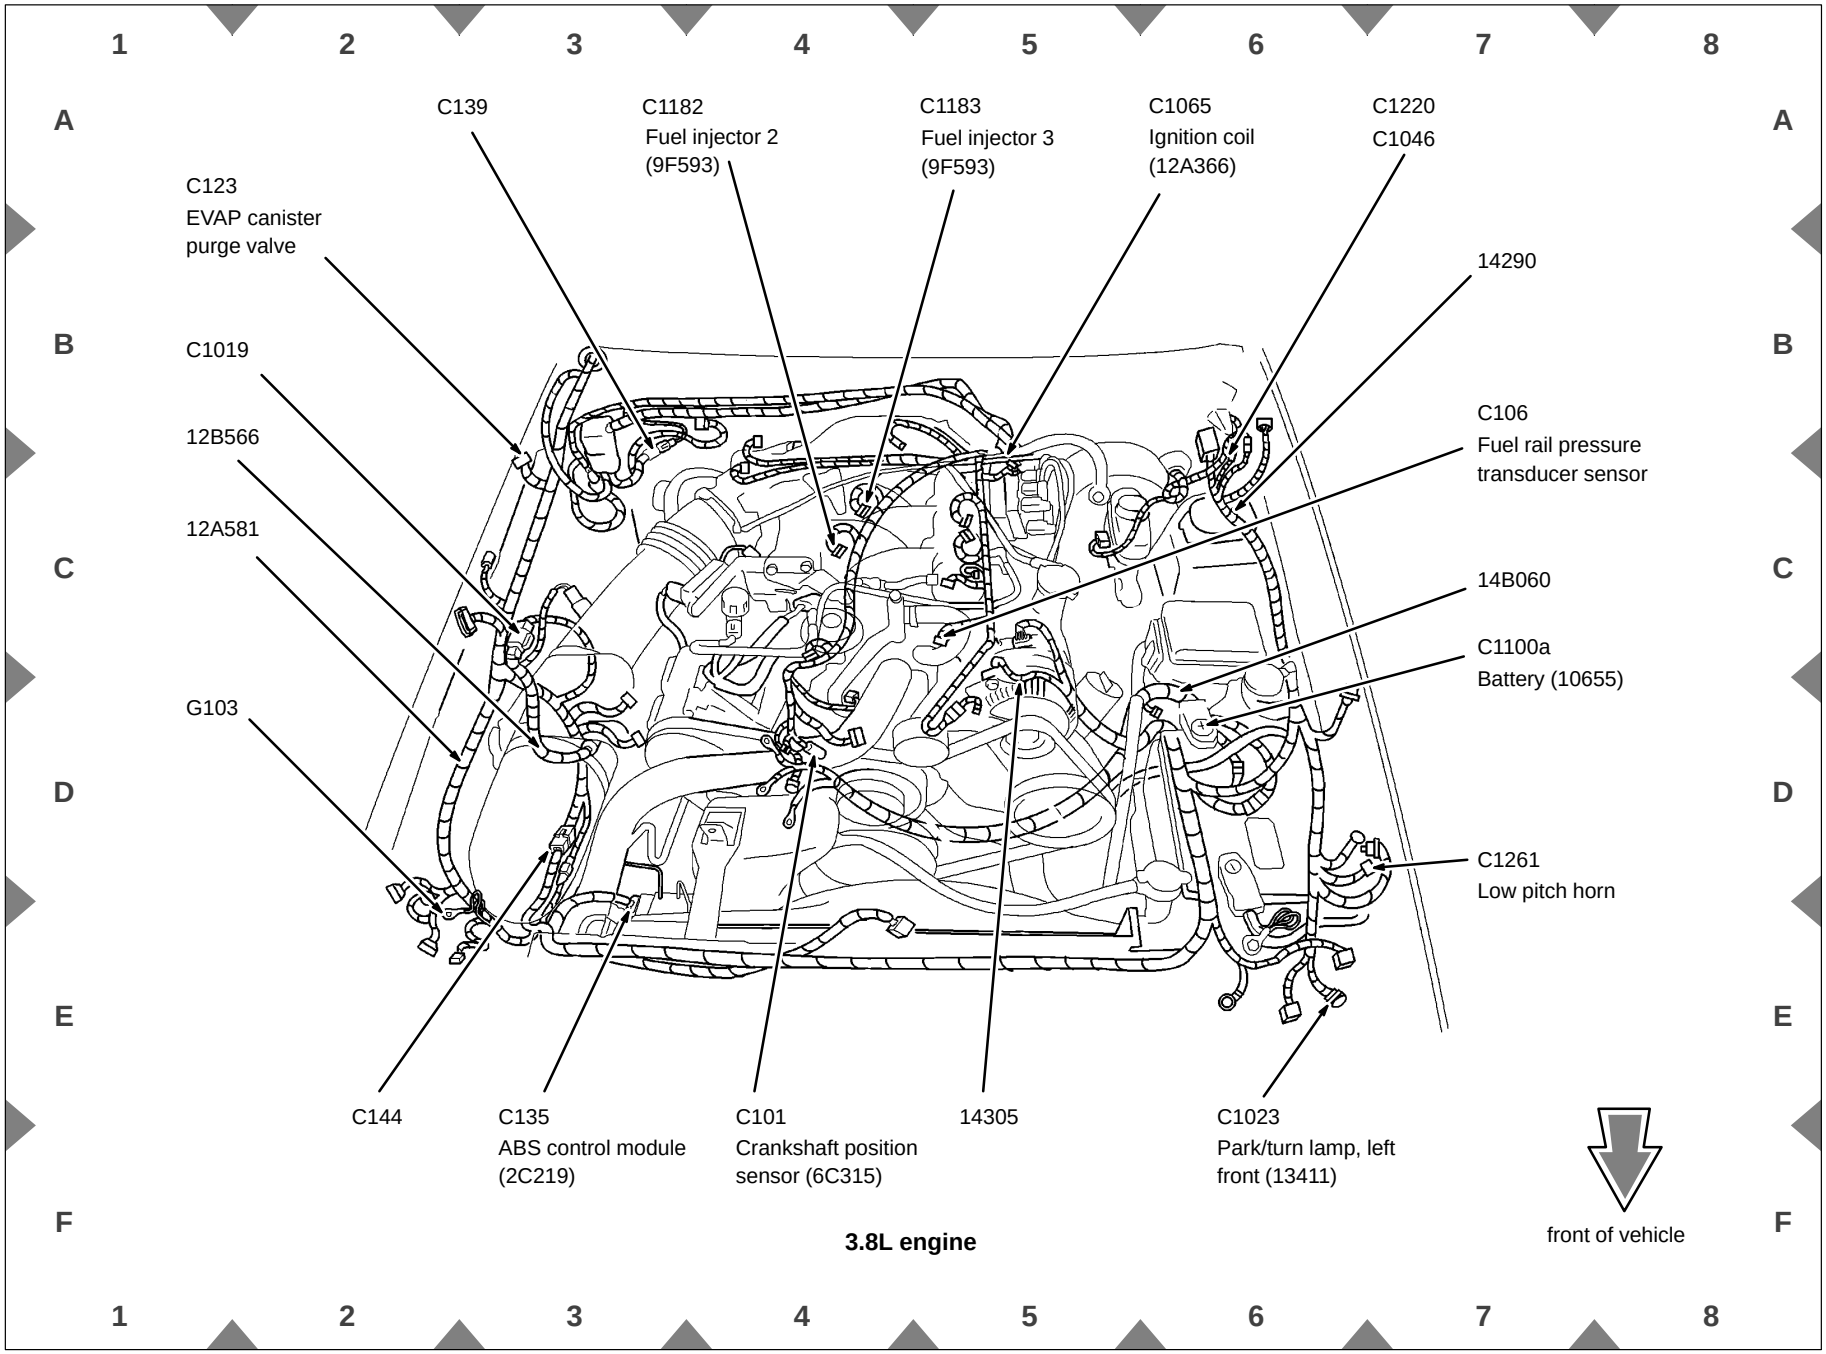
1
2
3
4
5
6
7
8
A
B
C
D
E
F
C139
C1182
Fuel injector 2
(9F593)
C1183
Fuel injector 3
(9F593)
C1065
Ignition coil
(12A366)
C1220
C1046
C123
EVAP canister
purge valve
14290
C1019
C106
Fuel rail pressure
transducer sensor
12B566
12A581
14B060
C1100a
Battery (10655)
G103
C1261
Low pitch horn
C144
C135
ABS control module
(2C219)
C101
Crankshaft position
sensor (6C315)
14305
C1023
Park/turn lamp, left
front (13411)
front of vehicle

3.8L engine